

Figure 1

1. INTRODUCTION

Solid Wire Grounding Assembly 2058729–1 is used with metal–framed photovoltaic (solar) panels and related products that require grounding for safety reasons.



All numerical values in this instruction sheet are in metric units [with U.S. customary units in brackets]. Dimensions are in millimeters [and inches]. Figures are not drawn to scale.

2. DESCRIPTION

The grounding assembly consists of a wire bolt (wire slot on one end and threaded post on the other), $^{9}/_{16}$ —in. hex nut, and $^{11}/_{32}$ —in. hex washer nut. See Figure 1.

The grounding assembly accepts solid uninsulated copper wire sizes 6 or 8 AWG.


3. INSTALLATION (See Figure 2)


- 1. Using a No. $^{11}/_{64}$ –in. drill bit, drill a (4.37 \pm .203 [.172 \pm .008]) hole in the frame.
- 2. Insert the thread post end of the wire bolt into the hole.
- 3. Thread the hex washer nut onto the threaded post end of the wire bolt. Finger–tighten.
- 4. Position the wire into the wire slot.
- 5. Thread the hex nut onto the wire slot end of the wire bolt. Finger–tighten until the wire is compressed.
- 6. Using a $^{9}/_{16}$ —in. open end wrench, hold the hex body of the wire bolt, and using an $^{11}/_{32}$ —in. socket wrench, tighten the hex washer nut to a torque of 2.82 N–m [25 in.–lbs.].
- 7. Continue holding the hex body, and using a $^{9}/_{16}$ —in. socket wrench, tighten the hex nut to a torque of 5.08 N-m [45 in.-lbs.].

4. REMOVAL

1. Using a $^{9}/_{16}$ -in. open end wrench, hold the hex body of the wire bolt, and using a $^{9}/_{16}$ -in. socket wrench, loosen the hex nut.

Installation

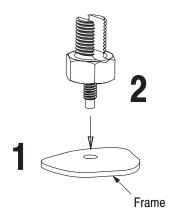

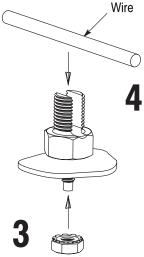

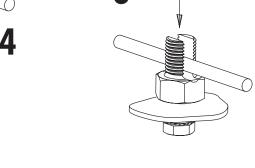


Figure 2

^{©2009} Tyco Electronics Corporation, Harrisburg, PA All International Rights Reserved

TOOLING ASSISTANCE CENTER 1-800-722-1111 PRODUCT INFORMATION 1-800-522-6752

- 2. Remove the wire from the wire slot.
- 3. Continue holding the hex body, and using an $^{11}/_{32}$ —in. socket wrench, loosen the hex washer nut. Remove the wire bolt from the frame.

5. REPLACEMENT AND REPAIR

The grounding assembly can be re—used up to 5 times after proper removals. The grounding assembly can not be repaired. DO NOT use defective or damaged product.

Order replacement grounding assemblies through your representative, or call 1–800–526–5142, or send a facsimile of your purchase order to 717–986–7605, or write to:

CUSTOMER SERVICE (038–035)
TYCO ELECTRONICS CORPORATION
PO BOX 3608
HARRISBURG PA 17105–3608

6. REVISION SUMMARY

· Initial release of instruction sheet