




NSX-BL54 EZ,K,HS,HR

NSX-BL56 EZ

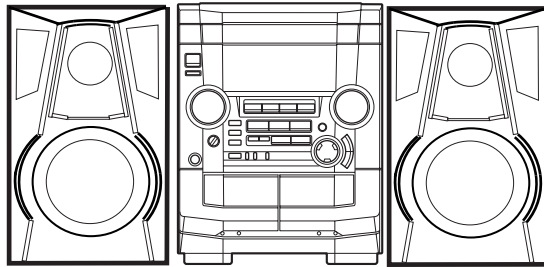

SERVICE MANUAL

COMPACT DISC
STEREO SYSTEM

BASIC TAPE MECHANISM : 2ZM-3MK2 PR4NM(HS/HR)
 BASIC TAPE MECHANISM : 6ZM-3 PR2NM(K/EZ)
 BASIC CD MECHANISM : AZG-1 YKZA3RDF(HS/HR)
 BASIC CD MECHANISM : AZG-1 YKZD8RDF(K/EZ)

| SYSTEM | CD CASSEIVER | SPEAKER | REMOTE CONTROLLER |
|----------|--------------|-----------|-------------------|
| NSX-BL54 | CX-NBL54 | SX-WNBL53 | RC-ZAS01 |
| NSX-BL56 | CX-NBL56 | SX-WNBL56 | RC-ZAS01 |

- This Service Manual is the "Revision Publishing" and replaces "Simple Manual" NSX-BL54 <EZ,K> & NSX-BL56<EZ> (S/M Code No. 09-002-429-5T1).
- If requiring information about the CD mechanism, see Service Manual of AZG-1, YKZD8RDF(S/M Code No. 09-001-335-3N6)/YKZA3RDF(S/M Code No. 09-001-335-3NC).

aiwa
S/M Code No. 09-002-429-5R1

REVISION
DATA

SPECIFICATIONS

Main unit CX-NBL54, CX-NBL56

FM tuner section

| | |
|--------------------------|---------------------------------------|
| Tuning range | 87.5 MHz to 108 MHz |
| Usable sensitivity (IHF) | 16.8 dBf <EZ, K> 13.2 dBf <HS, HR> |
| Antenna terminal | 75 ohms (unbalanced) |

AM (MW) tuner section

| | |
|--------------------|---|
| Tuning range | 531 kHz to 1602 kHz (9 kHz step) 530 kHz to 1710 kHz (10 kHz step) |
| Usable sensitivity | 350 μ V/m |
| Antenna | Loop antenna |

LW tuner section <EZ, K>

| | |
|--------------------|--------------------|
| Tuning range | 144 kHz to 290 kHz |
| Usable sensitivity | 1400 μ V/m |
| Antenna | Loop antenna |

SW tuner section <HR>

| | |
|--------------|-------------------------|
| Tuning range | 5.730 MHz to 17.900 MHz |
| Antenna | Wire antenna |

Amplifier section

Mid-high frequency amplifier

| | |
|---------------------------|--|
| Power output | Rated: 20 W + 20 W (8 ohms, T.H.D. 1 %, 1 kHz/DIN 45500) Reference : 25 W + 25 W (8 ohms, T.H.D. 10 %, 1 kHz/DIN 45324) DIN MUSIC POWER: 40 W + 40 W <EZ> |
| Total harmonic distortion | 0.1 % (10 W, 1 kHz, 8 ohms, DIN AUDIO) |

Low frequency amplifier

| | |
|---------------------------|--|
| Power output | Rated: 60 W + 60 W (6 ohms, T.H.D. 1 %, 130 Hz/DIN 45500) Reference : 75 W + 75 W (6 ohms, T.H.D. 10 %, 130 Hz/DIN 45324) DIN MUSIC POWER: 130 W + 130 W <EZ> |
| Total harmonic distortion | 0.1 % (30W, 130 Hz, 6 ohms, DIN AUDIO) |

Inputs

VIDEO/AUX: 500 mV

Outputs

MIC: 1.0 mV (10 k ohms) <HS, HR>
SPEAKERS HIGH FREQ:
accept speakers of 8 ohms or more
SPEAKERS LOW FREQ:
accept speakers of 6 ohms or more
SURROUND SPEAKERS:
accept speakers of 8 ohms to 16
ohms
PHONES (stereo jack): accepts
headphones of 32 ohms or more

Cassette deck section

| | |
|--------------------|---|
| Track format | 4 tracks, 2 channels stereo |
| Frequency response | 50 Hz – 15000 Hz |
| Recording system | AC bias |
| Heads | Deck 1: Playback head x 1 Deck 2: Recording/playback head x 1, erase head x 1 |

Compact disc player section

| | |
|-----------------------|---|
| Laser | Semiconductor laser ($\lambda = 780$ nm) |
| D-A converter | 1 bit dual |
| Signal-to-noise ratio | 85 dB (1 kHz, 0 dB) |
| Harmonic distortion | 0.05 % (1 kHz, 0 dB) |
| Wow and flutter | Unmeasurable |

General

| | |
|--------------------|--|
| Power requirements | 220 V AC, 60 Hz <HS> 230 V AC, 50 Hz <EZ, K> 120 V/220-230 V/240 V AC switchable, 50/60 Hz <HR> |
| Power consumption | 150 W |

Power consumption in standby mode

If the power-economizing mode is
ECO OFF: 20 WIf the power-economizing mode is
ECO ON or ECO AUTO: 0.9 WDimensions of main unit
(W x H x D)

260 x 326 x 345 mm

Weight of main unit

9.0 kg

Speaker system SX-WNBL53, SX-WNBL56

Speaker system 3 way, Built-in subwoofer (magnetic
shielded type)

Speaker units

Subwoofer: 160 mm cone type

Full range: 100 mm cone type

Super tweeter: 20 mm ceramic type

6 ohms/8 ohms

Impedance

Sensitivity

87 dB/W/m

Dimensions (W x H x D)

230 x 324 x 282 mm

Weight

4.8 kg

- Design and specifications are subject to change without notice.
- The word "BBE" and the "BBE symbol" are trademarks of BBE Sound, Inc.
- Under license from BBE Sound, Inc.

ACCESSORIES LIST

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".


| REF. NO | PART NO. | KANRI NO. | DESCRIPTION | REF. NO | PART NO. | KANRI NO. | DESCRIPTION |
|---------|----------------|--------------------------------|-------------|---------|----------------|-----------|-------------------------------|
| 1 | 8A-NFJ-905-010 | IB, K (E) M <K> | | 6 | 87-A91-017-010 | | PLUG, CONVERSION JT-0476 <HR> |
| 1 | 8A-NFJ-906-010 | IB, EZ (9L) M 54 <4EZ> | | 6 | 87-099-811-010 | | PLUG, ADPTR CONV (K) <K> |
| 1 | 8A-NFJ-916-010 | IB, EZ (9L) M 56 RDS <6EZ> | | 7 | 87-B30-274-010 | | BAT, R6P ATC <HS> |
| 1 | 8A-NFJ-901-010 | IB, H (ECA) M <HR> | | | | | |
| 2 | 8Z-NF8-702-010 | RC UNIT, RC-ZAS01 | | | | | |
| 3 | 87-006-268-010 | ANT, LOOP AM <EXCEPT HR> | | | | | |
| 3 | 87-006-269-010 | ANT, LOOP AM <HR> | | | | | |
| 4 | 87-A90-118-010 | ANT, WIRE FM (Z) <K, 4EZ, 6EZ> | | | | | |
| 4 | 87-043-115-010 | FEEDER-ANT, FM <HS, HR> | | | | | |
| 5 | 87-A90-119-010 | ANT, WIRE SW (5M) <HR> | | | | | |

PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs laser. Therefore, be sure to follow carefully the instructions below when servicing.

WARNING!

WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION. BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.

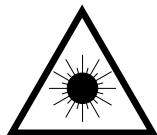

- Caution: Invisible laser radiation when open and interlocks defeated avoid exposure to beam.
- Advarsel: Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

VAROITUS!

Laiteen Käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyttäjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.

VARNING!

Om apparaten används på annat sätt än vad som specificeras i denna bruksanvisning, kan användaren utsättas för osynlig laserstråling, som överskrider gränsen för laserklass 1.

Precaution to replace Optical block

Body or clothes electrostatic potential could ruin laser diode in the optical block. Be sure ground body and workbench, and use care the clothes do not touch the diode.

- 1) After the connection, remove solder shown in the figure below.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

ATTENTION


L'utilisation de commandes, réglages ou procédures autres que ceux spécifiés peut entraîner une dangereuse exposition aux radiations.

ADVARSEL!


Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

This Compact Disc player is classified as a CLASS 1 LASER product.


The CLASS 1 LASER PRODUCT label is located on the rear exterior.

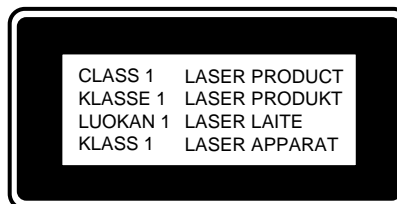

ZA3/ZA4 MODEL(KSS-213F)

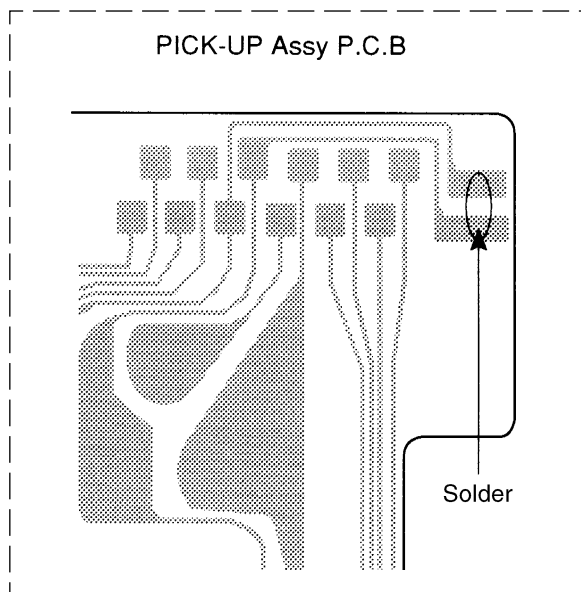

ZA8/ZD8 MODEL

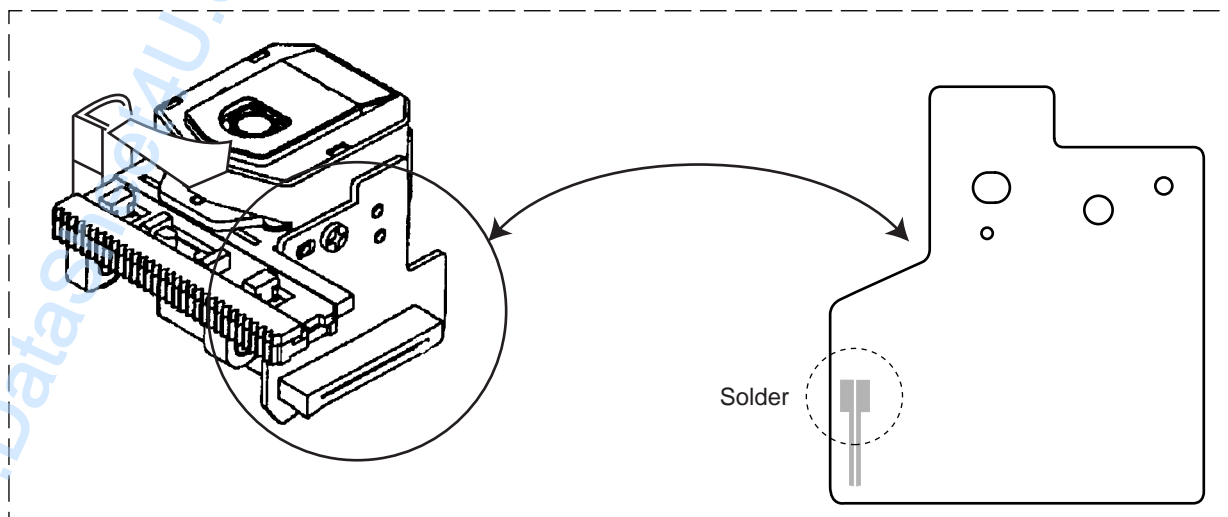

NOTE ON BEFORE STARTING REPAIR


1. Forced discharge of electrolytic capacitor of power supply block

When repair is going to be attempted in the set that uses relay circuit in the power supply block, electric potential is kept charged across the electrolytic capacitors (C101, 102) even though AC power cord is removed. If repair is attempted in this condition, secondary defect can occur.

In order to prevent the secondary trouble, perform the following measures before starting repair work.

Discharge procedure

- ① Remove the AC power cord.
- ② Connect a discharging resistor at an end of lead wire that has clips at both ends. Connect the other end of the lead wire to metal chassis.
- ③ Contact the other end of the discharging resistor to the positive (+) side (+VH) of C101. (For two seconds)
- ④ Contact the same end of the discharging resistor as step 3 to the negative (-) side (-VH) of C102 in the same way. (For two seconds)
- ⑤ Check that voltage across C101 and C102 has decreased to 1 V or less using a multimeter or an oscilloscope.

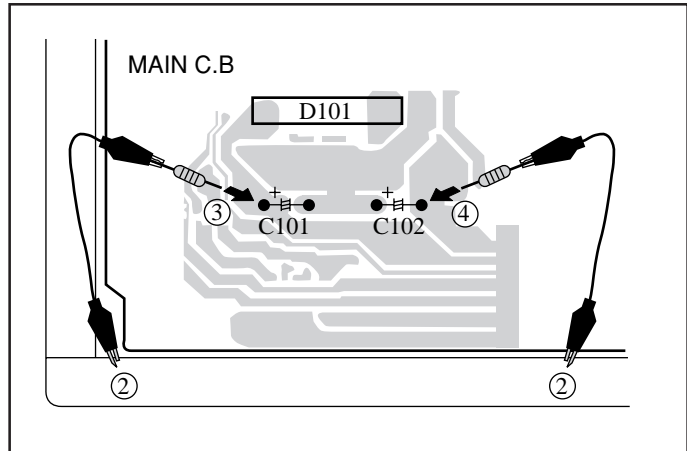

Select a discharging resistor referring to the following table.

| Charging voltage (V) (C101, 102) | Discharging resistor (Ω) | Rated power (W) | Parts number |
|-------------------------------------|-----------------------------------|-----------------|----------------|
| 25-48 | 100 | 3 | 87-A00-247-090 |
| 49-140 | 220 | 5 | 87-A00-232-090 |

Note: The reference numbers (C101, C102) of the electrolytic capacitors can change depending on the models. Be sure to check the reference numbers of the charging capacitors on schematic diagram before starting the discharging work.

2. Check items before exchanging the MICROCOMPUTER

Be sure to check the following items before exchanging the MICROCOMPUTER. Exchange the MICROCOMPUTER after confirming that the MICROCOMPUTER is surely defective.

2-1. Regarding the HOLD terminal of the MICROCOMPUTER

When the HOLD terminal (INPUT) of the MICROCOMPUTER is "H", the MICROCOMPUTER is judged to be operating correctly. When this terminal is "L", the main power cannot be turned on. Therefore, be sure to check the terminal voltage of the HOLD terminal before exchange.

When the MICROCOMPUTER is not defective, the HOLD terminal can also go "L" when the POWER AMPLIFIER has any abnormalities that triggers the abnormality detection circuit on the MAIN C. B. that sets the HOLD terminal to "L".

- Good or no good judgement of the MICROCOMPUTER

- ① Turn on the AC main power.
- ② Confirm that the main power is turned on and the HOLD terminal of the MICROCOMPUTER keeps the "H" level or not.
- ③ When the HOLD terminal is "L" level, the abnormality detection circuit is judged to be working correctly and the MICROCOMPUTER is judged to be good.

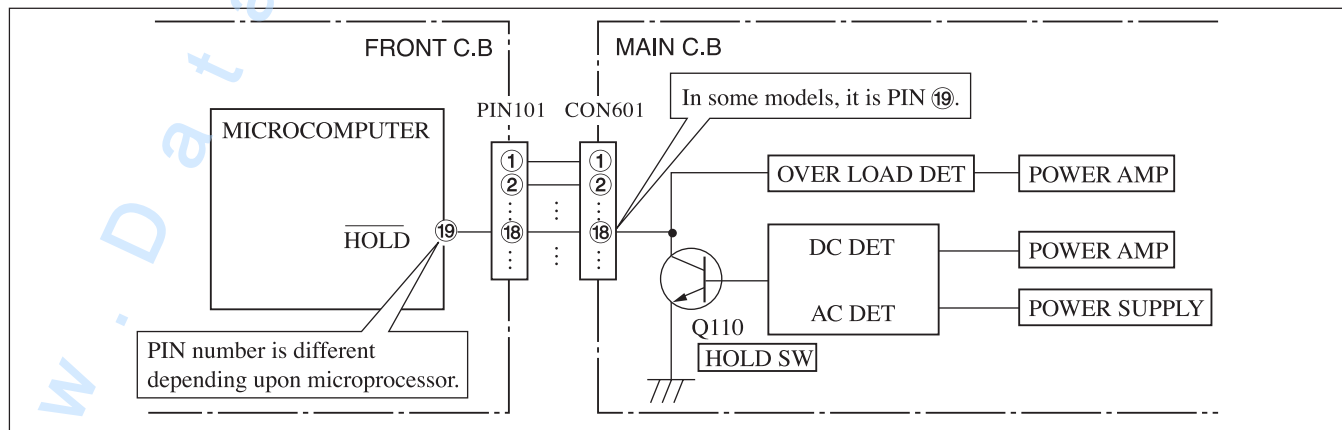


Fig-2-1

In such a case, check also if the POWER AMPLIFIER circuit or power supply circuit has any abnormalities or not.

2-2. Regarding reset

There are cases that the machine does not work correctly because the MICROCOMPUTER is not reset even though the AC power cord is re-inserted, or the software reset (pressing the STOP key + POWER key) is performed.

When the above described phenomenon occurs, it can lead to wrong judgement as if the MICROCOMPUTER is defective and to exchange the MICROCOMPUTER. In such a case, perform the forced-reset by the following procedure and check good or no good of the MICROCOMPUTER.

- ① Remove the AC power cord.

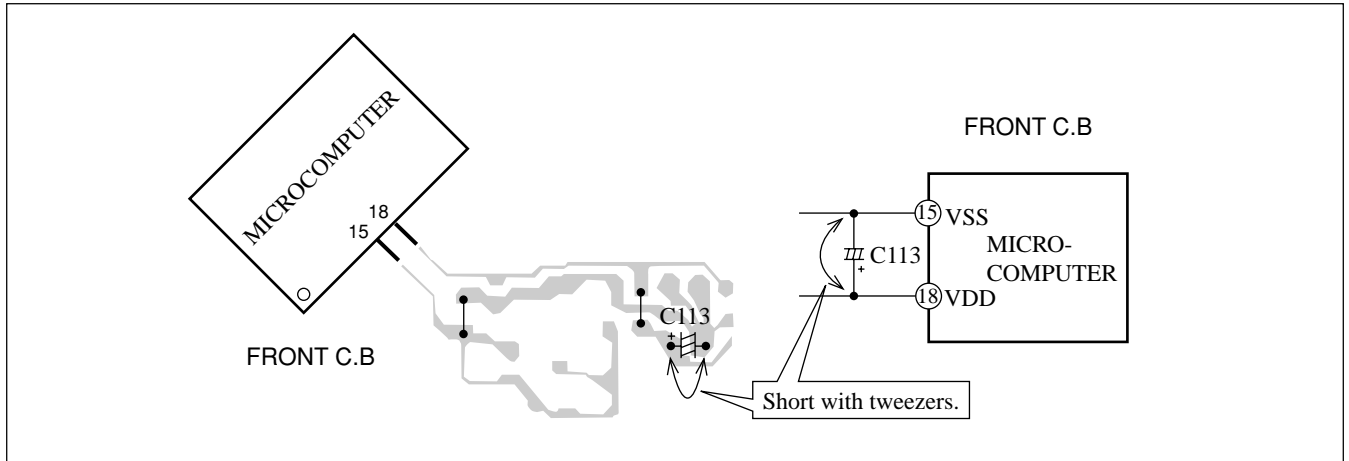


Fig-2-2

- ② Short both ends of the electrolytic capacitor C113 that is connected to VDD of the MICROCOMPUTER with tweezers.
- ③ Connect the AC power cord again. If the MICROCOMPUTER returns to the normal operation, the MICROCOMPUTER is good.

Note: The reference number or MICROCOMPUTER pin number of transistor (Q110) and electrolytic capacitor (C113) can change depending on the models. Be sure to check the reference numbers on schematic diagram before starting the discharging work.

2-3. Confirmation of soldering state of MICROCOMPUTER

Check the soldering state of the MICROCOMPUTER in addition to the above described procedures. Be sure to exchange the MICROCOMPUTER after surely confirming that the trouble is not caused by poor soldering but the MICROCOMPUTER itself.

ELECTRICAL MAIN PARTS LIST

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

| REF. NO | PART NO. | KANRI NO. | DESCRIPTION | REF. NO | PART NO. | KANRI NO. | DESCRIPTION |
|------------|----------------|-----------------------------------|-------------|---------|----------------|-----------|--------------------------------------|
| IC | | | | | | | |
| | 87-020-454-010 | IC, DN6851 | | C0009 | 87-012-368-080 | | C-CAP, S 0.1-50 Z F |
| | 87-A21-417-010 | IC, STK490-310 | | C0010 | 87-012-368-080 | | C-CAP, S 0.1-50 Z F |
| | 8A-NF8-614-110 | C-IC, LC866560W-5P89<56EZ> | | C0011 | 87-012-368-080 | | C-CAP, S 0.1-50 Z F |
| | 8A-NF8-613-010 | C-IC, LC866548V-5P87<EXCEPT 56EZ> | | C0012 | 87-012-368-080 | | C-CAP, S 0.1-50 Z F |
| | 87-A21-396-010 | IC, STK490-040 | | C0015 | 87-012-368-080 | | C-CAP, S 0.1-50 Z F |
| | 87-A21-629-010 | IC, SPS-442-1-N | | C0016 | 87-012-368-080 | | C-CAP, S 0.1-50 Z F |
| | 87-A21-419-040 | C-IC, NJM14558MD-TE2 | | C0017 | 87-012-368-080 | | C-CAP, S 0.1-50 Z F |
| | 87-A21-577-040 | C-IC, M61506FP<HR> | | C0018 | 87-012-368-080 | | C-CAP, S 0.1-50 Z F |
| | 87-A21-023-040 | C-IC, BA3835F<EXCEPT HR> | | C0019 | 87-016-520-000 | | CAP, E 3300-65 M SMG |
| | 87-070-289-040 | C-IC, BU292F | | C0020 | 87-016-520-000 | | CAP, E 3300-65 M SMG |
| | 87-A21-401-040 | C-IC, M61503FP | | C0021 | 87-016-051-000 | | CAP, E 2200-35 M SMG |
| | 87-A21-560-010 | IC, LA1844L-A | | C0022 | 87-016-051-000 | | CAP, E 2200-35 M SMG |
| | 87-A20-440-040 | C-IC, BU1920FS<56EZ> | | C0023 | 87-016-658-000 | | CAP, E 4700-35 M SMG |
| | 87-070-127-110 | IC, LC72131D | | C0024 | 87-016-658-000 | | CAP, E 4700-35 M SMG |
| | | | | C0025 | 87-010-408-080 | | CAP, E 47-50 M 11L SME |
| TRANSISTOR | | | | C0026 | 87-010-247-080 | | CAP, E 100-50 M SME |
| | 87-026-451-080 | TR, 2SA933S<HS, HR> | | C0030 | 87-010-430-080 | | CAP, E 100-63 |
| | 87-026-609-080 | TR, KTA1266GR | | C0031 | 87-010-263-080 | | CAP, E 100-10 M 11L SME |
| | 89-213-702-010 | TR, 2SB1370E | | C0032 | 87-010-197-080 | | C-CAP, S 0.01-25 K B C2012 |
| | 87-026-610-080 | TR, KTC3198GR | | C0034 | 87-010-260-080 | | CAP, E 47-25 M 11L SME |
| | 87-A30-076-080 | C-TR, 2SC3052F | | C0035 | 87-010-380-080 | | CAP, E 47-16 M 11L SME |
| | 87-A30-075-080 | C-TR, 2SA1235F | | C0036 | 87-010-381-080 | | CAP, E 330-16 M SME |
| | 87-026-245-080 | TR, DTC114ES | | C0038 | 87-010-197-080 | | C-CAP, S 0.01-25 K B C2012 |
| | 87-A30-198-080 | TR, KTC3199GR | | C0060 | 87-010-403-080 | | CAP, E 3.3-50 M 11L SME |
| | 87-A30-107-070 | C-TR, CMBT5401 | | C0061 | 87-010-260-080 | | CAP, E 47-25 M 11L SME |
| | 87-A30-106-040 | C-TR, CMBT5551 | | C0101 | 87-010-183-080 | | C-CAP, S 2700P-50 K B GRM |
| | 87-A30-087-080 | C-FET, 2SK2158 | | C0102 | 87-010-183-080 | | C-CAP, S 2700P-50 K B GRM |
| | 87-A30-074-080 | C-TR, RT1P 141C | | C0103 | 87-010-545-080 | | CAP, E 0.22-50 M 11L SME |
| | 87-A30-318-080 | TR, CSA952K | | C0104 | 87-010-545-080 | | CAP, E 0.22-50 M 11L SME |
| | 87-A30-091-080 | FET, 2SJ460 | | C0107 | 87-010-405-080 | | CAP, E 10-50 M 11L SME |
| | 87-A30-329-080 | TR, CD1585BC | | C0108 | 87-010-405-080 | | CAP, E 10-50 M 11L SME |
| | 87-A30-090-080 | FET, 2SK2541 | | C0109 | 87-010-179-080 | | C-CAP, S 1200P-50 K B GRM<HR> |
| | 87-A30-104-080 | C-TR, RT1N 441C | | C0110 | 87-010-179-080 | | C-CAP, S 1200P-50 K B GRM<HR> |
| | 87-A30-468-080 | C-TR, KRC102S-RTK | | C0111 | 87-010-405-080 | | CAP, E 10-50 M 11L SME |
| | 87-A30-484-080 | C-TR, KRA102S | | C0112 | 87-010-405-080 | | CAP, E 10-50 M 11L SME |
| | 89-333-317-880 | TR, 2SC3331 (T/U) | | C0113 | 87-010-866-080 | | CAP, E 10-63 M VX |
| | 87-A30-269-040 | C-FET, 2SJ461-T1 | | C0114 | 87-010-866-080 | | CAP, E 10-63 M VX |
| | 89-327-143-080 | C-TR, 2SC27140 | | C0119 | 87-010-197-080 | | C-CAP, S 0.01-25 K B C2012 |
| | 87-A30-489-080 | C-TR, KRA107S | | C0120 | 87-010-197-080 | | C-CAP, S 0.01-25 K B C2012 |
| | 87-A30-072-080 | C-TR, RT1P 144C<HR> | | C0123 | 87-010-176-080 | | C-CAP, S 680P-50 J SL<K, 54EZ, 56EZ> |
| | 87-A30-086-070 | C-TR, CSD1306E<EXCEPT HS> | | C0124 | 87-010-176-080 | | C-CAP, S 680P-50 J SL<K, 54EZ, 56EZ> |
| | 89-503-602-080 | C-FET, 2SK360E<EXCEPT HS> | | C0125 | 87-012-368-080 | | C-CAP, S 0.1-50 Z F |
| | 87-A30-234-080 | TR, CSC4115BC | | C0126 | 87-012-368-080 | | C-CAP, S 0.1-50 Z F |
| DIODE | | | | C0127 | 87-012-368-080 | | C-CAP, S 0.1-50 Z F |
| | 87-A40-393-090 | DIODE, 1N5402GW (F20) | | C0128 | 87-012-368-080 | | C-CAP, S 0.1-50 Z F |
| | 87-020-465-080 | DIODE, 1SS133 | | C0129 | 87-010-191-080 | | C-CAP, S 0.015-50 Z F<K, 54EZ, 56EZ> |
| | 87-A40-547-090 | DIODE, D5SBA20 | | C0130 | 87-010-191-080 | | C-CAP, S 0.015-50 Z F<K, 54EZ, 56EZ> |
| | 87-A40-455-080 | DIODE, RL203 GW | | C0131 | 87-010-197-080 | | C-CAP, S 0.01-25 K B <K, 54EZ, 56EZ> |
| | 87-A40-553-080 | DIODE, 1N4003 LES | | C0132 | 87-010-197-080 | | C-CAP, S 0.01-25 K B <K, 54EZ, 56EZ> |
| | 87-A40-776-080 | ZENER, UZ27BSD | | C0133 | 87-010-186-080 | | C-CAP, S 4700P-50 K B C2012 |
| | 87-A40-764-080 | ZENER, UZ10BSC | | C0140 | 87-010-182-080 | | C-CAP, S 2200P-50 K B C2012 |
| | 87-A40-270-080 | C-DIODE, MC2838 | | C0141 | 87-010-196-080 | | C-CAP, S 0.1-25 Z F C2012 |
| | 87-A40-313-080 | C-DIODE, MC2840 | | C0203 | 87-010-182-080 | | C-CAP, S 2200P-50 K B C2012 |
| | 87-A40-269-080 | C-DIODE, MC2836 | | C0204 | 87-010-182-080 | | C-CAP, S 2200P-50 K B C2012 |
| | 87-A40-768-080 | ZENER, UZ16BSA | | C0205 | 87-010-179-080 | | C-CAP, S 1200P-50 K B GRM<HR> |
| | 87-A40-752-080 | ZENER, UZ6.2BSC | | C0205 | 87-012-140-080 | | C-CAP, S 470P-50 J CH<EXCEPT HR> |
| | 87-A40-802-080 | ZENER, UZ5.1BSC | | C0206 | 87-010-179-080 | | C-CAP, S 1200P-50 K B GRM<HR> |
| | 87-A40-739-080 | ZENER, UZ2.7BSA | | C0206 | 87-012-140-080 | | C-CAP, S 470P-50 J CH<EXCEPT HR> |
| | 87-017-149-080 | ZENER, HZS6A2L | | C0209 | 87-010-402-080 | | CAP, E 2.2-50 M 11L SME |
| MAIN C.B | | | | C0210 | 87-010-402-080 | | CAP, E 2.2-50 M 11L SME |
| C0003 | 87-012-368-080 | C-CAP, S 0.1-50 Z F | | C0211 | 87-010-184-080 | | C-CAP, S 3300P-50 K B C2012 |
| C0004 | 87-012-368-080 | C-CAP, S 0.1-50 Z F | | C0212 | 87-010-184-080 | | C-CAP, S 3300P-50 K B C2012 |
| C0005 | 87-012-368-080 | C-CAP, S 0.1-50 Z F | | C0213 | 87-010-402-080 | | CAP, E 2.2-50 M 11L SME |
| C0006 | 87-012-368-080 | C-CAP, S 0.1-50 Z F | | C0214 | 87-010-402-080 | | CAP, E 2.2-50 M 11L SME |
| | | | | C0217 | 87-010-405-080 | | CAP, E 10-50 M 11L SME |
| | | | | C0218 | 87-010-405-080 | | CAP, E 10-50 M 11L SME |
| | | | | C0220 | 87-010-405-080 | | CAP, E 10-50 M 11L SME |
| | | | | C0223 | 87-010-190-080 | | C-CAP, S 0.01-50 Z F C2012 |
| | | | | C0224 | 87-010-190-080 | | C-CAP, S 0.01-50 Z F C2012 |
| | | | | C0228 | 87-010-405-080 | | CAP, E 10-50 M 11L SME |


| REF. NO | PART NO. | KANRI NO. | DESCRIPTION | REF. NO | PART NO. | KANRI NO. | DESCRIPTION |
|---------|----------------|-----------|-----------------------------------|---------|----------------|-----------|------------------------------------|
| C0229 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012 | C0612 | 87-010-545-080 | | CAP,E 0.22-50 M 11L SME |
| C0230 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012 | C0613 | 87-010-545-080 | | CAP,E 0.22-50 M 11L SME |
| C0231 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012 | C0614 | 87-010-545-080 | | CAP,E 0.22-50 M 11L SME |
| C0232 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012 | C0615 | 87-010-154-080 | | C-CAP,S 10P-50 D CH GRM |
| C0233 | 87-010-190-080 | | C-CAP,S 0.01-50 Z F<K,54EZ,56EZ> | C0616 | 87-010-385-080 | | CAP,E 220-25 M SME |
| C0234 | 87-010-190-080 | | C-CAP,S 0.01-50 Z F<K,54EZ,56EZ> | C0617 | 87-010-385-080 | | CAP,E 220-25 M SME |
| C0237 | 87-010-322-080 | | C-CAP,S 100P-50 J CH<K,54EZ,56EZ> | C0618 | 87-010-405-080 | | CAP,E 10-50 M 11L SME |
| C0238 | 87-010-322-080 | | C-CAP,S 100P-50 J CH<K,54EZ,56EZ> | C0620 | 87-010-263-080 | | CAP,E 100-10 M 11L SME |
| C0239 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012 | C0630 | 87-016-669-080 | | C-CAP,S 0.1-25 K B |
| C0270 | 87-010-197-080 | | C-CAP,S 0.01-25 K B <K,54EZ,56EZ> | C0631 | 87-010-185-080 | | C-CAP,S 3900P-50 K B |
| C0301 | 87-010-178-080 | | C-CAP,S 1000P-50 K B C2012 | C0632 | 87-010-185-080 | | C-CAP,S 3900P-50 K B |
| C0302 | 87-010-178-080 | | C-CAP,S 1000P-50 K B C2012 | C0633 | 87-016-369-080 | | C-CAP,S 0.033-25 K B GRM |
| C0303 | 87-010-178-080 | | C-CAP,S 1000P-50 K B C2012 | C0634 | 87-016-369-080 | | C-CAP,S 0.033-25 K B GRM |
| C0304 | 87-010-178-080 | | C-CAP,S 1000P-50 K B C2012 | C0661 | 87-010-178-080 | | C-CAP,S 1000P-50 K B<HS,HR> |
| C0307 | 87-010-263-080 | | CAP,E 100-10 M 11L SME | C0661 | 87-012-157-080 | | C-CAP,S 330P-50 J CH<K,54EZ,56EZ> |
| C0308 | 87-010-263-080 | | CAP,E 100-10 M 11L SME | C0662 | 87-010-178-080 | | C-CAP,S 1000P-50 K B<HS,HR> |
| C0309 | 87-010-318-080 | | C-CAP,S 47P-50 J CH GRM | C0662 | 87-012-157-080 | | C-CAP,S 330P-50 J CH<K,54EZ,56EZ> |
| C0310 | 87-010-318-080 | | C-CAP,S 47P-50 J CH GRM | C0669 | 87-010-180-080 | | C-CAP,S 1500P-50 K B<K,54EZ,56EZ> |
| C0313 | 87-010-188-080 | | C-CAP,S 6800P-50 K B C2012 | C0670 | 87-010-180-080 | | C-CAP,S 1500P-50 K B<K,54EZ,56EZ> |
| C0314 | 87-010-188-080 | | C-CAP,S 6800P-50 K B C2012 | C0671 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012<HS,HR> |
| C0315 | 87-010-263-080 | | CAP,E 100-10 M 11L SME | C0672 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012<HS,HR> |
| C0317 | 87-010-546-080 | | CAP,E 0.33-50 M 11L SME | C0673 | 87-010-182-080 | | C-CAP,S 2200P-50 K B<HS,HR> |
| C0318 | 87-010-546-080 | | CAP,E 0.33-50 M 11L SME | C0677 | 87-010-197-080 | | C-CAP,S 0.01-25 K B C2012 |
| C0326 | 87-010-198-080 | | C-CAP,S 0.022-25 K B C2012 | C0771 | 87-010-263-080 | | CAP,E 100-10 M 11L SME |
| C0327 | 87-012-368-080 | | C-CAP,S 0.1-50 Z F | C0772 | 87-010-197-080 | | C-CAP,S 0.01-25 K B C2012 |
| C0360 | 87-010-401-080 | | CAP,E 1-50 M 11L SME | C0779 | 87-010-186-080 | | C-CAP,S 4700P-50 K B<K,54EZ,56EZ> |
| C0365 | 87-010-197-080 | | C-CAP,S 0.01-25 K B<K,54EZ,56EZ> | C0780 | 87-010-186-080 | | C-CAP,S 4700P-50 K B<K,54EZ,56EZ> |
| C0399 | 87-012-140-080 | | C-CAP,S 470P-50 J CH | C0782 | 87-010-197-080 | | C-CAP,S 0.01-25 K B C2012 |
| C0401 | 87-010-544-080 | | CAP,E 0.1-50 M 11L SME | C0783 | 87-010-197-080 | | C-CAP,S 0.01-25 K B C2012 |
| C0402 | 87-010-544-080 | | CAP,E 0.1-50 M 11L SME | C0784 | 87-010-197-080 | | C-CAP,S 0.01-25 K B C2012 |
| C0403 | 87-010-321-080 | | C-CAP,S 82P-50 J CH | C0785 | 87-010-197-080 | | C-CAP,S 0.01-25 K B C2012 |
| C0404 | 87-010-321-080 | | C-CAP,S 82P-50 J CH | C0786 | 87-010-197-080 | | C-CAP,S 0.01-25 K B C2012 |
| C0405 | 87-010-197-080 | | C-CAP,S 0.01-25 K B C2012 | C0788 | 87-010-149-080 | | C-CAP,S 5P-50 C CH GRM |
| C0406 | 87-010-197-080 | | C-CAP,S 0.01-25 K B C2012 | C0789 | 87-A10-801-080 | | C-CAP,S 0.022-16 J B CM<HR> |
| C0407 | 87-010-197-080 | | C-CAP,S 0.01-25 K B C2012 | C0789 | 87-A11-532-080 | | C-CAP,S 0.022-50 J B<EXCEPT HR> |
| C0408 | 87-010-197-080 | | C-CAP,S 0.01-25 K B C2012 | C0790 | 87-A10-801-080 | | C-CAP,S 0.022-16 J B CM<HR> |
| C0409 | 87-010-182-080 | | C-CAP,S 2200P-50 K B C2012 | C0790 | 87-A11-532-080 | | C-CAP,S 0.022-50 J B<EXCEPT HR> |
| C0410 | 87-010-182-080 | | C-CAP,S 2200P-50 K B C2012 | C0791 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012 |
| C0411 | 87-010-405-080 | | CAP,E 10-50 M 11L SME | C0792 | 87-010-197-080 | | C-CAP,S 0.01-25 K B C2012 |
| C0412 | 87-010-405-080 | | CAP,E 10-50 M 11L SME | C0793 | 87-010-404-080 | | CAP,E 4.7-50 M 11L SME |
| C0452 | 87-010-382-080 | | CAP,E 22-25 M 11L SME | C0794 | 87-012-140-080 | | C-CAP,S 470P-50 J CH<K,54EZ> |
| C0453 | 87-010-183-080 | | C-CAP,S 2700P-50 K B GRM | C0794 | 87-012-155-080 | | C-CAP,S 180P-50 J CH GRM<56EZ> |
| C0454 | 87-010-183-080 | | C-CAP,S 2700P-50 K B GRM | C0795 | 87-010-197-080 | | C-CAP,S 0.01-25 K B C2012 |
| C0455 | 87-010-183-080 | | C-CAP,S 2700P-50 K B GRM | C0796 | 87-010-197-080 | | C-CAP,S 0.01-25 K B C2012 |
| C0456 | 87-010-197-080 | | C-CAP,S 0.01-25 K B C2012 | C0797 | 87-010-405-080 | | CAP,E 10-50 M 11L SME |
| C0458 | 87-010-178-080 | | C-CAP,S 1000P-50 K B C2012 | C0798 | 87-010-197-080 | | C-CAP,S 0.01-25 K B C2012 |
| C0459 | 87-010-175-080 | | C-CAP,S 560P-50 J SL | C0799 | 87-010-407-080 | | CAP,E 33-50 M 11L SME |
| C0460 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012 | C0800 | 87-012-369-080 | | C-CAP,S 0.047-50 Z F |
| C0461 | 87-012-158-080 | | C-CAP,S 390P-50 J CH GRM | C0801 | 87-010-403-080 | | CAP,E 3.3-50 M 11L SME |
| C0462 | 87-012-158-080 | | C-CAP,S 390P-50 J CH GRM | C0802 | 87-010-194-080 | | C-CAP,S 0.047-25 Z F |
| C0507 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012 | C0803 | 87-010-198-080 | | C-CAP,S 0.022-25 K B C2012 |
| C0508 | 87-010-178-080 | | C-CAP,S 1000P-50 K B C2012 | C0804 | 87-010-263-080 | | CAP,E 100-10 M 11L SME |
| C0509 | 87-A10-300-080 | | CAP,M 0.027-50 J | C0807 | 87-010-400-080 | | CAP,E 0.47-50 M 11L SME |
| C0510 | 87-A10-300-080 | | CAP,M 0.027-50 J | C0808 | 87-010-401-080 | | CAP,E 1-50 M 11L SME |
| C0515 | 87-A10-300-080 | | CAP,M 0.027-50 J | C0809 | 87-010-401-080 | | CAP,E 1-50 M 11L SME |
| C0516 | 87-A10-300-080 | | CAP,M 0.027-50 J | C0810 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012 |
| C0518 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012 | C0814 | 87-010-197-080 | | C-CAP,S 0.01-25 K B C2012 |
| C0519 | 87-010-401-080 | | CAP,E 1-50 M 11L SME | C0815 | 87-010-400-080 | | CAP,E 0.47-50 M 11L SME |
| C0520 | 87-010-401-080 | | CAP,E 1-50 M 11L SME | C0816 | 87-010-400-080 | | CAP,E 0.47-50 M 11L SME |
| C0521 | 87-010-546-080 | | CAP,E 0.33-50 M 11L SME | C0818 | 87-010-180-080 | | C-CAP,S 1500P-50 K B<K,54EZ,56EZ> |
| C0522 | 87-010-546-080 | | CAP,E 0.33-50 M 11L SME | C0821 | 87-010-405-080 | | CAP,E 10-50 M 11L SME |
| C0523 | 87-010-545-080 | | CAP,E 0.22-50 M 11L SME | C0823 | 87-010-177-080 | | C-CAP,S 820P-50 J SL<HS,HR> |
| C0524 | 87-010-545-080 | | CAP,E 0.22-50 M 11L SME | C0823 | 87-012-349-080 | | C-CAP,S 1000P-50 J CH<K,54EZ,56EZ> |
| C0525 | 87-010-545-080 | | CAP,E 0.22-50 M 11L SME | C0824 | 87-010-404-080 | | CAP,E 4.7-50 M 11L SME |
| C0526 | 87-010-545-080 | | CAP,E 0.22-50 M 11L SME | C0825 | 87-010-596-080 | | C-CAP,S 0.047-16 K R C2012 |
| C0605 | 87-010-179-080 | | C-CAP,S 1200P-50 K B GRM | C0831 | 87-010-406-080 | | CAP,E 22-50 M 11L SME<K,54EZ,56EZ> |
| C0606 | 87-010-179-080 | | C-CAP,S 1200P-50 K B GRM | C0842 | 87-010-197-080 | | C-CAP,S 0.01-25 K B C2012 |
| C0609 | 87-010-213-080 | | C-CAP,S 0.015-25 K B GRM | C0844 | 87-010-197-080 | | C-CAP,S 0.01-25 K B C2012 |
| C0610 | 87-010-213-080 | | C-CAP,S 0.015-25 K B GRM | C0850 | 87-010-260-080 | | CAP,E 47-25 M 11L SME |
| C0611 | 87-010-545-080 | | CAP,E 0.22-50 M 11L SME | C0851 | 87-010-197-080 | | C-CAP,S 0.01-25 K B C2012 |

| REF. NO | PART NO. | KANRI NO. | DESCRIPTION | REF. NO | PART NO. | KANRI NO. | DESCRIPTION |
|---------|----------------|---------------|----------------------------|-----------|----------------|-----------|--------------------------------------|
| C0852 | 87-010-197-080 | C-CAP,S | 0.01-25 K B C2012 | J0203 | 87-A60-238-010 | | TERMINAL,SP 4P (MSC) |
| C0853 | 87-010-197-080 | C-CAP,S | 0.01-25 K B C2012 | J0204 | 87-A61-153-010 | | JACK,PIN 4P R/W(BL) (SEPA) KM |
| C0858 | 87-010-196-080 | C-CAP,S | 0.1-25 Z F C2012 | J0602 | 87-A60-881-010 | | JACK,PIN 2P MSP 242V05 PBSN |
| C0859 | 87-010-196-080 | C-CAP,S | 0.1-25 Z F C2012 | J0831 | 87-A60-202-010 | | TERMINAL,ANT 4P <HS,HR> |
| C0860 | 87-010-197-080 | C-CAP,S | 0.01-25 K B C2012 | J0832 | 87-A60-403-010 | | TERMINAL,ANT PAL 2P <K,54EZ,56EZ> |
| C0869 | 87-010-197-080 | C-CAP,S | 0.01-25 K B C2012<56EZ> | J0940 | 87-A60-633-010 | | CONN,2P H 2.5MM JMT<HR> |
| C0870 | 87-018-131-080 | CAP,TC U | 1000P-50 K B UP050<56EZ> | L0101 | 87-003-383-010 | | COIL,1UH K<EXCEPT HR> |
| C0871 | 87-012-156-080 | C-CAP,S | 220P-50 J CH GRM<56EZ> | L0101 | 87-A50-610-010 | | COIL,1UH K(MDEC) <HR> |
| C0872 | 87-012-156-080 | C-CAP,S | 220P-50 J CH GRM<56EZ> | L0102 | 87-003-383-010 | | COIL,1UH K<EXCEPT HR> |
| C0873 | 87-012-140-080 | C-CAP,S | 470P-50 J CH<56EZ> | L0102 | 87-A50-610-010 | | COIL,1UH K(MDEC) <HR> |
| C0874 | 87-010-405-080 | CAP,E | 10-50 M 11L SME<56EZ> | L0201 | 87-003-383-010 | | COIL,1UH K<EXCEPT HR> |
| C0875 | 87-010-196-080 | C-CAP,S | 0.1-25 Z F C2012<56EZ> | L0201 | 87-A50-610-010 | | COIL,1UH K(MDEC) <HR> |
| C0876 | 87-010-405-080 | CAP,E | 10-50 M 11L SME<56EZ> | L0202 | 87-003-383-010 | | COIL,1UH K<EXCEPT HR> |
| C0877 | 87-010-197-080 | C-CAP,S | 0.01-25 K B C2012<56EZ> | L0202 | 87-A50-610-010 | | COIL,1UH K(MDEC) <HR> |
| C0878 | 87-010-316-080 | C-CAP,S | 33P-50 J CH GRM<56EZ> | L0451 | 87-007-342-010 | | COIL,OSC 85KHZ BIAS |
| C0879 | 87-010-314-080 | C-CAP,S | 22P-50 J CH GRM<56EZ> | L0801 | 87-A50-608-010 | | COIL,FM DET-N(TOK) |
| C0940 | 87-010-197-080 | C-CAP,S | 0.01-25 K B<EXCEPT HS> | L0802 | 87-A91-551-010 | | FLTR,PCFJZH-450 L<EXCEPT HR> |
| C0941 | 87-010-314-080 | C-CAP,S | 22P-50 J CH GRM<HR> | L0802 | 87-A91-552-010 | | FLTR,CFMT-450AL <HR> |
| C0942 | 87-010-149-080 | C-CAP,S | 5P-50 C CH<K,54EZ,56EZ> | L0811 | 87-005-847-080 | | COIL,2.2UH K CECS |
| C0943 | 87-010-197-080 | C-CAP,S | 0.01-25 K B C2012<HR> | L0832 | 87-005-847-080 | | COIL,2.2UH K CECS |
| C0945 | 87-010-197-080 | C-CAP,S | 0.01-25 K B C2012<HR> | L0861 | 87-005-847-080 | | COIL,2.2UH K CECS<56EZ> |
| C0946 | 87-010-971-080 | C-CAP,S | 4700P-50 J B<HR> | L0941 | 87-A50-020-010 | | COIL,ANT LW 252KHZ<K,54EZ,56EZ> |
| C0947 | 87-010-197-080 | C-CAP,S | 0.01-25 K B<EXCEPT HS> | L0941 | 87-A50-022-010 | | COIL,ANT SW 7.96MHZ<HR> |
| C0948 | 87-010-148-080 | C-CAP,S | 4P-50 C CH GRM<HR> | L0942 | 87-A50-019-010 | | COIL,OSC LW 856KHZ<K,54EZ,56EZ> |
| C0948 | 87-012-140-080 | C-CAP,S | 470P-50 J CH<K,54EZ,56EZ> | L0942 | 87-A50-550-010 | | COIL,OSC SW-2N(COI) <HR> |
| C0952 | 87-010-197-080 | C-CAP,S | 0.01-25 K B<EXCEPT HS> | L0943 | 87-A50-522-080 | | COIL,1MH K CEC<HR> |
| C0953 | 87-010-197-080 | C-CAP,S | 0.01-25 K B C2012<HR> | L0944 | 87-A50-159-010 | | COIL,10MH K C2B<HR> |
| C0954 | 87-010-400-080 | CAP,E | 0.47-50 M 11L SME<HR> | L0951 | 8A-NF8-667-010 | | COIL,AM PACK 4 (TOK)<HS> |
| C0956 | 87-010-263-080 | CAP,E | 100-10 M 11L SME<HR> | L0951 | 8A-NF8-668-010 | | COIL,AM PACK 2 (TOK) <K,54EZ,56EZ> |
| C0957 | 87-010-311-080 | C-CAP,S | 12P-50 J CH<K,54EZ,56EZ> | L0952 | 87-A50-430-010 | | COIL,ANT MW(3BSW) <HR> |
| C0958 | 87-010-197-080 | C-CAP,S | 0.01-25 K B<K,54EZ,56EZ> | L0953 | 87-A50-431-010 | | COIL,OSC MW(3BSW) <HR> |
| C0959 | 87-010-196-080 | C-CAP,S | 0.1-25 Z F C2012 | R0129 | 87-A00-257-080 | | RES,M/F 0.15-1W J |
| C0960 | 87-010-196-080 | C-CAP,S | 0.1-25 Z F<EXCEPT HR> | R0130 | 87-A00-257-080 | | RES,M/F 0.15-1W J |
| C0961 | 87-010-152-080 | C-CAP,S | 8P-50 D CH GRM<HS> | R0143 | 87-A00-439-050 | | RES,180-1/2W J RP<K,54EZ,56EZ> |
| C0962 | 87-010-401-080 | CAP,E | 1-50 M 11L SME<EXCEPT HS> | R0143 | 87-A00-440-050 | | RES,220-1/2W J RP<HS,HR> |
| C0963 | 87-015-785-080 | C-CAP, | 0.1-25 Z F C3216 | R0144 | 87-A00-439-050 | | RES,180-1/2W J RP<K,54EZ,56EZ> |
| C0964 | 87-010-854-080 | C-CAP,S | 560P-50 J CH<HR> | R0144 | 87-A00-440-050 | | RES,220-1/2W J RP<HS,HR> |
| C0971 | 87-010-381-080 | CAP,E | 330-16 M SME | R0145 | 87-A00-439-050 | | RES,180-1/2W J RP<K,54EZ,56EZ> |
| C0972 | 87-010-404-080 | CAP,E | 4.7-50 M 11L SME | R0145 | 87-A00-440-050 | | RES,220-1/2W J RP<HS,HR> |
| C0973 | 87-010-197-080 | C-CAP,S | 0.01-25 K B C2012 | R0146 | 87-A00-439-050 | | RES,180-1/2W J RP<K,54EZ,56EZ> |
| C0974 | 87-010-197-080 | C-CAP,S | 0.01-25 K B C2012 | R0146 | 87-A00-440-050 | | RES,220-1/2W J RP<HS,HR> |
| C0979 | 87-010-322-080 | C-CAP,S | 100P-50 J CH GRM | R0233 | 87-A00-258-080 | | RES,M/F 0.22-1W J |
| C0981 | 87-010-260-080 | CAP,E | 47-25 M 11L SME | R0234 | 87-A00-258-080 | | RES,M/F 0.22-1W J |
| C0982 | 87-010-196-080 | C-CAP,S | 0.1-25 Z F C2012 | R0790 | 87-010-197-080 | | C-CAP,S 0.01-25 K B C2012 |
| C0983 | 87-010-197-080 | C-CAP,S | 0.01-25 K B C2012 | R0991 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM |
| C0984 | 87-010-197-080 | C-CAP,S | 0.01-25 K B C2012 | R0993 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM |
| C0985 | 87-010-322-080 | C-CAP,S | 100P-50 J CH<K,54EZ,56EZ> | R0995 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM |
| C0987 | 87-010-197-080 | C-CAP,S | 0.01-25 K B C2012 | SFR0451 | 87-A90-432-080 | | SFR,30K H NVZ6TLTA |
| C0989 | 87-010-197-080 | C-CAP,S | 0.01-25 K B<EXCEPT HS> | SFR0452 | 87-A90-432-080 | | SFR,30K H NVZ6TLTA |
| C0991 | 87-010-312-080 | C-CAP,S | 15P-50 J CH GRM | TC0941 | 87-011-254-080 | | TRIMMER,CER 20P 4.0X4.5 ECR<HR> |
| C0992 | 87-010-312-080 | C-CAP,S | 15P-50 J CH GRM | TC0942 | 87-011-253-080 | | TRIMMER,CER 30P 4.0X4.5<K,54EZ,56EZ> |
| C0993 | 87-010-178-080 | C-CAP,S | 1000P-50 K B C2012 | TC0943 | 87-011-253-080 | | TRIMMER,CER 30P 4.0X4.5<HR> |
| C0995 | 87-010-178-080 | C-CAP,S | 1000P-50 K B C2012 | WH0001 | 87-A91-179-010 | | HLDR,WIRE 2.5-11P |
| C0997 | 87-010-196-080 | C-CAP,S | 0.1-25 Z F C2012 | X0861 | 87-A70-091-010 | | VIB,XTAL 4.332MHZ CSA-309<56EZ> |
| C0998 | 87-010-260-080 | CAP,E | 47-25 M 11L SME | X0991 | 87-A70-061-010 | | VIB,XTAL 4.500MHZ CSA-309 |
| C0999 | 87-A11-132-080 | CAP,TC U | 0.01-50 K B | | | | |
| CF0831 | 87-008-261-010 | FLTR,CF | SFE10.7MA5<HS,HR> | FRONT C.B | | | |
| CF0831 | 87-008-423-010 | FLTR,CF | SFE10.7MS3G-A<K,54EZ,56EZ> | | | | |
| CF0832 | 82-785-747-010 | CF,MS2 | GHY,R<K,54EZ,56EZ> | C0201 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM |
| CF0832 | 87-008-261-010 | FLTR,CF | SFE10.7MA5<HS,HR> | C0202 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM |
| CN0301 | 87-A60-620-010 | CONN,3P V | 2MM JMT | C0203 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM |
| CN0351 | 87-A60-625-010 | CONN,8P V | 2MM JMT | C0204 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM |
| CN0601 | 87-099-719-010 | CONN,30P H | BLK TYK-B(X) | C0205 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM |
| CN0602 | 87-A60-131-010 | CONN,6P V | FE | C0206 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM |
| CNA0001 | 8A-NF8-654-010 | CONN ASSY,11P | TID-A(480) | C0207 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM |
| D0951 | 87-A40-618-080 | VARI-CAP,SVC | 348(S/T) <HR> | C0208 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM |
| FFC0602 | 88-906-251-110 | FF-CABLE,6P | 1.25 | C0209 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM |
| FF0831 | A8-6ZA-195-130 | 6ZA-1 | YFEENM<K,54EZ,56EZ> | C0210 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM |
| FF0831 | A8-8ZA-191-030 | 8ZA-1 | YFEUNM<HS,HR> | C0211 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM |
| J0201 | 87-A60-483-010 | JACK,DIA6.3 | BLK ST W/S KM | C0251 | 87-010-405-040 | | CAP,E 10-50 M 11L SME |

| REF. NO | PART NO. | KANRI NO. | DESCRIPTION | REF. NO | PART NO. | KANRI NO. | DESCRIPTION |
|---------|----------------|-----------|---------------------------------|----------|----------------|-----------|--------------------------------|
| C0253 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012 | LED0606 | 87-A40-619-080 | | LED,SLR-56PT-TE7-W GRN |
| C0254 | 87-012-369-080 | | C-CAP,S 0.047-50 Z F | LED0607 | 87-A40-619-080 | | LED,SLR-56PT-TE7-W GRN |
| C0255 | 87-010-560-040 | | CAP,E 10-50 M 5L MA | LED0608 | 87-A40-619-080 | | LED,SLR-56PT-TE7-W GRN |
| C0256 | 87-010-405-040 | | CAP,E 10-50 M 11L SME | S0401 | 87-A90-095-080 | | SW,TACT EVQ11G04M<EXCEPT HR> |
| C0259 | 87-010-405-040 | | CAP,E 10-50 M 11L SME | S0401 | 87-A91-024-180 | | SW,TACT KSHG611BT<HR> |
| C0264 | 87-A11-148-080 | | CAP,TC U 0.1-50 Z F | S0402 | 87-A90-095-080 | | SW,TACT EVQ11G04M<EXCEPT HR> |
| C0273 | 87-010-178-080 | | C-CAP,S 1000P-50 K B C2012 | S0402 | 87-A91-024-180 | | SW,TACT KSHG611BT<HR> |
| C0274 | 87-010-178-080 | | C-CAP,S 1000P-50 K B C2012 | S0403 | 87-A90-095-080 | | SW,TACT EVQ11G04M<EXCEPT HR> |
| C0301 | 87-010-182-080 | | C-CAP,S 2200P-50 K B C2012 | S0403 | 87-A91-024-180 | | SW,TACT KSHG611BT<HR> |
| C0302 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012 | S0404 | 87-A90-095-080 | | SW,TACT EVQ11G04M<EXCEPT HR> |
| C0303 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012 | S0404 | 87-A91-024-180 | | SW,TACT KSHG611BT<HR> |
| C0312 | 87-010-498-040 | | CAP,E 10-16 M 5L SRE | S0405 | 87-A90-095-080 | | SW,TACT EVQ11G04M<EXCEPT HR> |
| C0314 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012 | S0405 | 87-A91-024-180 | | SW,TACT KSHG611BT<HR> |
| C0315 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012 | S0406 | 87-A90-095-080 | | SW,TACT EVQ11G04M<EXCEPT HR> |
| C0316 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012 | S0406 | 87-A91-024-180 | | SW,TACT KSHG611BT<HR> |
| C0321 | 87-012-393-080 | | C-CAP,S 0.22-16 K W5R CM/CB | S0407 | 87-A90-095-080 | | SW,TACT EVQ11G04M<EXCEPT HR> |
| C0322 | 87-010-400-040 | | CAP,E 0.47-50 M 11L SME | S0407 | 87-A91-024-180 | | SW,TACT KSHG611BT<HR> |
| C0325 | 87-A10-189-040 | | CAP,E 220-10 M 5L | S0408 | 87-A90-095-080 | | SW,TACT EVQ11G04M<EXCEPT HR> |
| C0326 | 87-A10-189-040 | | CAP,E 220-10 M 5L | S0408 | 87-A91-024-180 | | SW,TACT KSHG611BT<HR> |
| C0332 | 87-010-178-080 | | C-CAP,S 1000P-50 K B C2012 | S0409 | 87-A90-095-080 | | SW,TACT EVQ11G04M<EXCEPT HR> |
| C0334 | 87-010-312-080 | | C-CAP,S 15P-50 J CH GRM | S0409 | 87-A91-024-180 | | SW,TACT KSHG611BT<HR> |
| C0335 | 87-012-140-080 | | C-CAP,S 470P-50 J CH | S0410 | 87-A90-095-080 | | SW,TACT EVQ11G04M<EXCEPT HR> |
| C0336 | 87-012-155-080 | | C-CAP,S 180P-50 J CH GRM | S0410 | 87-A91-024-180 | | SW,TACT KSHG611BT<HR> |
| C0339 | 87-012-156-080 | | C-CAP,S 220P-50 J CH GRM | S0411 | 87-A90-095-080 | | SW,TACT EVQ11G04M<EXCEPT HR> |
| C0340 | 87-010-197-080 | | C-CAP,S 0.01-25 K B C2012 | S0411 | 87-A91-024-180 | | SW,TACT KSHG611BT<HR> |
| C0341 | 87-010-194-080 | | C-CAP,S 0.047-25 Z F | S0412 | 87-A90-095-080 | | SW,TACT EVQ11G04M<56EZ,HS> |
| C0351 | 87-010-981-040 | | CAP,E 22-35 M 5L SRE | S0412 | 87-A91-024-180 | | SW,TACT KSHG611BT<HR> |
| C0401 | 87-010-197-080 | | C-CAP,S 0.01-25 K B C2012 | S0413 | 87-A90-095-080 | | SW,TACT EVQ11G04M<EXCEPT HR> |
| C0451 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012 | S0413 | 87-A91-024-180 | | SW,TACT KSHG611BT<HR> |
| C0452 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012 | S0414 | 87-A90-095-080 | | SW,TACT EVQ11G04M<EXCEPT HR> |
| C0453 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012 | S0414 | 87-A91-024-180 | | SW,TACT KSHG611BT<HR> |
| C0454 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012 | S0415 | 87-A90-095-080 | | SW,TACT EVQ11G04M<EXCEPT HR> |
| C0455 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012 | S0415 | 87-A91-024-180 | | SW,TACT KSHG611BT<HR> |
| C0458 | 87-010-320-080 | | C-CAP,S 68P-50 J CH GRM<HR> | S0416 | 87-A90-095-080 | | SW,TACT EVQ11G04M<EXCEPT HR> |
| C0459 | 87-010-320-080 | | C-CAP,S 68P-50 J CH GRM<HR> | S0416 | 87-A91-024-180 | | SW,TACT KSHG611BT<HR> |
| C0502 | 87-010-186-080 | | C-CAP,S 4700P-50 K B <HS,HR> | S0417 | 87-A90-095-080 | | SW,TACT EVQ11G04M<EXCEPT HR> |
| C0503 | 87-010-112-040 | | CAP,E 100-16 M 11L SME<HS,HR> | S0417 | 87-A91-024-180 | | SW,TACT KSHG611BT<HR> |
| C0504 | 87-010-405-040 | | CAP,E 10-50 M 11L SME<HS,HR> | S0418 | 87-A90-095-080 | | SW,TACT EVQ11G04M<EXCEPT HR> |
| C0505 | 87-010-545-040 | | CAP,E 0.22-50 M 11L SME<HS,HR> | S0418 | 87-A91-024-180 | | SW,TACT KSHG611BT<HR> |
| C0506 | 87-010-320-080 | | C-CAP,S 68P-50 J CH GRM<HS,HR> | S0419 | 87-A90-095-080 | | SW,TACT EVQ11G04M<EXCEPT HR> |
| C0507 | 87-010-544-040 | | CAP,E 0.1-50 M 11L SME<HS,HR> | S0419 | 87-A91-024-180 | | SW,TACT KSHG611BT<HR> |
| C0508 | 87-010-544-040 | | CAP,E 0.1-50 M 11L SME<HS,HR> | S0420 | 87-A90-095-080 | | SW,TACT EVQ11G04M<56EZ,HS> |
| C0510 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM<HS,HR> | S0420 | 87-A91-024-180 | | SW,TACT KSHG611BT<HR> |
| C0511 | 87-010-265-040 | | CAP,E 33-16 M 11L SME<HS,HR> | S0421 | 87-A90-095-080 | | SW,TACT EVQ11G04M<56EZ> |
| C0512 | 87-010-178-080 | | C-CAP,S 1000P-50 K B <HS,HR> | S0425 | 87-A90-095-080 | | SW,TACT EVQ11G04M<EXCEPT HR> |
| C0513 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012<HS,HR> | S0425 | 87-A91-024-180 | | SW,TACT KSHG611BT<HR> |
| C0515 | 87-010-178-080 | | C-CAP,S 1000P-50 K B <HS,HR> | S0426 | 87-A90-095-080 | | SW,TACT EVQ11G04M<EXCEPT HR> |
| C0520 | 87-010-178-080 | | C-CAP,S 1000P-50 K B C2012<HR> | S0426 | 87-A91-024-180 | | SW,TACT KSHG611BT<HR> |
| C0602 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM | S0432 | 87-A90-095-080 | | SW,TACT EVQ11G04M<EXCEPT HR> |
| C0603 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM | S0432 | 87-A91-024-180 | | SW,TACT KSHG611BT<HR> |
| C0604 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM | S0433 | 87-A90-095-080 | | SW,TACT EVQ11G04M<EXCEPT HR> |
| C0650 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012 | S0433 | 87-A91-024-180 | | SW,TACT KSHG611BT<HR> |
| C0699 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012 | S0434 | 87-A90-095-080 | | SW,TACT EVQ11G04M<EXCEPT HR> |
| CN0101 | 87-099-720-010 | | CONN,30P BLK TYK-B(P) | S0434 | 87-A91-024-180 | | SW,TACT KSHG611BT<HR> |
| CN0102 | 87-099-015-010 | | CONN,13P V BLK 6216 | S0435 | 87-A90-095-080 | | SW,TACT EVQ11G04M<EXCEPT HR> |
| CN0301 | 87-A60-140-010 | | CONN,15P V FE<HS,HR> | S0435 | 87-A91-024-180 | | SW,TACT KSHG611BT<HR> |
| CN0302 | 87-A60-136-010 | | CONN,11P V FE<K,54EZ,56EZ> | S0436 | 87-A90-095-080 | | SW,TACT EVQ11G04M<EXCEPT HR> |
| FB0301 | 87-008-372-080 | | FLTR,EMI BL01 RN1 | S0436 | 87-A91-024-180 | | SW,TACT KSHG611BT<HR> |
| FB0501 | 87-008-372-080 | | FLTR,EMI BL01 RN1<HS,HR> | S0437 | 87-A90-095-080 | | SW,TACT EVQ11G04M<EXCEPT HR> |
| FFC0102 | 88-913-301-110 | | FF-CABLE,13P-1.25 | S0437 | 87-A91-024-180 | | SW,TACT KSHG611BT<HR> |
| FFC0105 | 88-911-101-110 | | FF-CABLE,11P 1.25<K,54EZ,56EZ> | SW0252 | 87-A91-555-010 | | SW,RTRY EC12E24504 |
| FFC0105 | 88-915-101-110 | | FF-CABLE, 15P 1.25 100MM<HS,HR> | SW0253 | 87-A91-542-010 | | SW,RTRY EC12E12504 |
| FL0401 | 8A-NF8-601-010 | | FL,HNA-11MM30 (ANF-8) | VR0501 | 86-NFA-607-010 | | VR,RTRY 10K15AX1 1 V<HS,HR> |
| J0501 | 87-A61-242-010 | | JACK,6.3 BLK MONO W/SW<HS,HR> | | | | |
| L0331 | 87-A50-408-010 | | COIL,OSC 5.76MHZ | | | | |
| LED0311 | 87-A40-589-040 | | LED,SLR-56VCT31 RED | DECK C.B | | | |
| LED0601 | 87-A40-803-010 | | LED,SELU1E10CXM-S LF38 BLUE | CON105 | 87-099-753-010 | | CONN,11P 9604 S F<K,54EZ,56EZ> |
| LED0602 | 87-A40-619-080 | | LED,SLR-56PT-TE7-W GRN | CON105 | 87-099-756-010 | | CONN,15P 9604 S F<HS,HR> |
| LED0603 | 87-A40-619-080 | | LED,SLR-56PT-TE7-W GRN | SFR1 | 87-024-581-010 | | SFR,3.3K DIA 6H |
| LED0604 | 87-A40-619-080 | | LED,SLR-56PT-TE7-W GRN | SOL1 | 82-ZM1-618-410 | | SOL ASSY,27 |

| REF. NO | PART NO. | KANRI NO. | DESCRIPTION | REF. NO | PART NO. | KANRI NO. | DESCRIPTION |
|-------------------|----------------|-----------|-----------------------------|---------|----------------|-----------|-----------------------------------|
| SOL2 | 82-ZM1-618-410 | | SOL ASSY,27 | PT C.B | | | |
| SW1 | 87-A90-248-010 | | SW,MICRO ESE11SH2CXQ | C0001 | 87-010-387-080 | | CAP,E 470-25 M SME |
| SW2 | 87-A90-248-010 | | SW,MICRO ESE11SH2CXQ | C0002 | 87-A11-148-080 | | CAP,TC U 0.1-50 Z F<K,54EZ,56EZ> |
| SW3 | 87-A90-248-010 | | SW,MICRO ESE11SH2CXQ | C0031 | 87-010-403-040 | | CAP,E 3.3-50 M 11L SME |
| SW4 | 87-036-110-010 | | SW,MICRO SPPB62 | △CN0001 | 87-A61-122-010 | | CONN,11P V TID-A |
| SW5 | 87-036-110-010 | | SW,MICRO SPPB62 | △PT0001 | 8A-NF8-605-010 | | PT,ANF-8 LH<HS,HR> |
| SW6 | 87-036-110-010 | | SW,MICRO SPPB62<HS,HR> | △PT0001 | 8A-NF8-608-010 | | PT,ANF-8 EZ<K,54EZ,56EZ> |
| SW8 | 87-A90-248-010 | | SW,MICRO ESE11SH2CXQ<HS,HR> | △PT0002 | 8A-NF8-662-010 | | PT,SUB ANF-8 (E)<K,54EZ,56EZ> |
| SW9 | 87-A90-248-010 | | SW,MICRO ESE11SH2CXQ<HS,HR> | △PT0002 | 8A-NF8-673-010 | | PT,SUB ANF-8 (H)KAMI<HS,HR> |
| W1 | 82-ZM3-601-010 | | RBN,CORD,4P-75 | △RY0001 | 87-A91-339-010 | | RELAY,AC DC12V G5PA-2<HS,HR> |
| | | | | △RY0002 | 87-A91-418-010 | | RELAY,AC12V G5PA-1-M<K,54EZ,56EZ> |
| HEAD-1 C.B | | | | △S0001 | 87-A90-165-010 | | SW,SL 1-2-3 SWS2301<HS,HR> |
| | 85-ZM3-602-010 | | PWB,FLEX A | △T0001 | 87-A60-317-010 | | TERMINAL, 1P MSC |
| CON301 | 87-NF6-615-010 | | CONN ASSY,3P PB | △T0002 | 87-A60-317-010 | | TERMINAL, 1P MSC |
| HEAD-2 C.B<HS,HR> | | | | | | | |
| | 85-ZM3-602-010 | | PWB,FLEX A<HS,HR> | | | | |
| CON351 | 87-NF6-616-010 | | CONN ASSY,8P-RPB<HS,HR> | | | | |






チップ抵抗部品コード/CHIP RESISTOR PART CODE

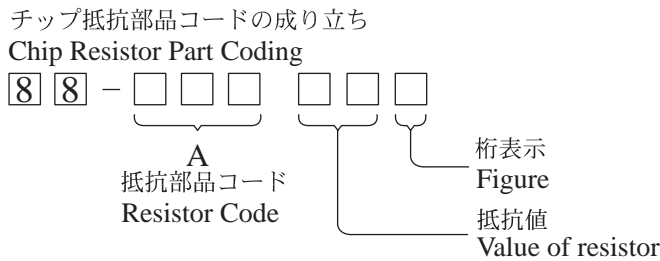

チップ抵抗
Chip resistor


| 容量 Wattage | 種類 Type | 許容誤差 Tolerance | 記号 Symbol | 寸法/Dimensions (mm) | | | 抵抗コード : A Resistor Code : A | |
|---------------|------------|-------------------|--------------|--------------------|-----|------|--------------------------------|-----|
| | | | | 外形/Form | L | W | | t |
| 1/16W | 1005 | ± 5% | CJ | | 1.0 | 0.5 | 0.35 | 104 |
| 1/16W | 1608 | ± 5% | CJ | | 1.6 | 0.8 | 0.45 | 108 |
| 1/10W | 2125 | ± 5% | CJ | | 2 | 1.25 | 0.45 | 118 |
| 1/8W | 3216 | ± 5% | CJ | | 3.2 | 1.6 | 0.55 | 128 |

TRANSISTOR ILLUSTRATION

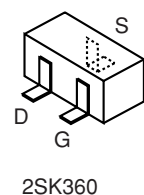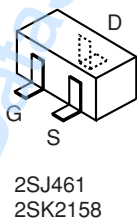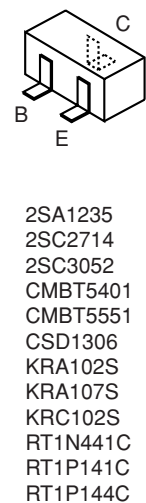


FL (HNA-11MM30) GRID ASSIGNMENT/ANODE CONNECTION

GRID ASSIGNMENT

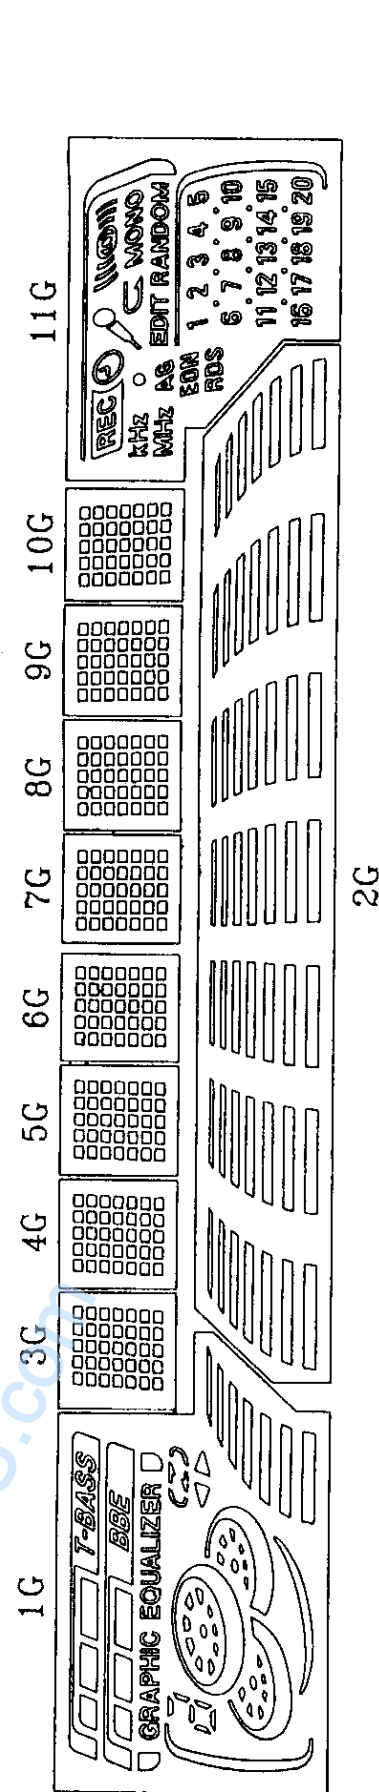


2G

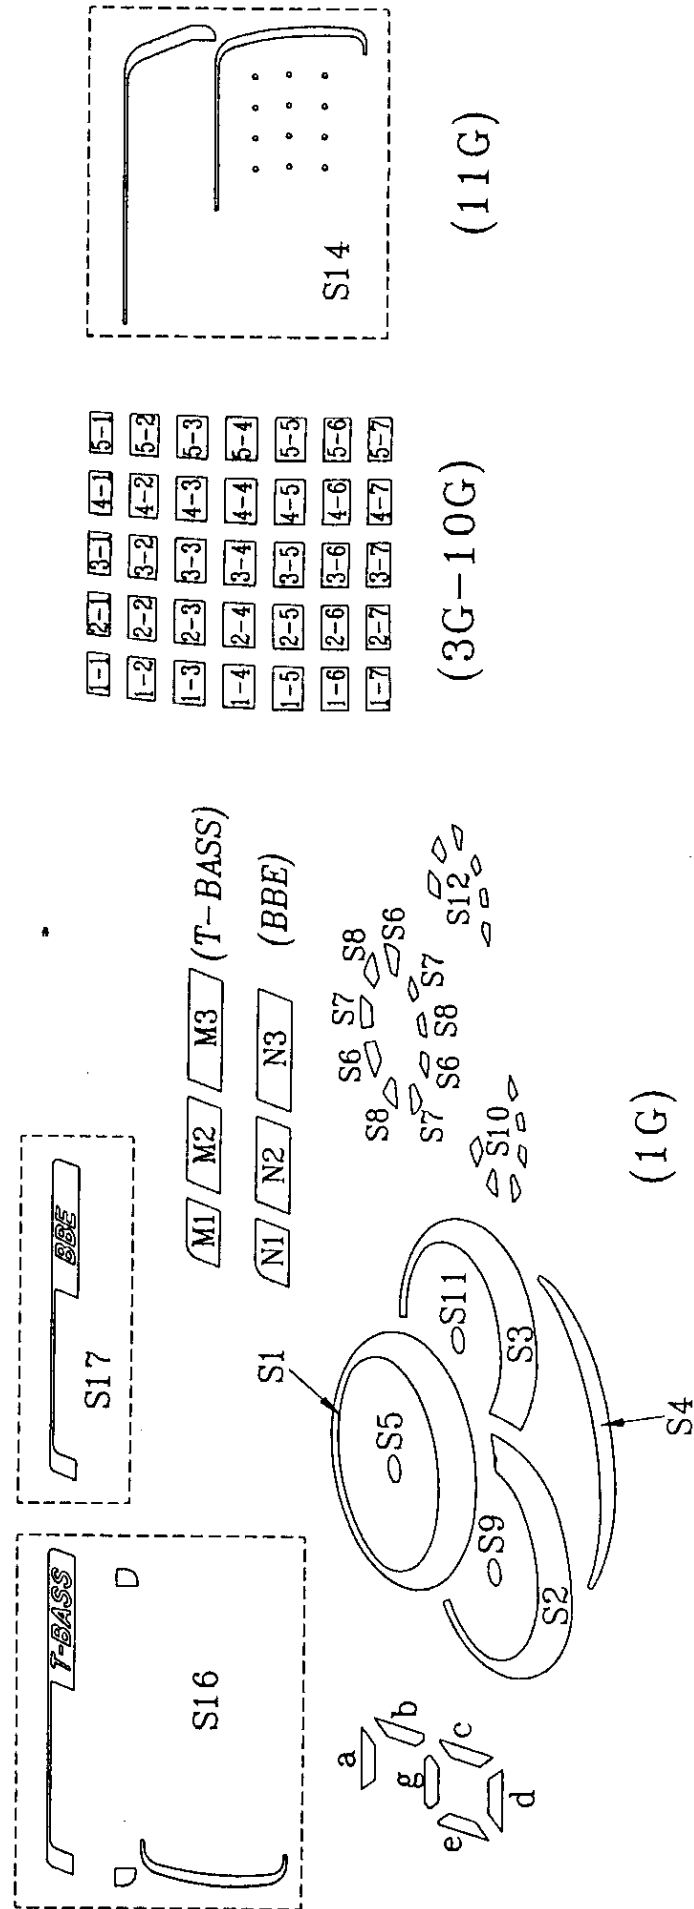

(11G)

(3G-10G)

(1G)

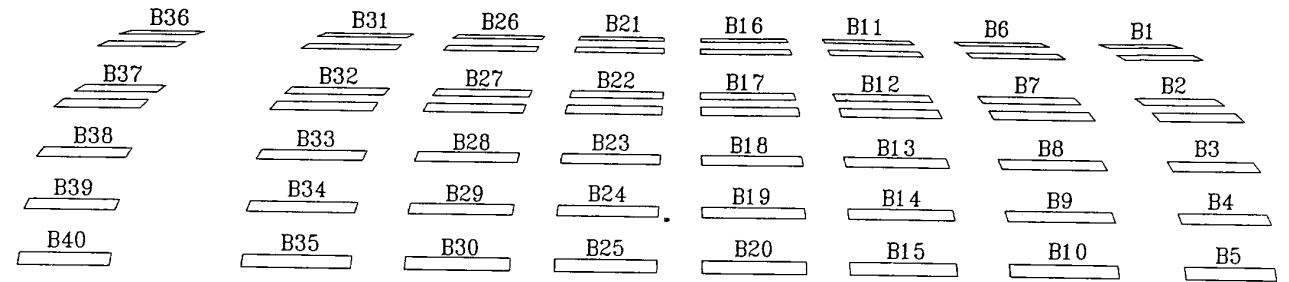


(1G)

(2G)


ANODE CONNECTION

| | 1G | 2G | 3G-10G | 11G |
|-----|-------------------|-----|--------|--------|
| P1 | S17 | B35 | 1-1 | ↶ |
| P2 | N1 | B30 | 2-1 | MONO |
| P3 | N2 | B25 | 3-1 | RANDOM |
| P4 | N3 | B20 | 4-1 | WOM |
| P5 | GRAPHIC EQUALIZER | B15 | 5-1 | EDIT |
| P6 | ↷ | B10 | 1-2 | ⊙ |
| P7 | ↶ | B5 | 2-2 | REC |
| P8 | ↷ | B34 | 3-2 | kHz |
| P9 | △ | B29 | 4-2 | MHz |
| P10 | ▽ | B24 | 5-2 | ○ |
| P11 | S4 | B19 | 1-3 | AG |
| P12 | S2 | B14 | 2-3 | EON |
| P13 | S10 | B9 | 3-3 | RDS |
| P14 | S9 | B4 | 4-3 | S14 |
| P15 | S3 | B33 | 5-3 | 20 |
| P16 | S12 | B28 | 1-4 | 19 |
| P17 | S11 | B23 | 2-4 | 18 |
| P18 | S1 | B18 | 3-4 | 17 |

| | 1G | 2G | 3G-10G | 11G |
|-----|-------|-----|--------|-----|
| P19 | S6 | B13 | 4-4 | 16 |
| P20 | S7 | B8 | 5-4 | 15 |
| P21 | S8 | B3 | 1-5 | 14 |
| P22 | S5 | B32 | 2-5 | 13 |
| P23 | S16 | B27 | 3-5 | 12 |
| P24 | M1 | B22 | 4-5 | 11 |
| P25 | M2 | B17 | 5-5 | 10 |
| P26 | M3 | B12 | 1-6 | 9 |
| P27 | e | B7 | 2-6 | 8 |
| P28 | a,g,d | B2 | 3-6 | 7 |
| P29 | b | B31 | 4-6 | 6 |
| P30 | c | B26 | 5-6 | 5 |
| P31 | B40 | B21 | 1-7 | 4 |
| P32 | B39 | B16 | 2-7 | 3 |
| P33 | B38 | B11 | 3-7 | 2 |
| P34 | B37 | B6 | 4-7 | 1 |
| P35 | B36 | B1 | 5-7 | ↷ |

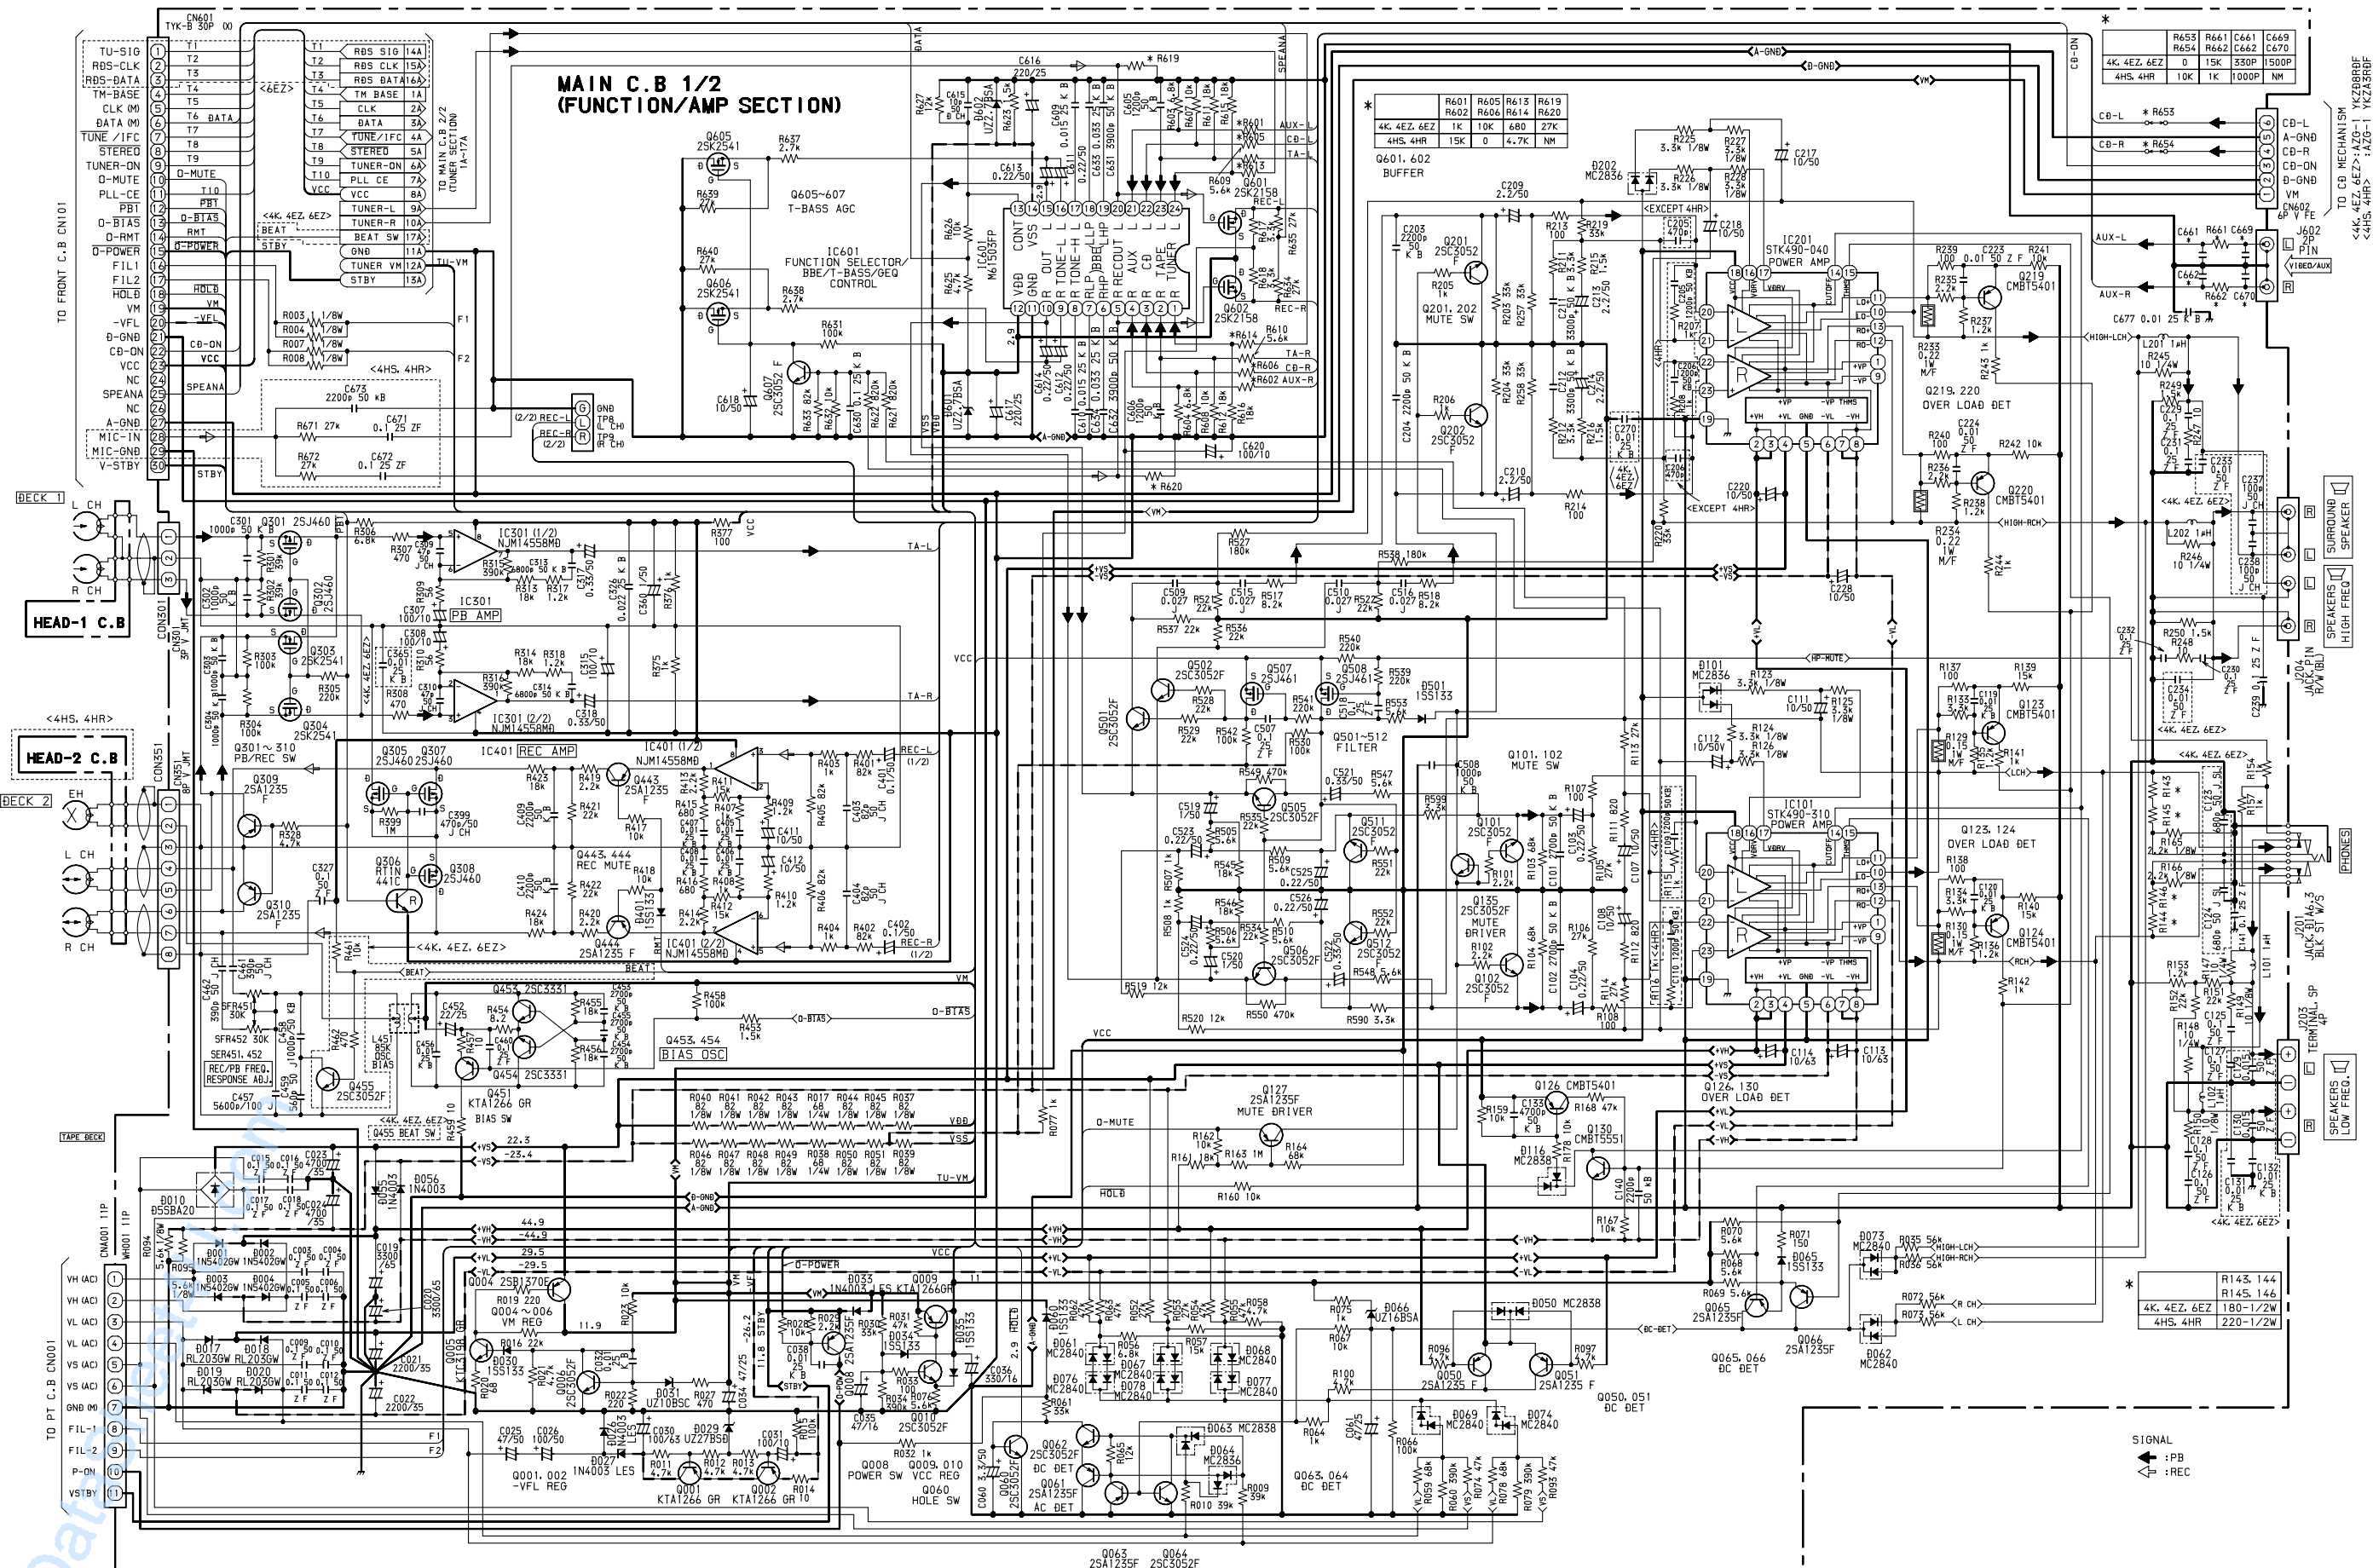


SCHEMATIC DIAGRAM-2 (TUNER SECTION) <EZ,K>

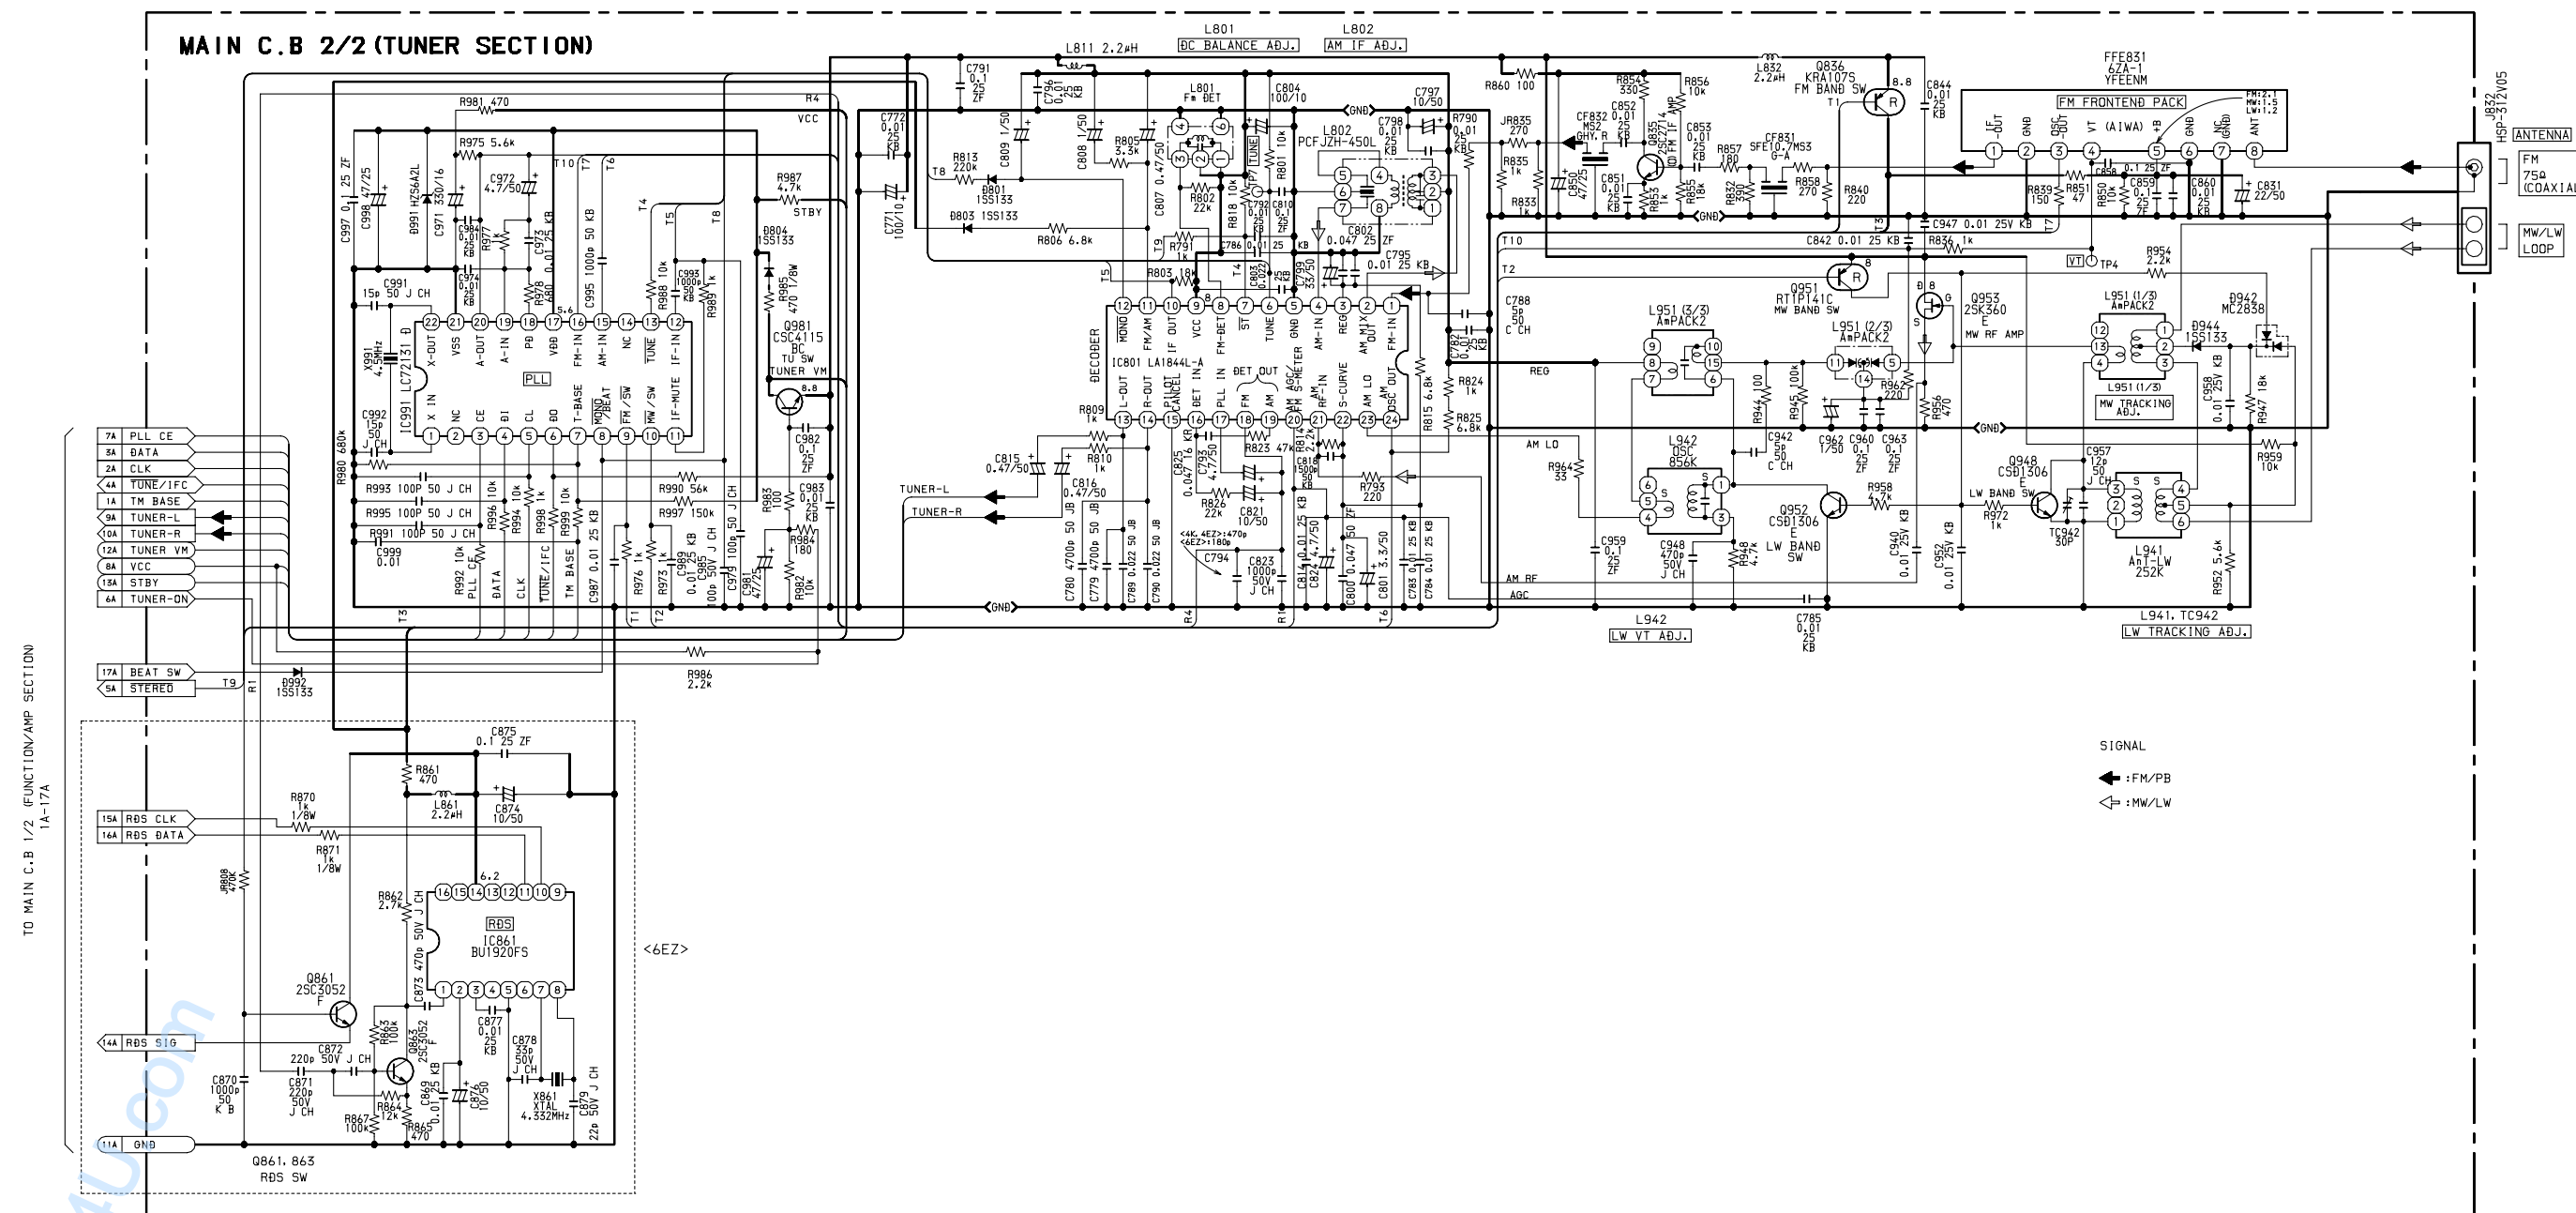


TO MAIN C.B 1/2 (FUNCTION/AMP SECTION) 1A-17A

SCHEMATIC DIAGRAM-3 (TUNER SECTION) <HS>

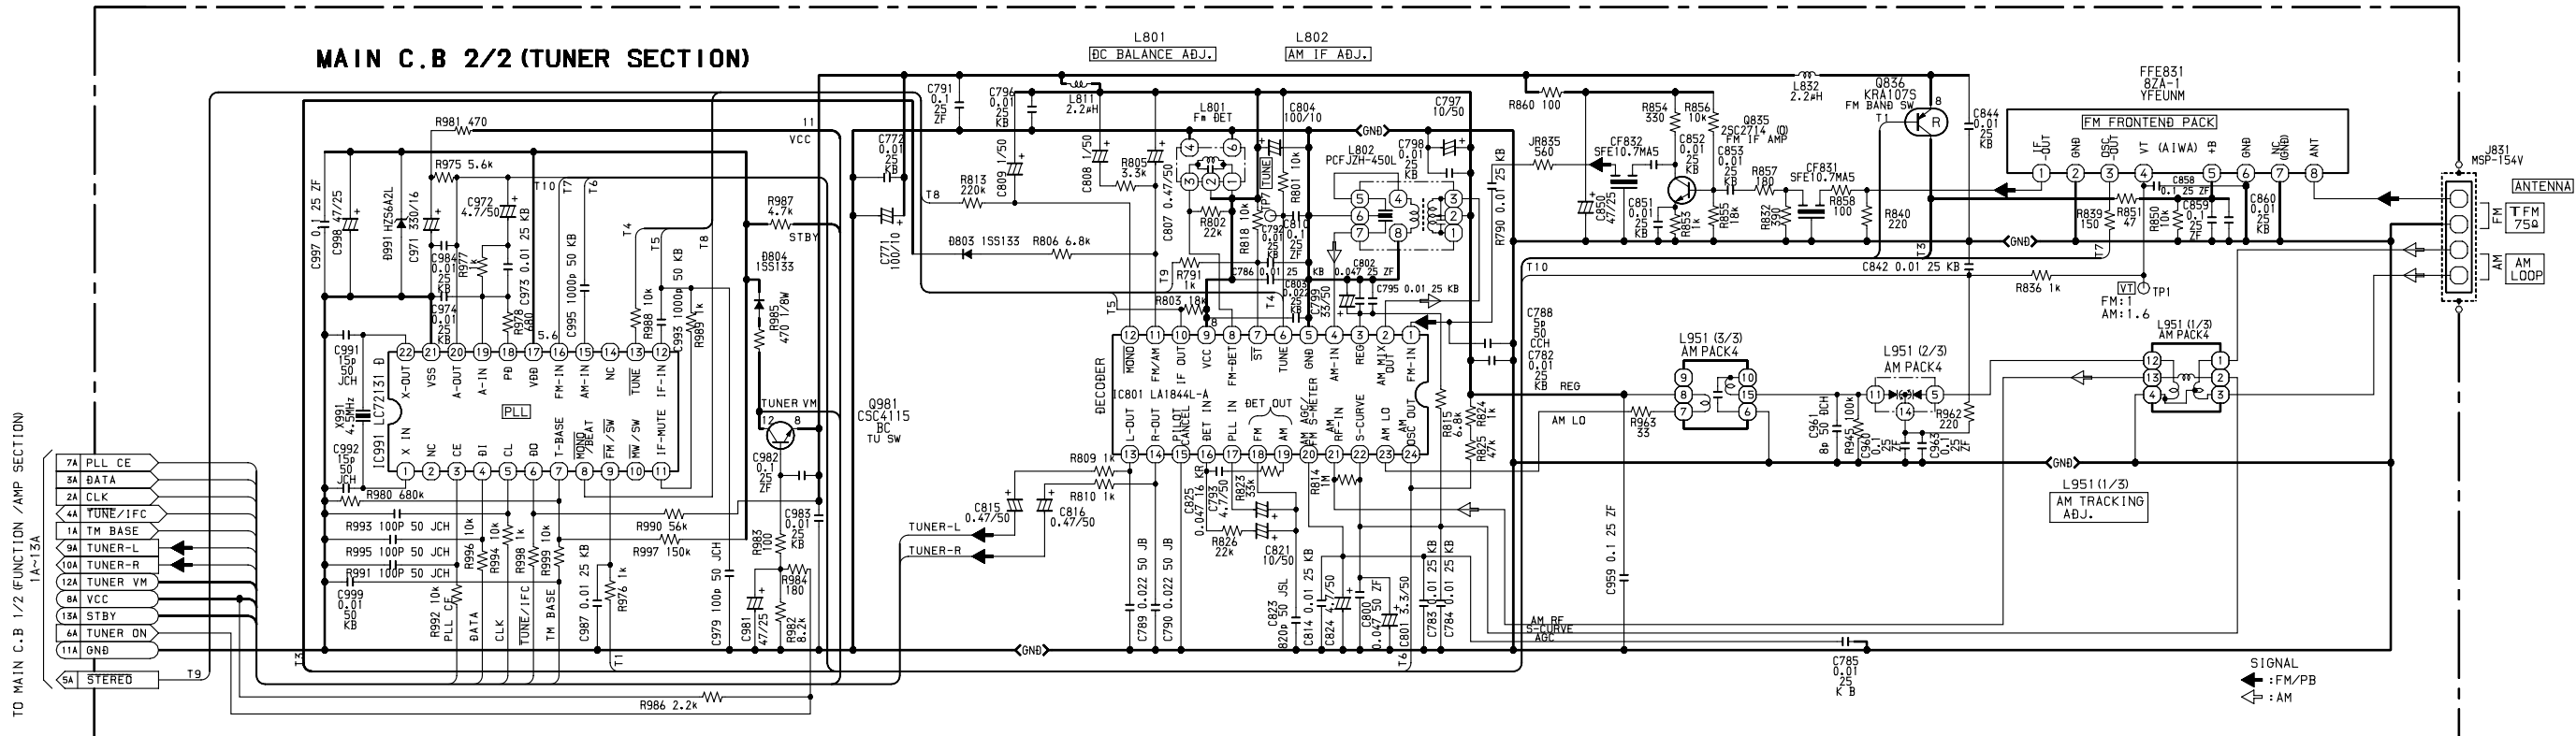


www.DataSheet4U.com

SCHEMATIC DIAGRAM-4 (TUNER SECTION) <HR>

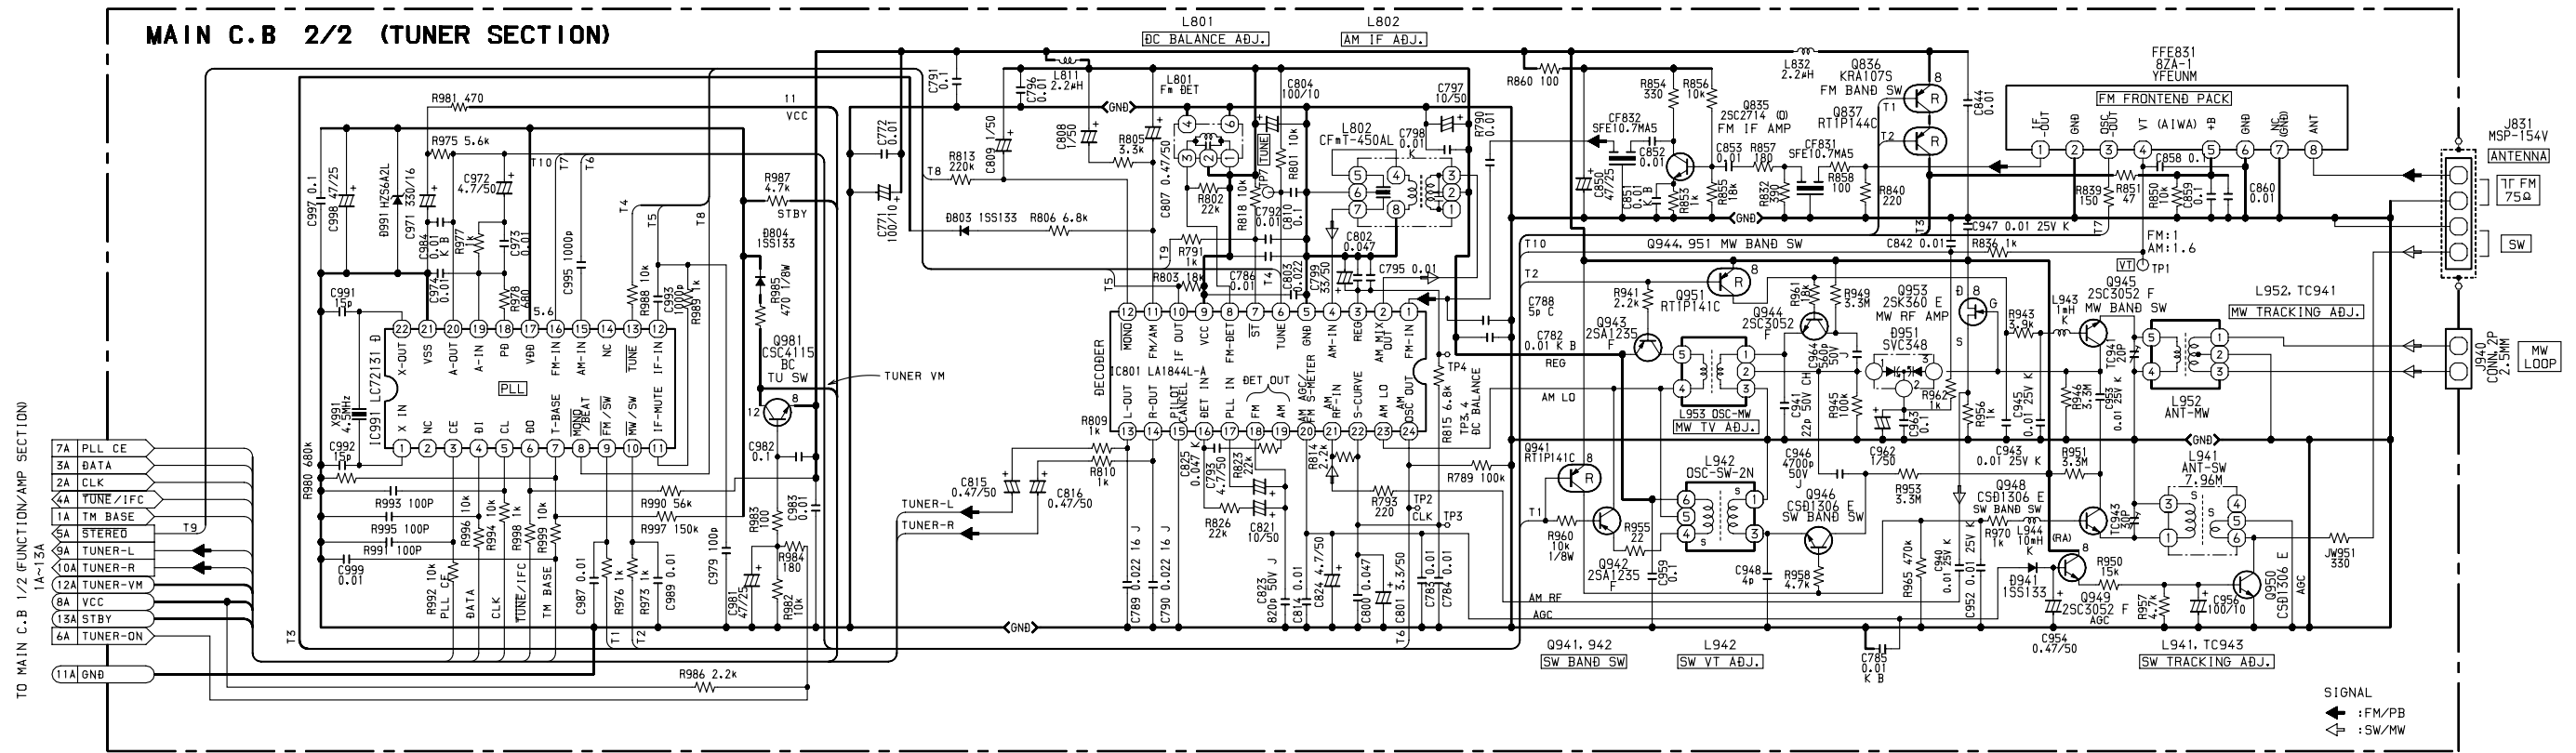


www.DataSheet4U.com

WIRING-1 (MAIN C.B) <EZ, K, HS>

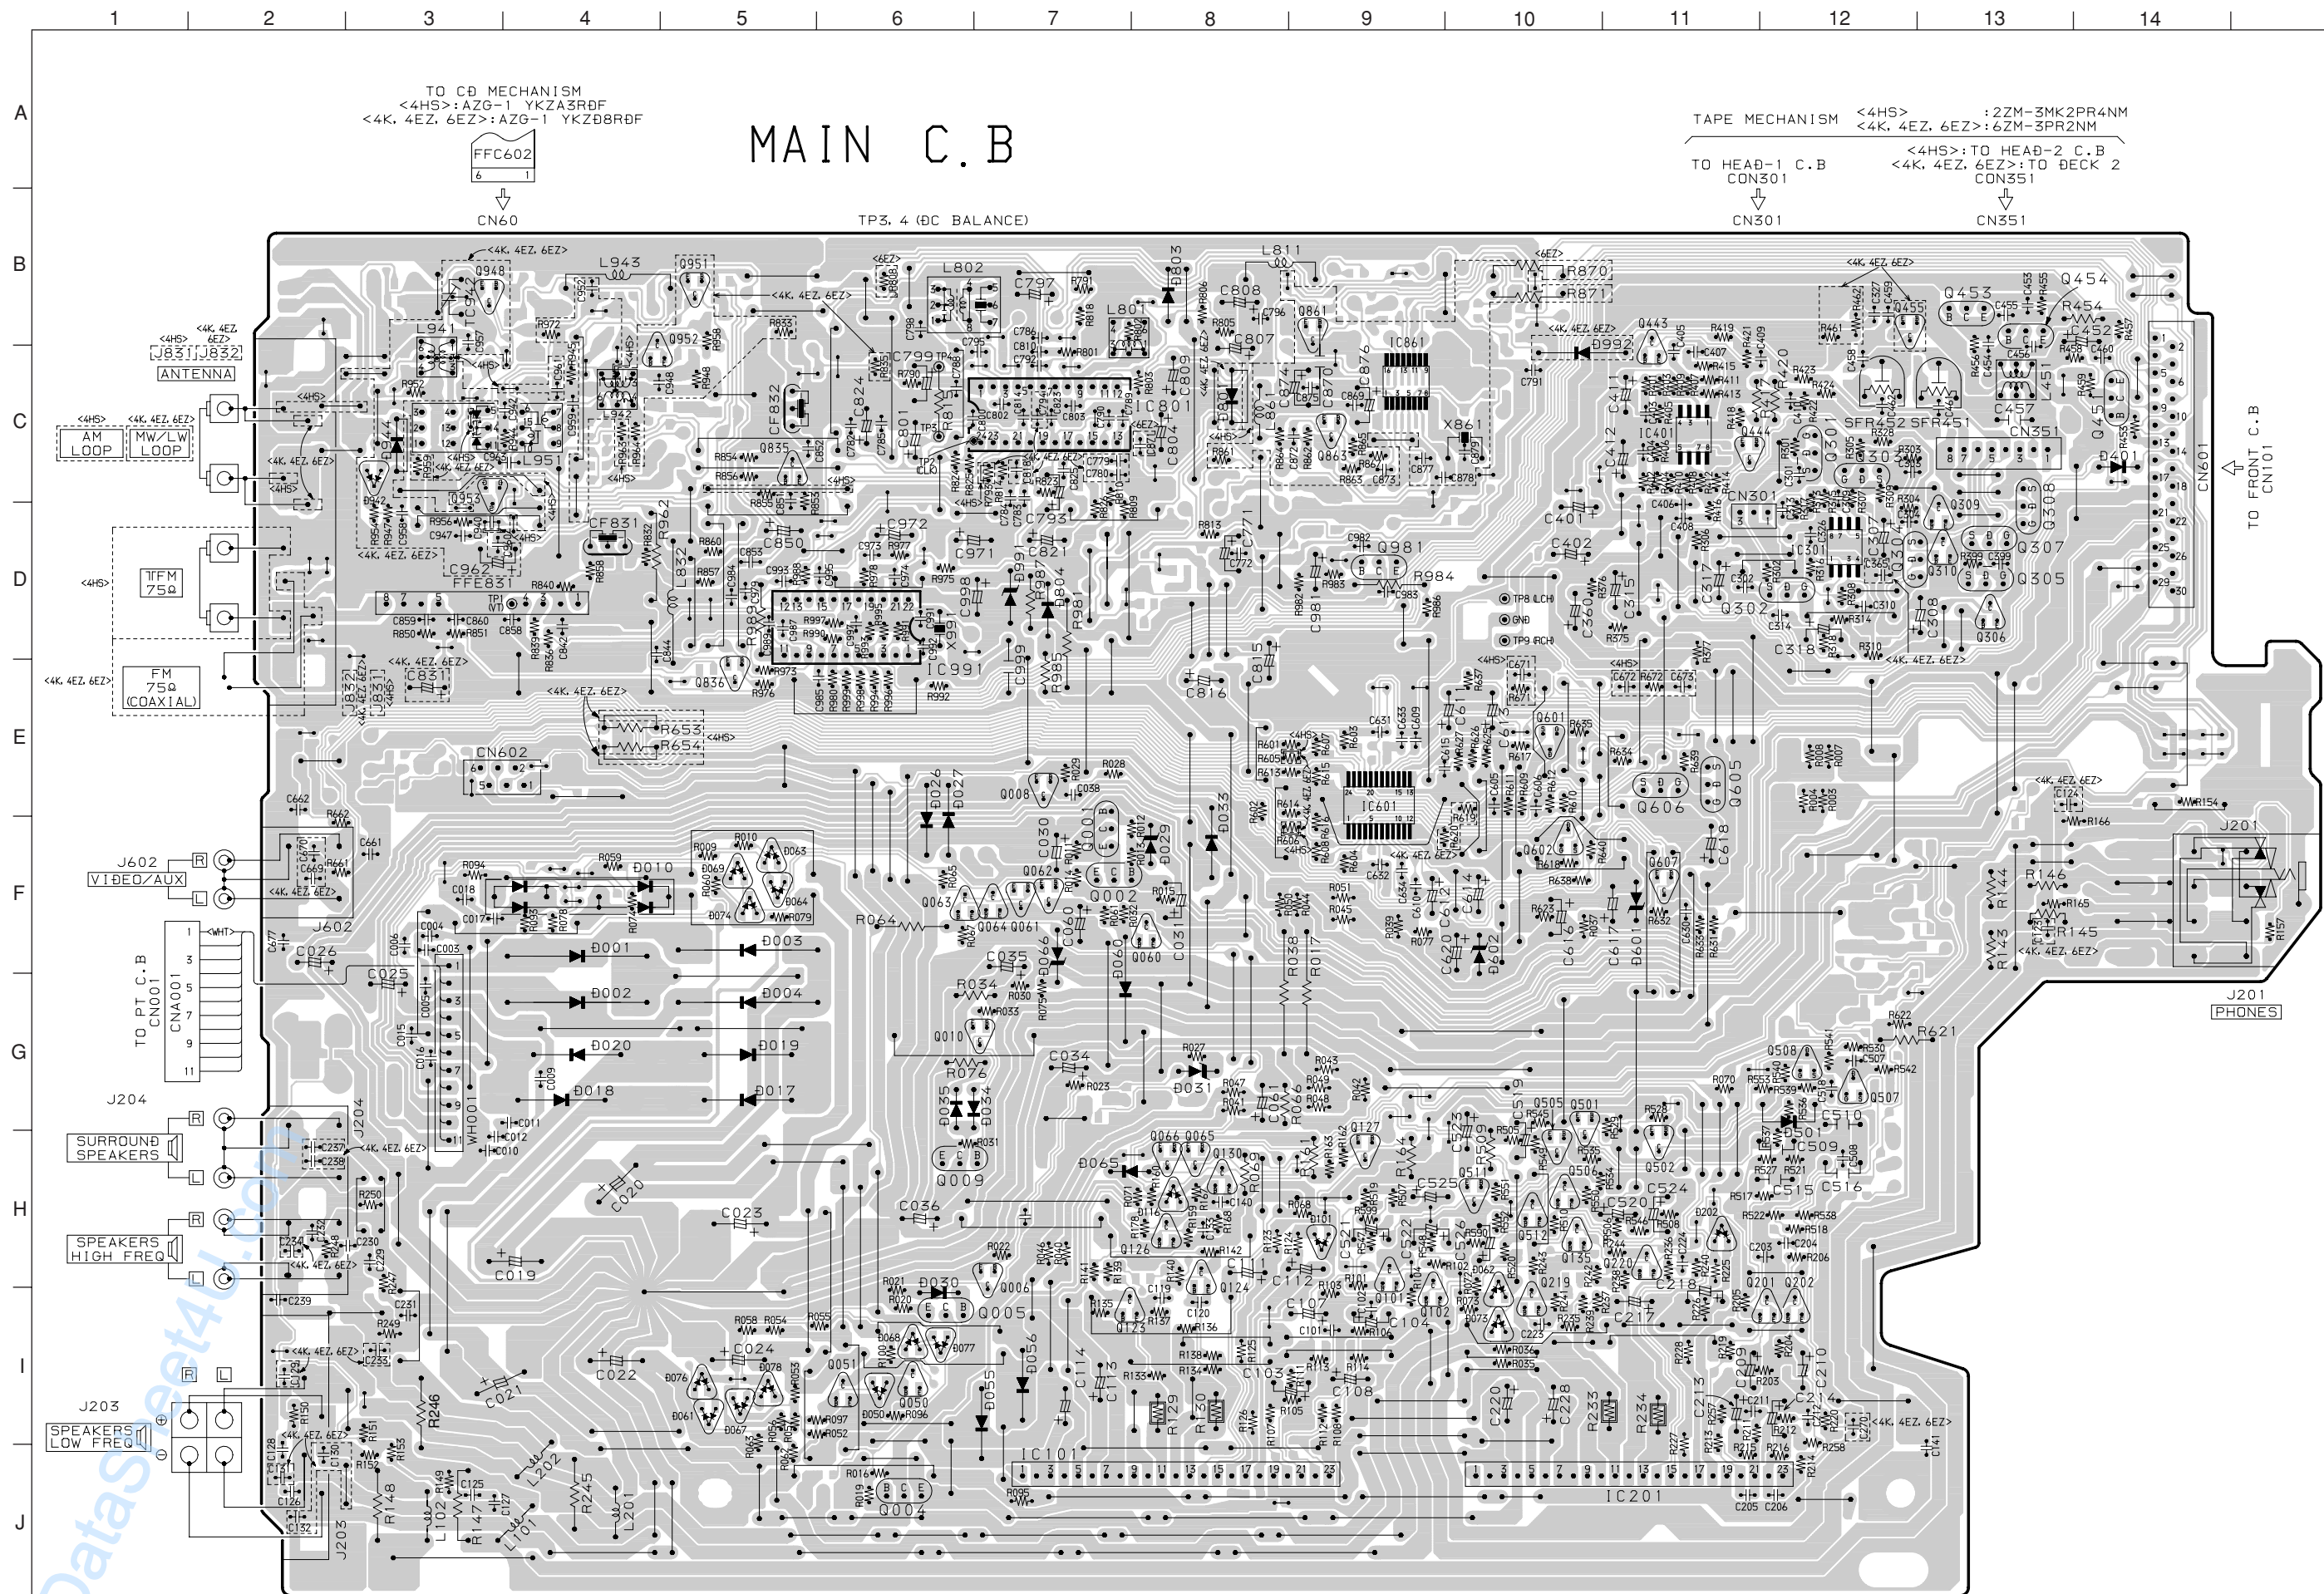

WIRING-2 (MAIN C.B) <HR>

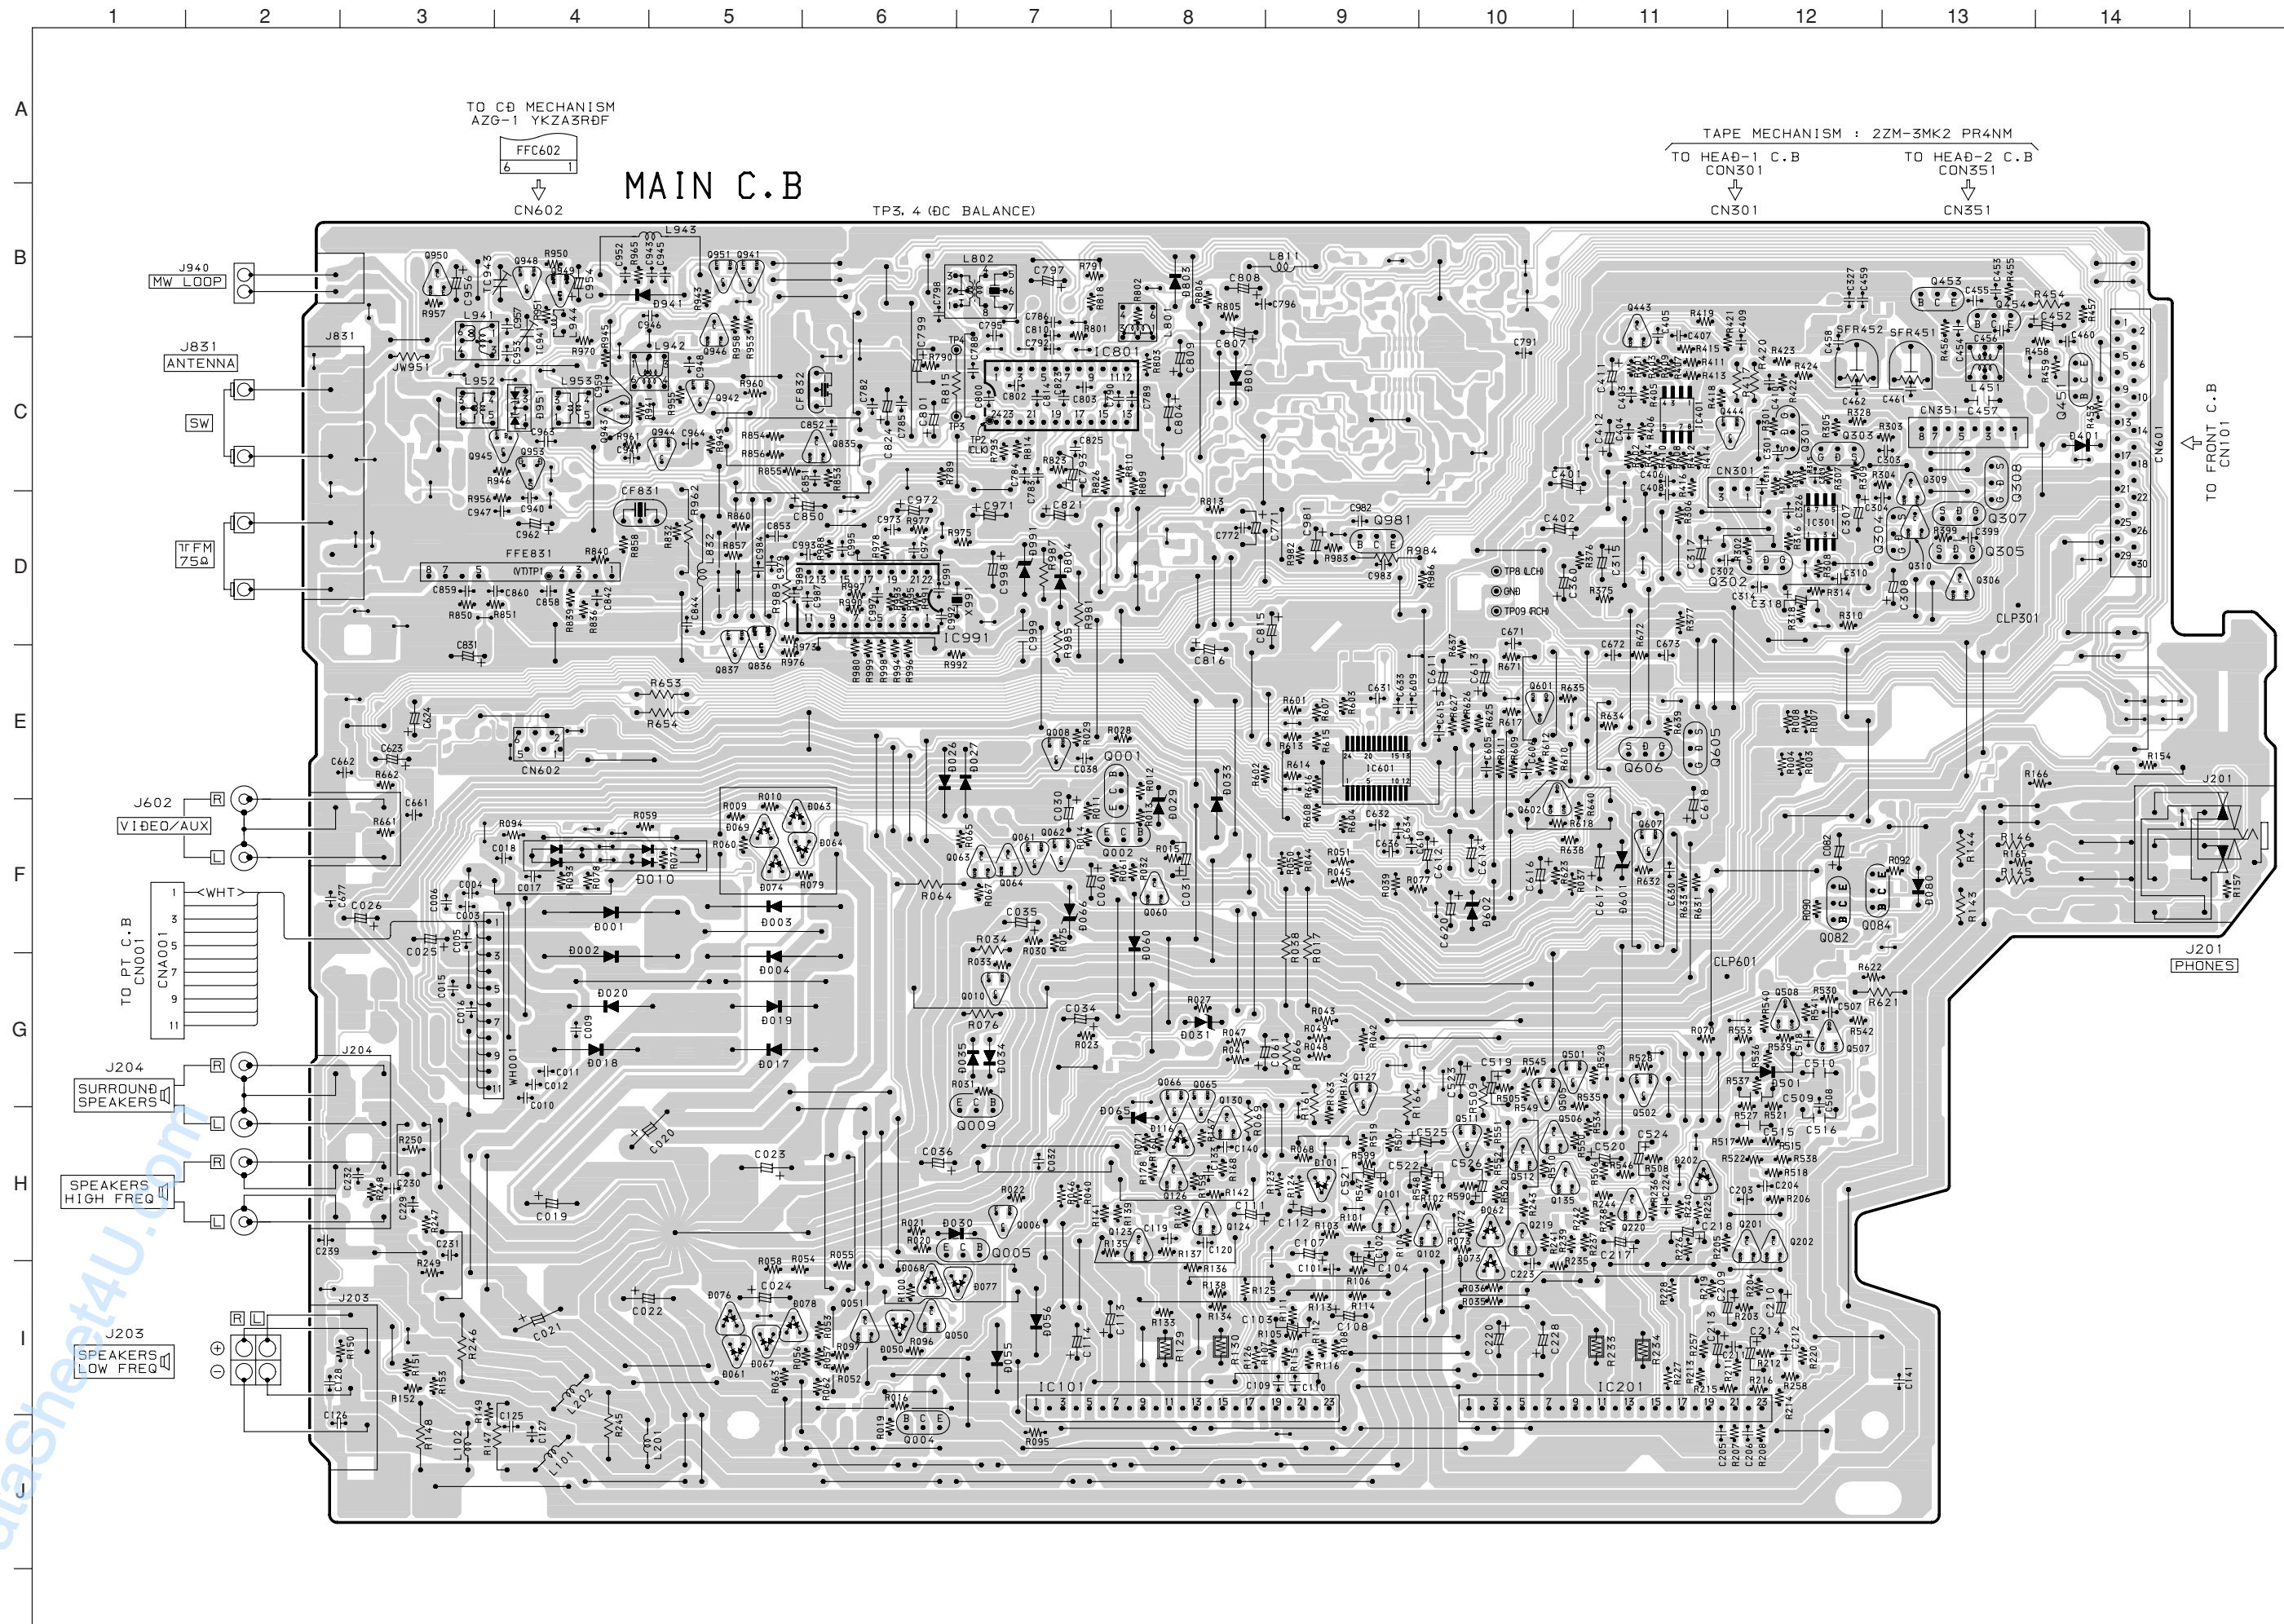


WIRING-3 (FRONT C.B) <EZ, K, HS>

1 2 3 4 5 6 7 8 9 10 11 12 13 14

A
B
C
D
E
F
G
H

FRONT C.B

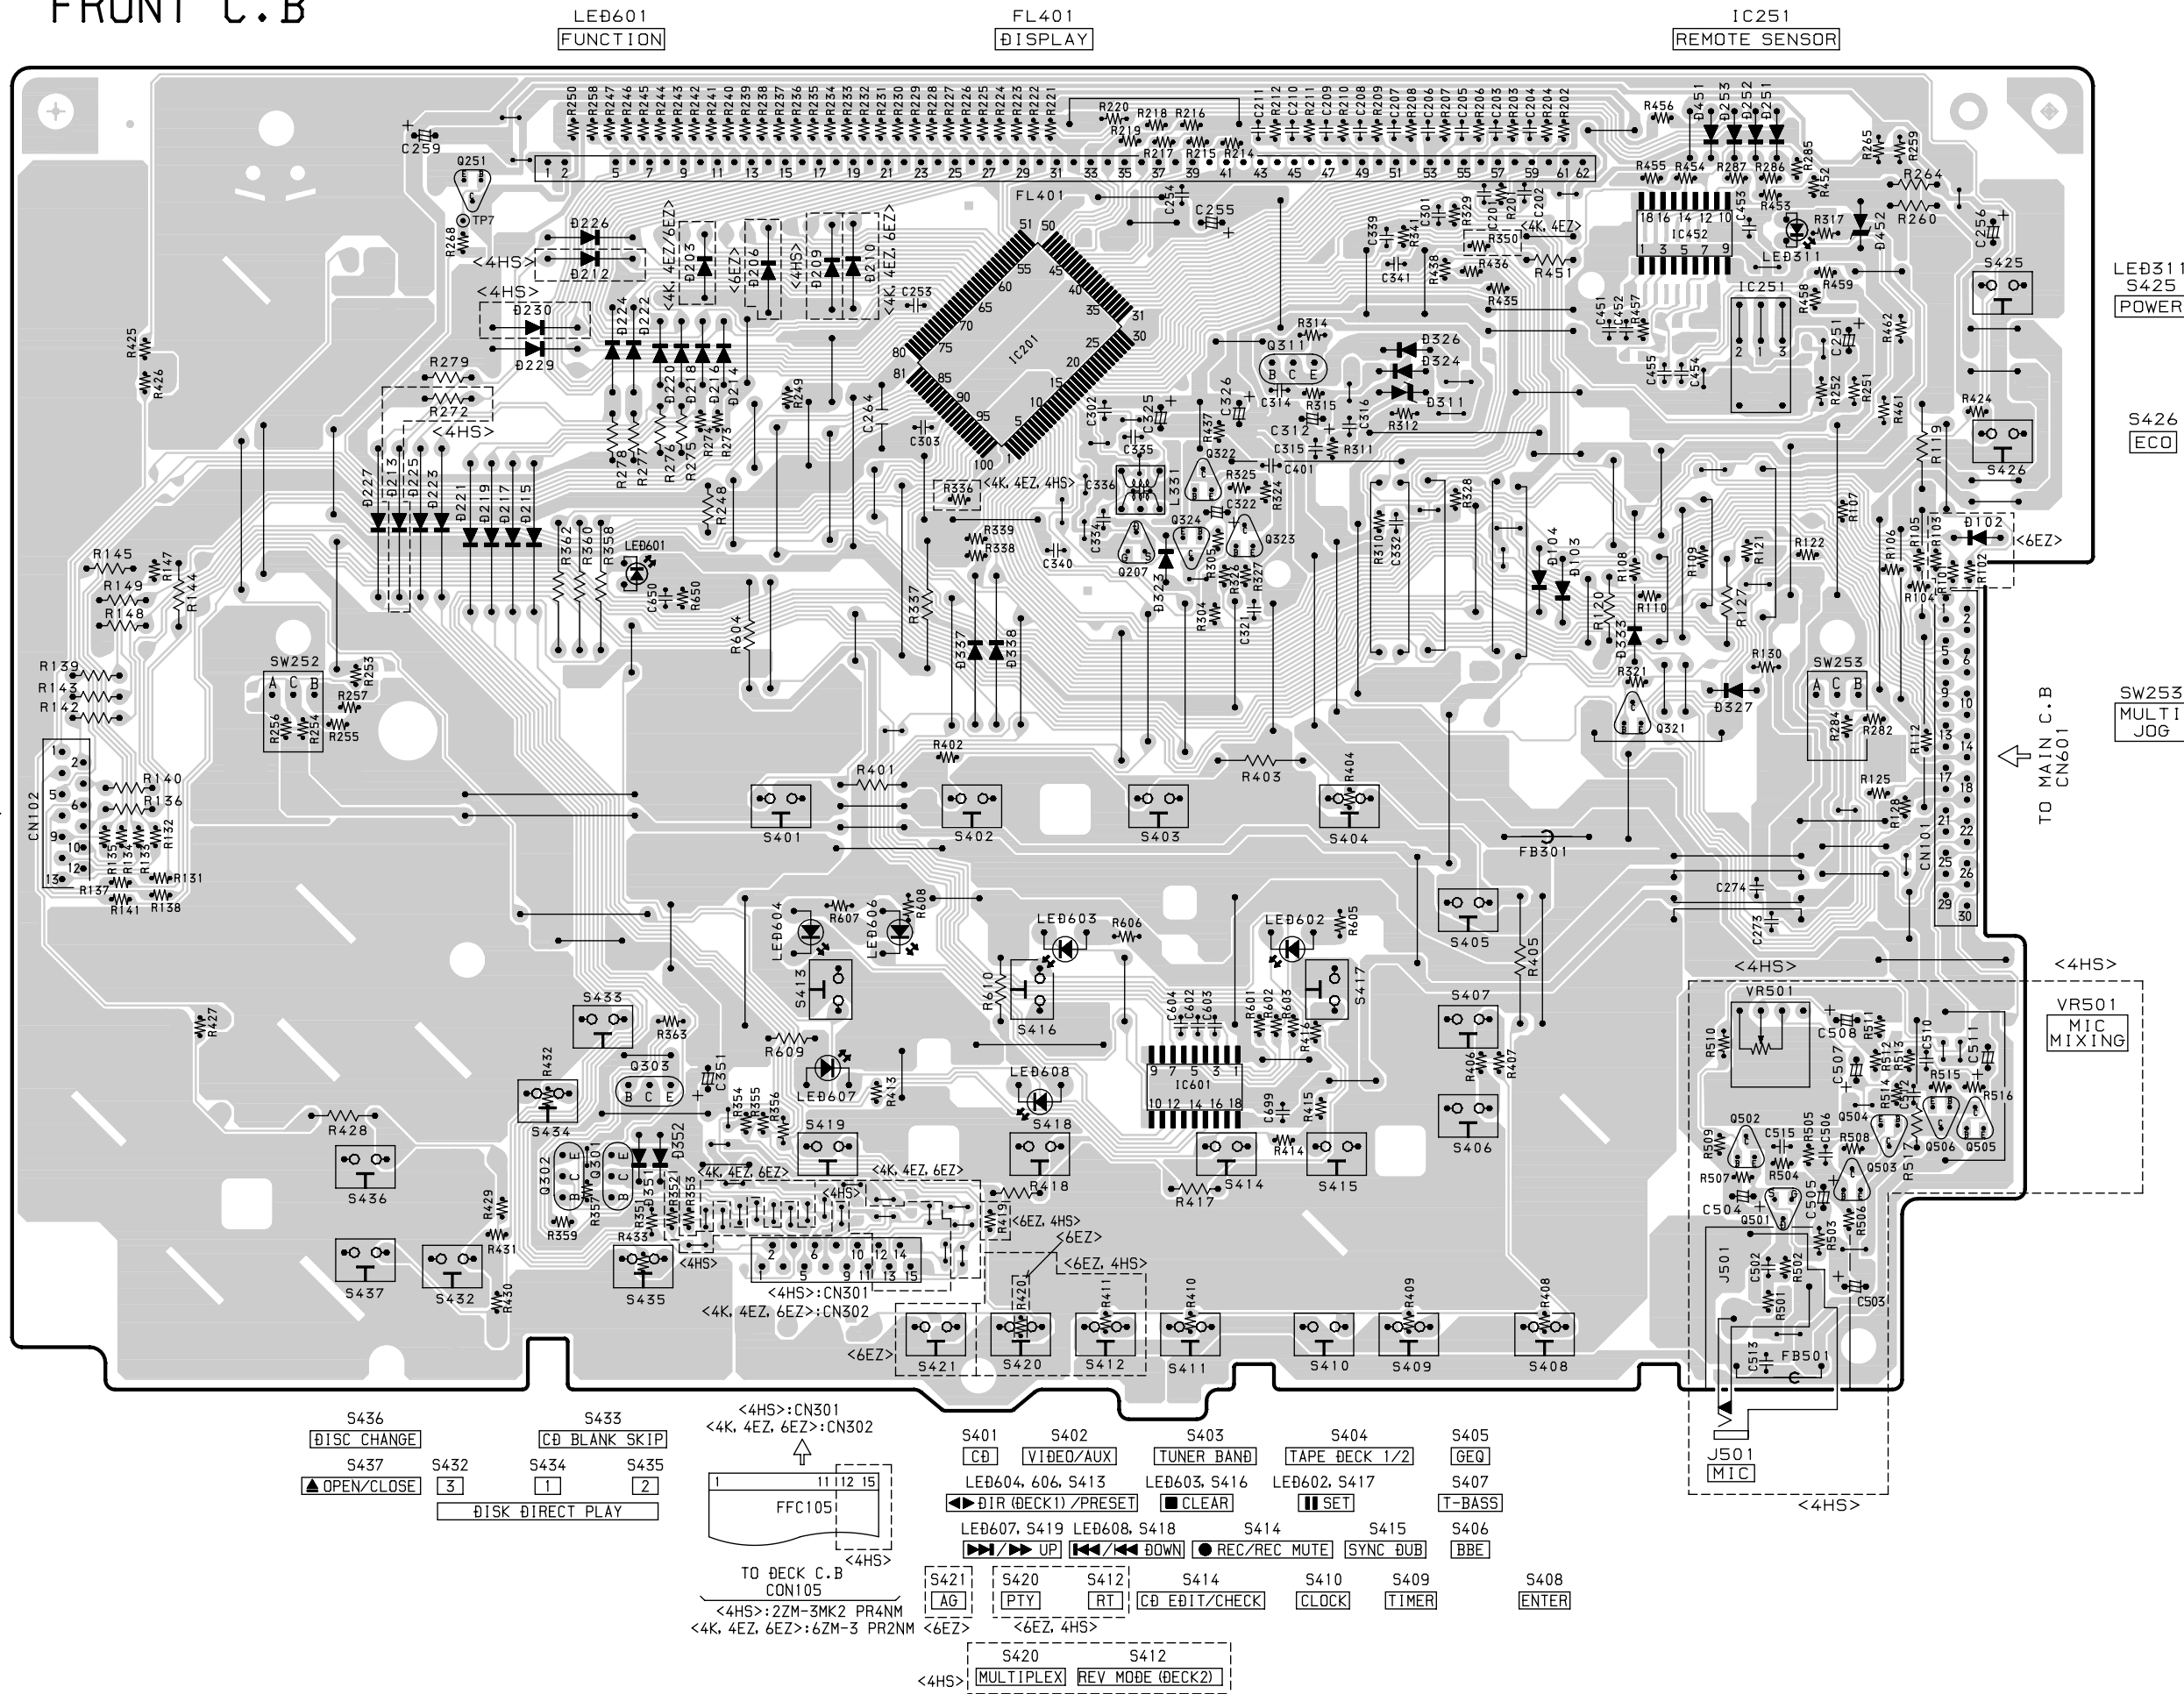

LEB311
S425
POWER

S426
ECO

SW253
MULTI
JOG

TO MAIN C.B
CN601

VR501
MIC
MIXING

S436 DISC CHANGE
S437 OPEN/CLOSE
S432 3
S433 CD BLANK SKIP
S434 1
S435 2
DISK DIRECT PLAY

<4HS>:CN301
<4K, 4EZ, 6EZ>:CN302
FFC105
TO DECK C.B
CON105
<4HS>:2ZM-3MK2 PR4NM
<4K, 4EZ, 6EZ>:6ZM-3 PR2NM

S401 CD
S402 VIBEO/AUX
S403 TUNER BAND
S404 TAPE DECK 1/2
S405 GEQ
S407 T-BASS
S406 BBE
S421 AG
S420 PTY
S412 RT
S414 CD EBIT/CHECK
S410 CLOCK
S409 TIMER
S408 ENTER
S401 CD
S402 VIBEO/AUX
S403 TUNER BAND
S404 TAPE DECK 1/2
S405 GEQ
S407 T-BASS
S406 BBE
S421 AG
S420 PTY
S412 RT
S414 CD EBIT/CHECK
S410 CLOCK
S409 TIMER
S408 ENTER
S420 S412
<4HS> MULTIPLEX
REV MODE (DECK2)

www.DataSheet4U.com

WIRING-4 (FRONT C.B) <HR>

1 2 3 4 5 6 7 8 9 10 11 12 13 14

FRONT C. B

LED601
FUNCTION

FL401
DISPLAY

IC251
REMOTE SENSOR



A
B
C
D
E
F
G
H
I
J

LED311
S425
POWER

S426
ECO

SW253
MULTI
JOG


VR501
MIC
MIXING

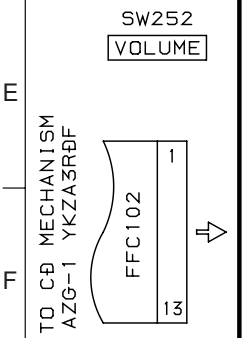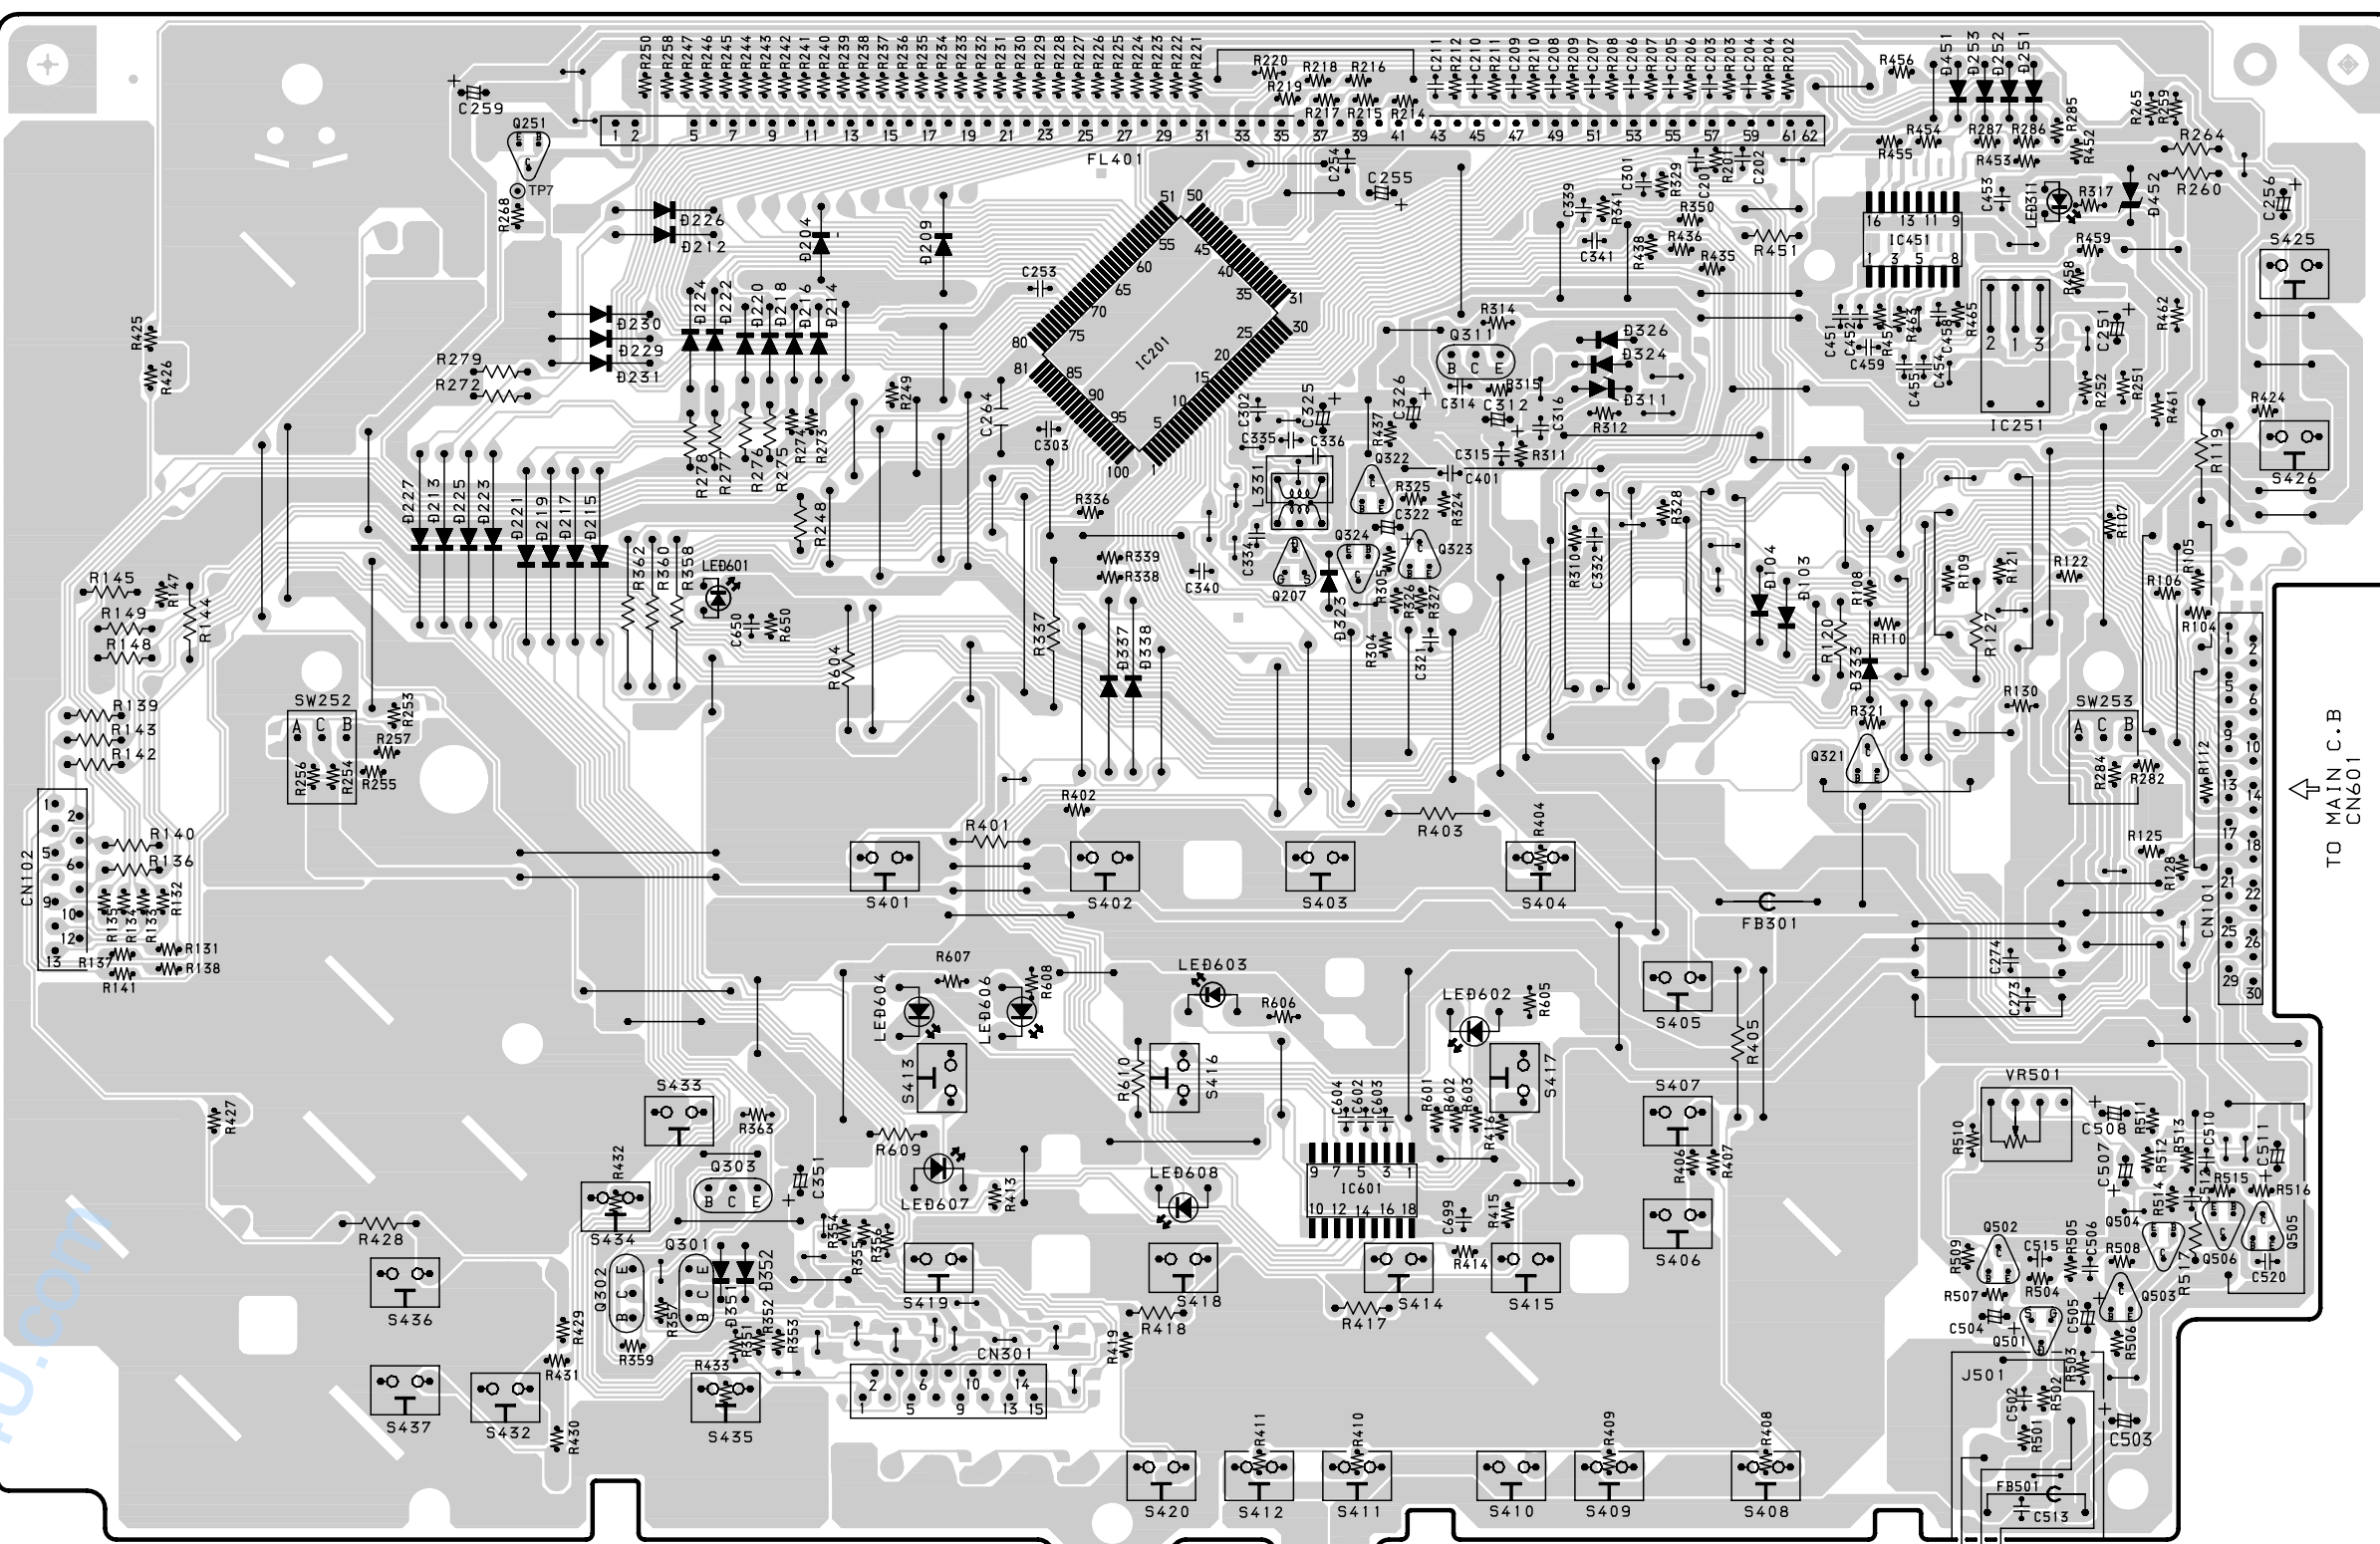


TO CB MECHANISM
AZG-1 YKZARDF

FFC102


TO MAIN C.B
CN601

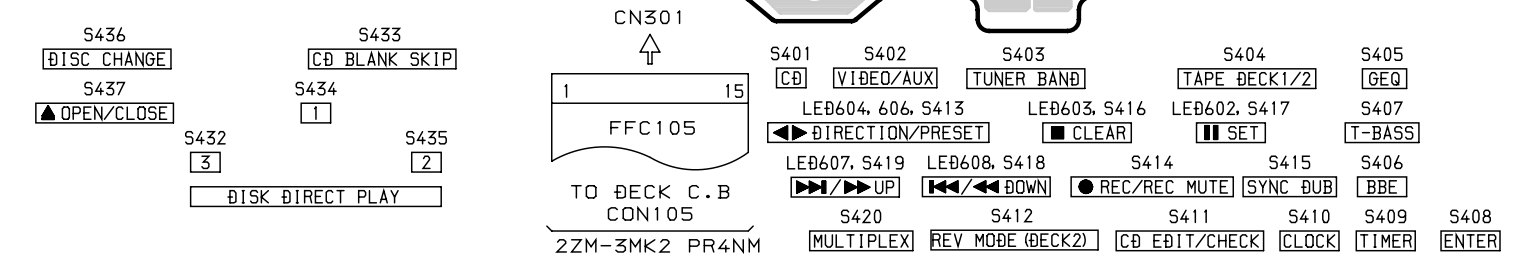


SCHEMATIC DIAGRAM-6 (FRONT SECTION) <HS, HR>

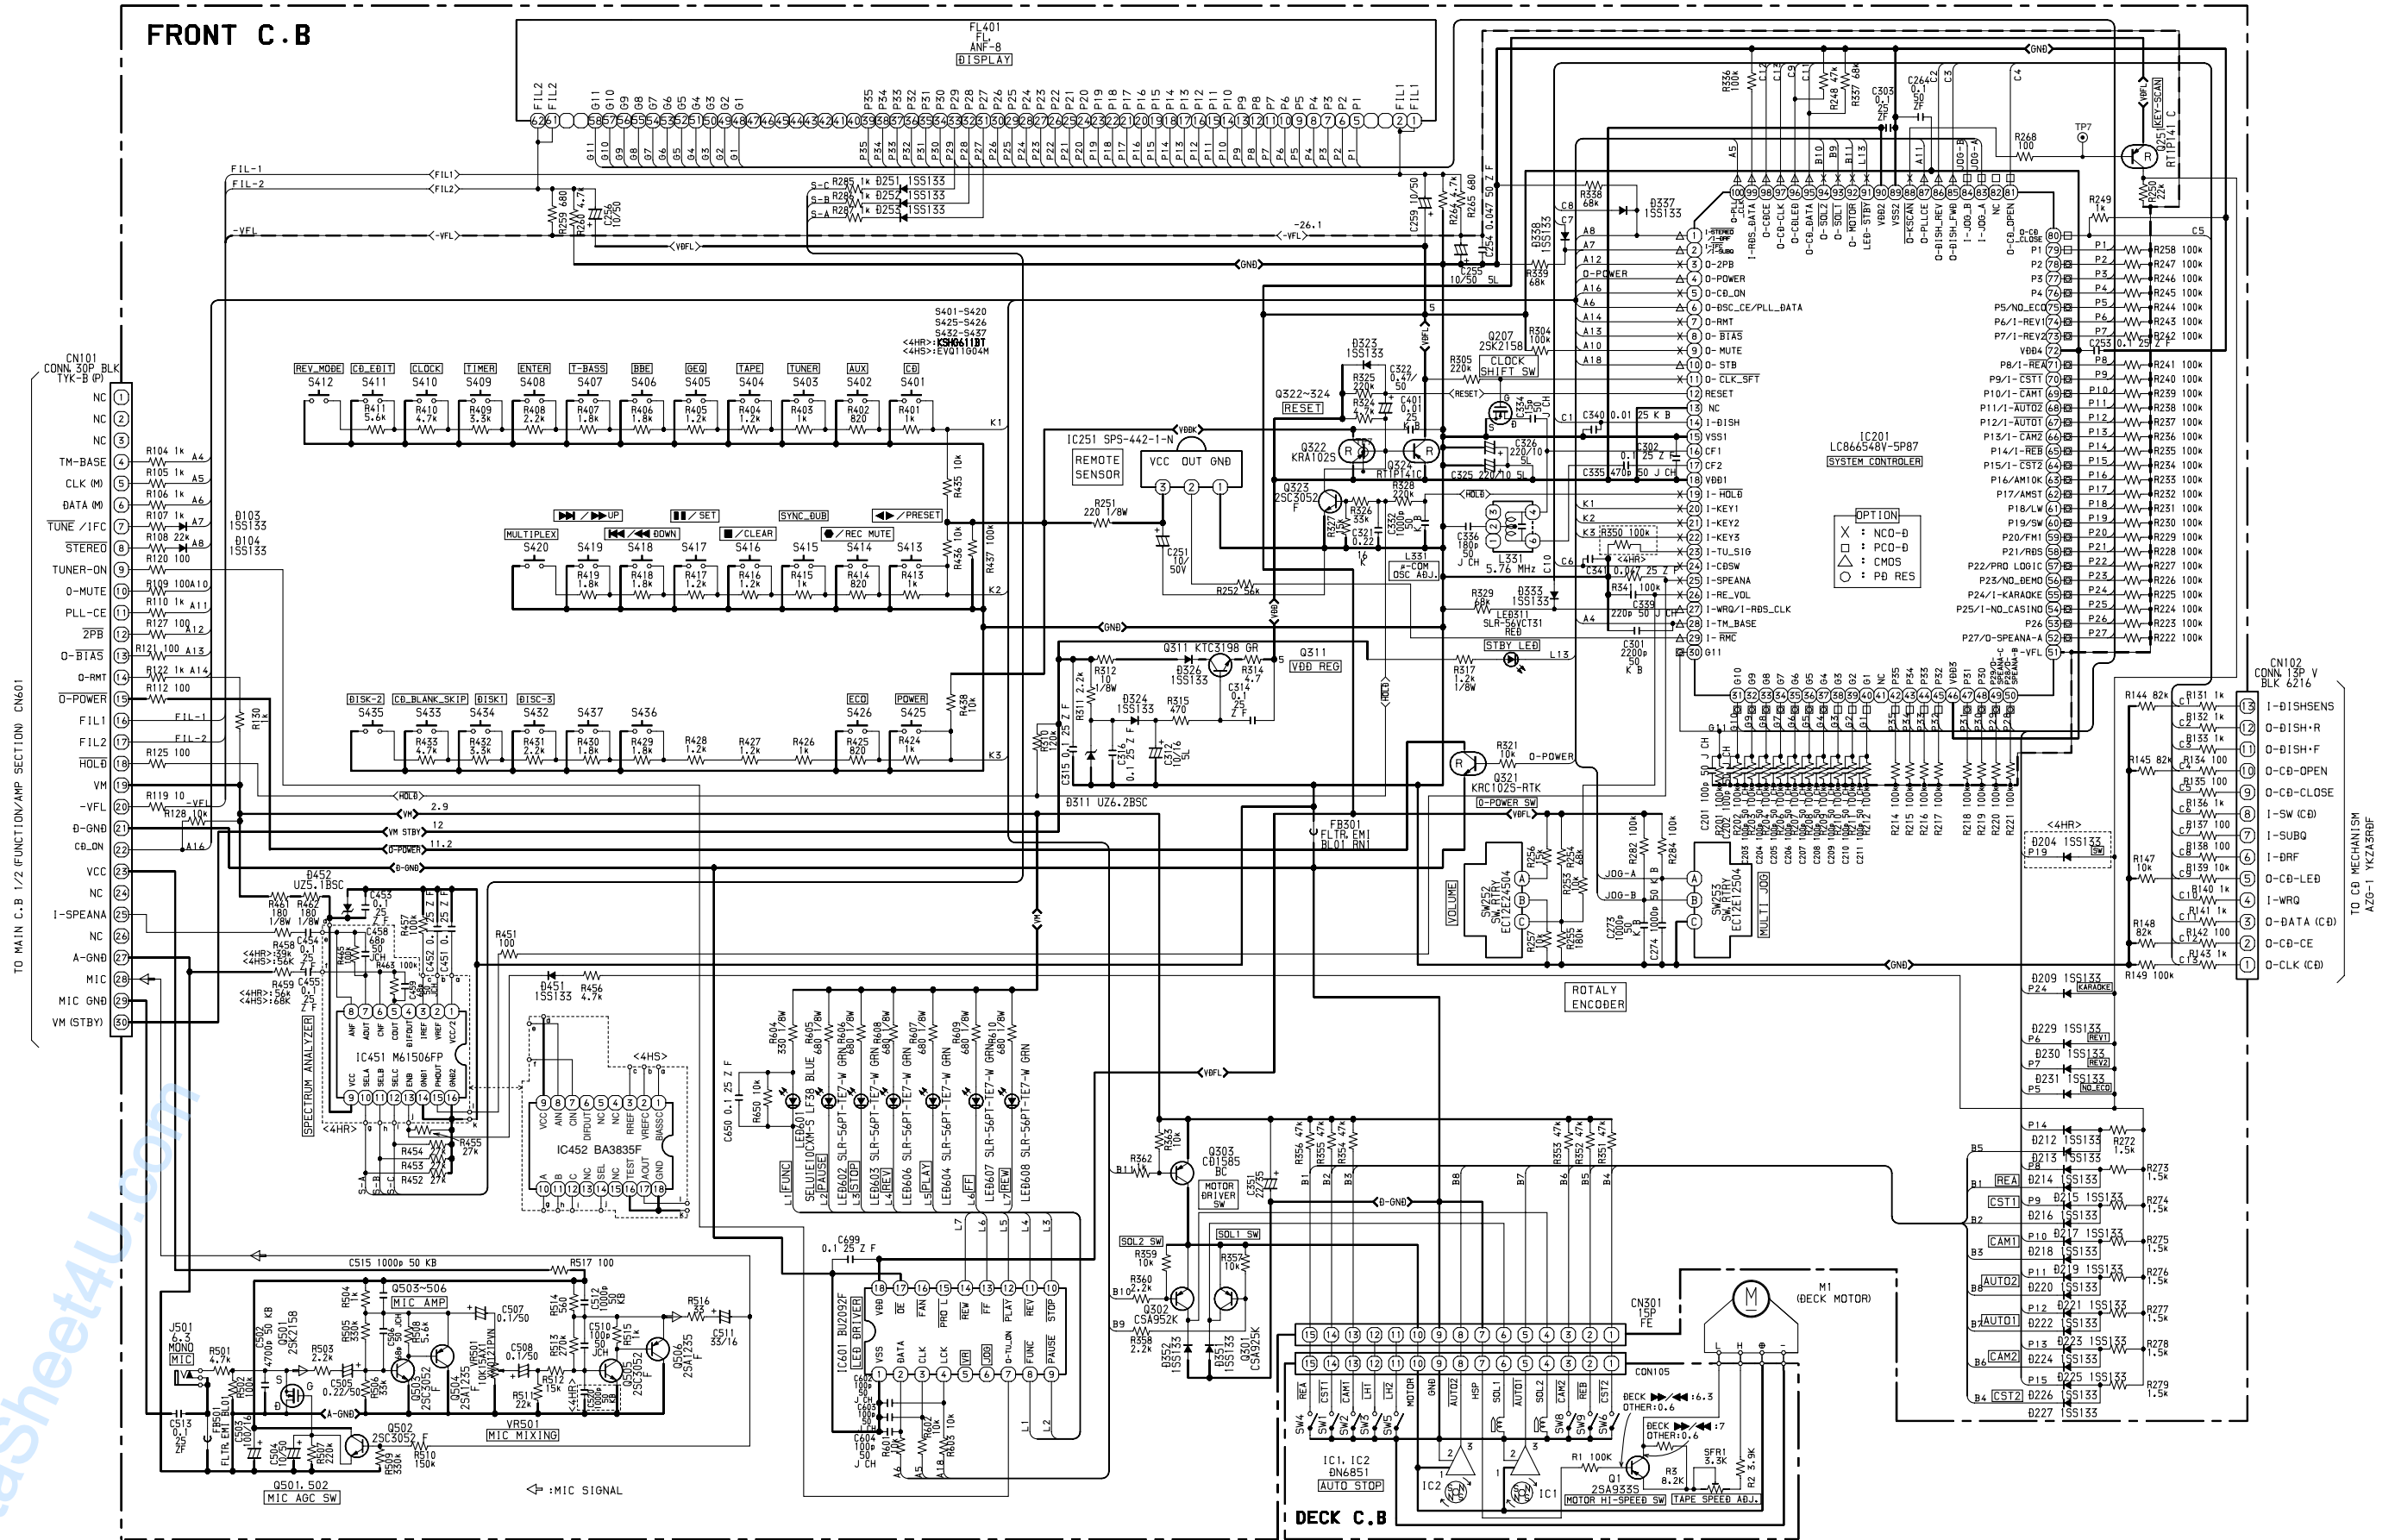


SCHEMATIC DIAGRAM-7 (PT SECTION) <EZ,K>

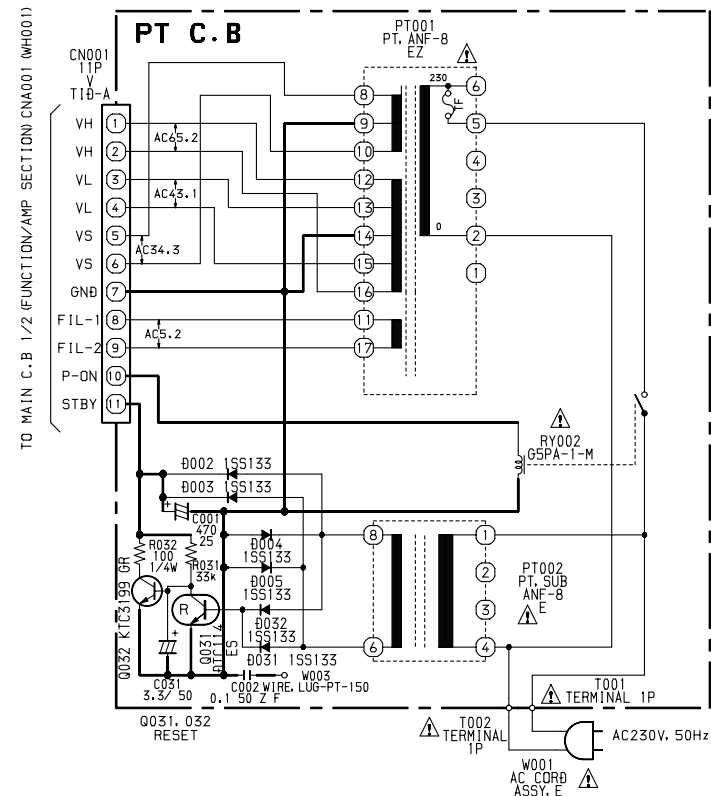


WIRING-5 (PT C.B) <EZ,K>

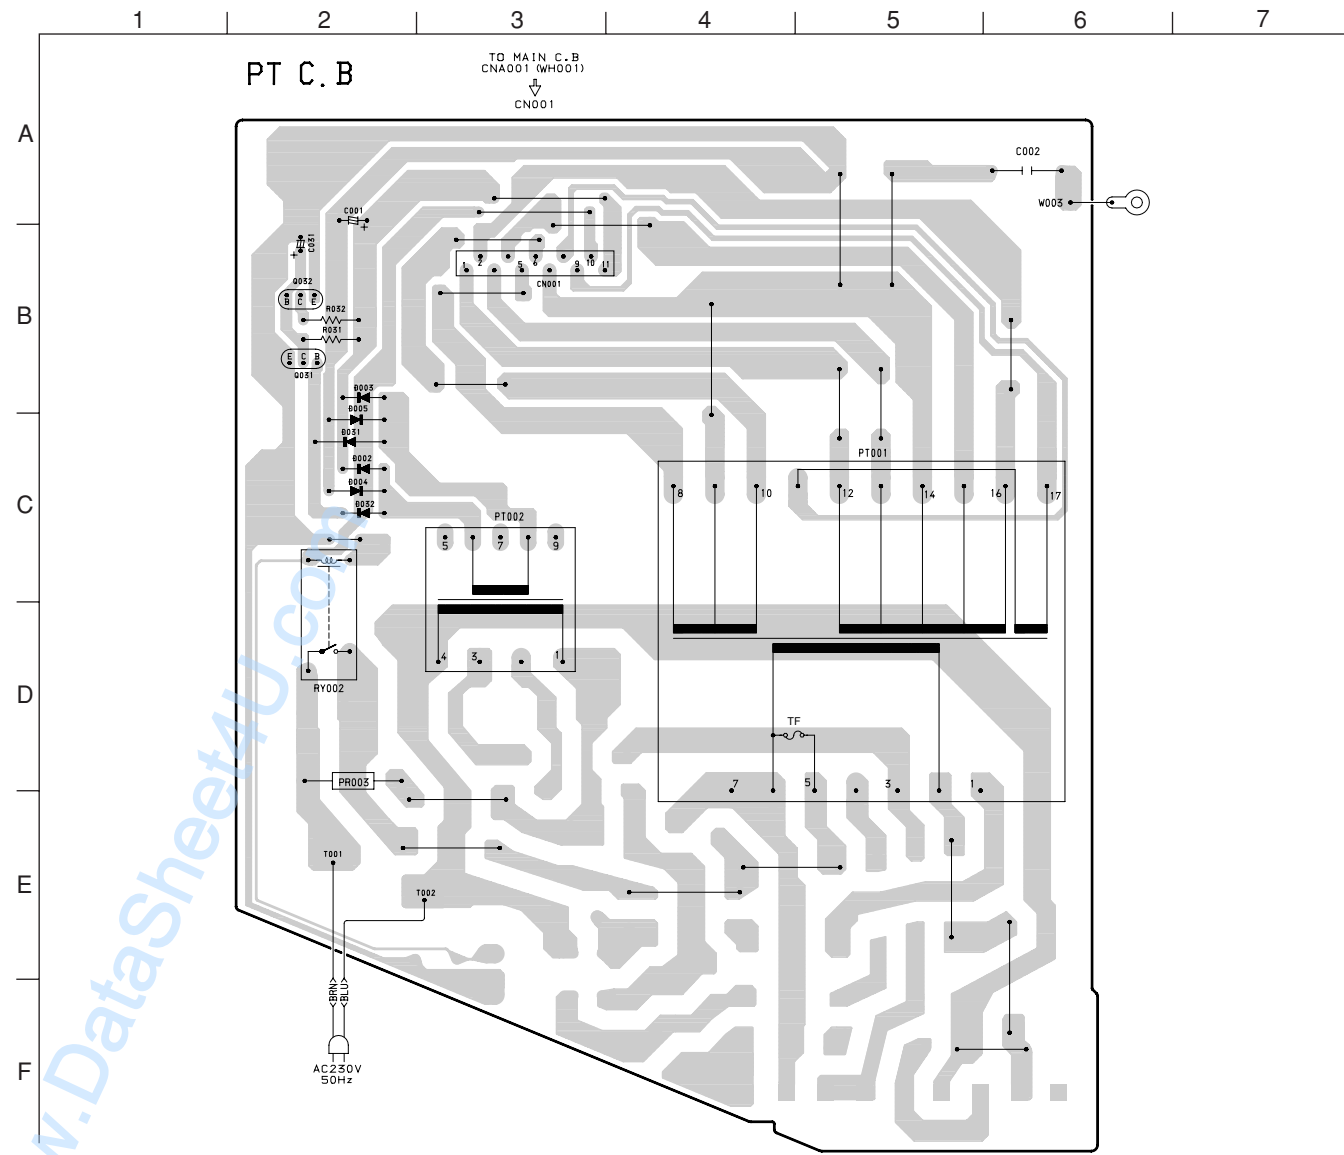


WIRING-6 (DECK C.B) <EZ,K>

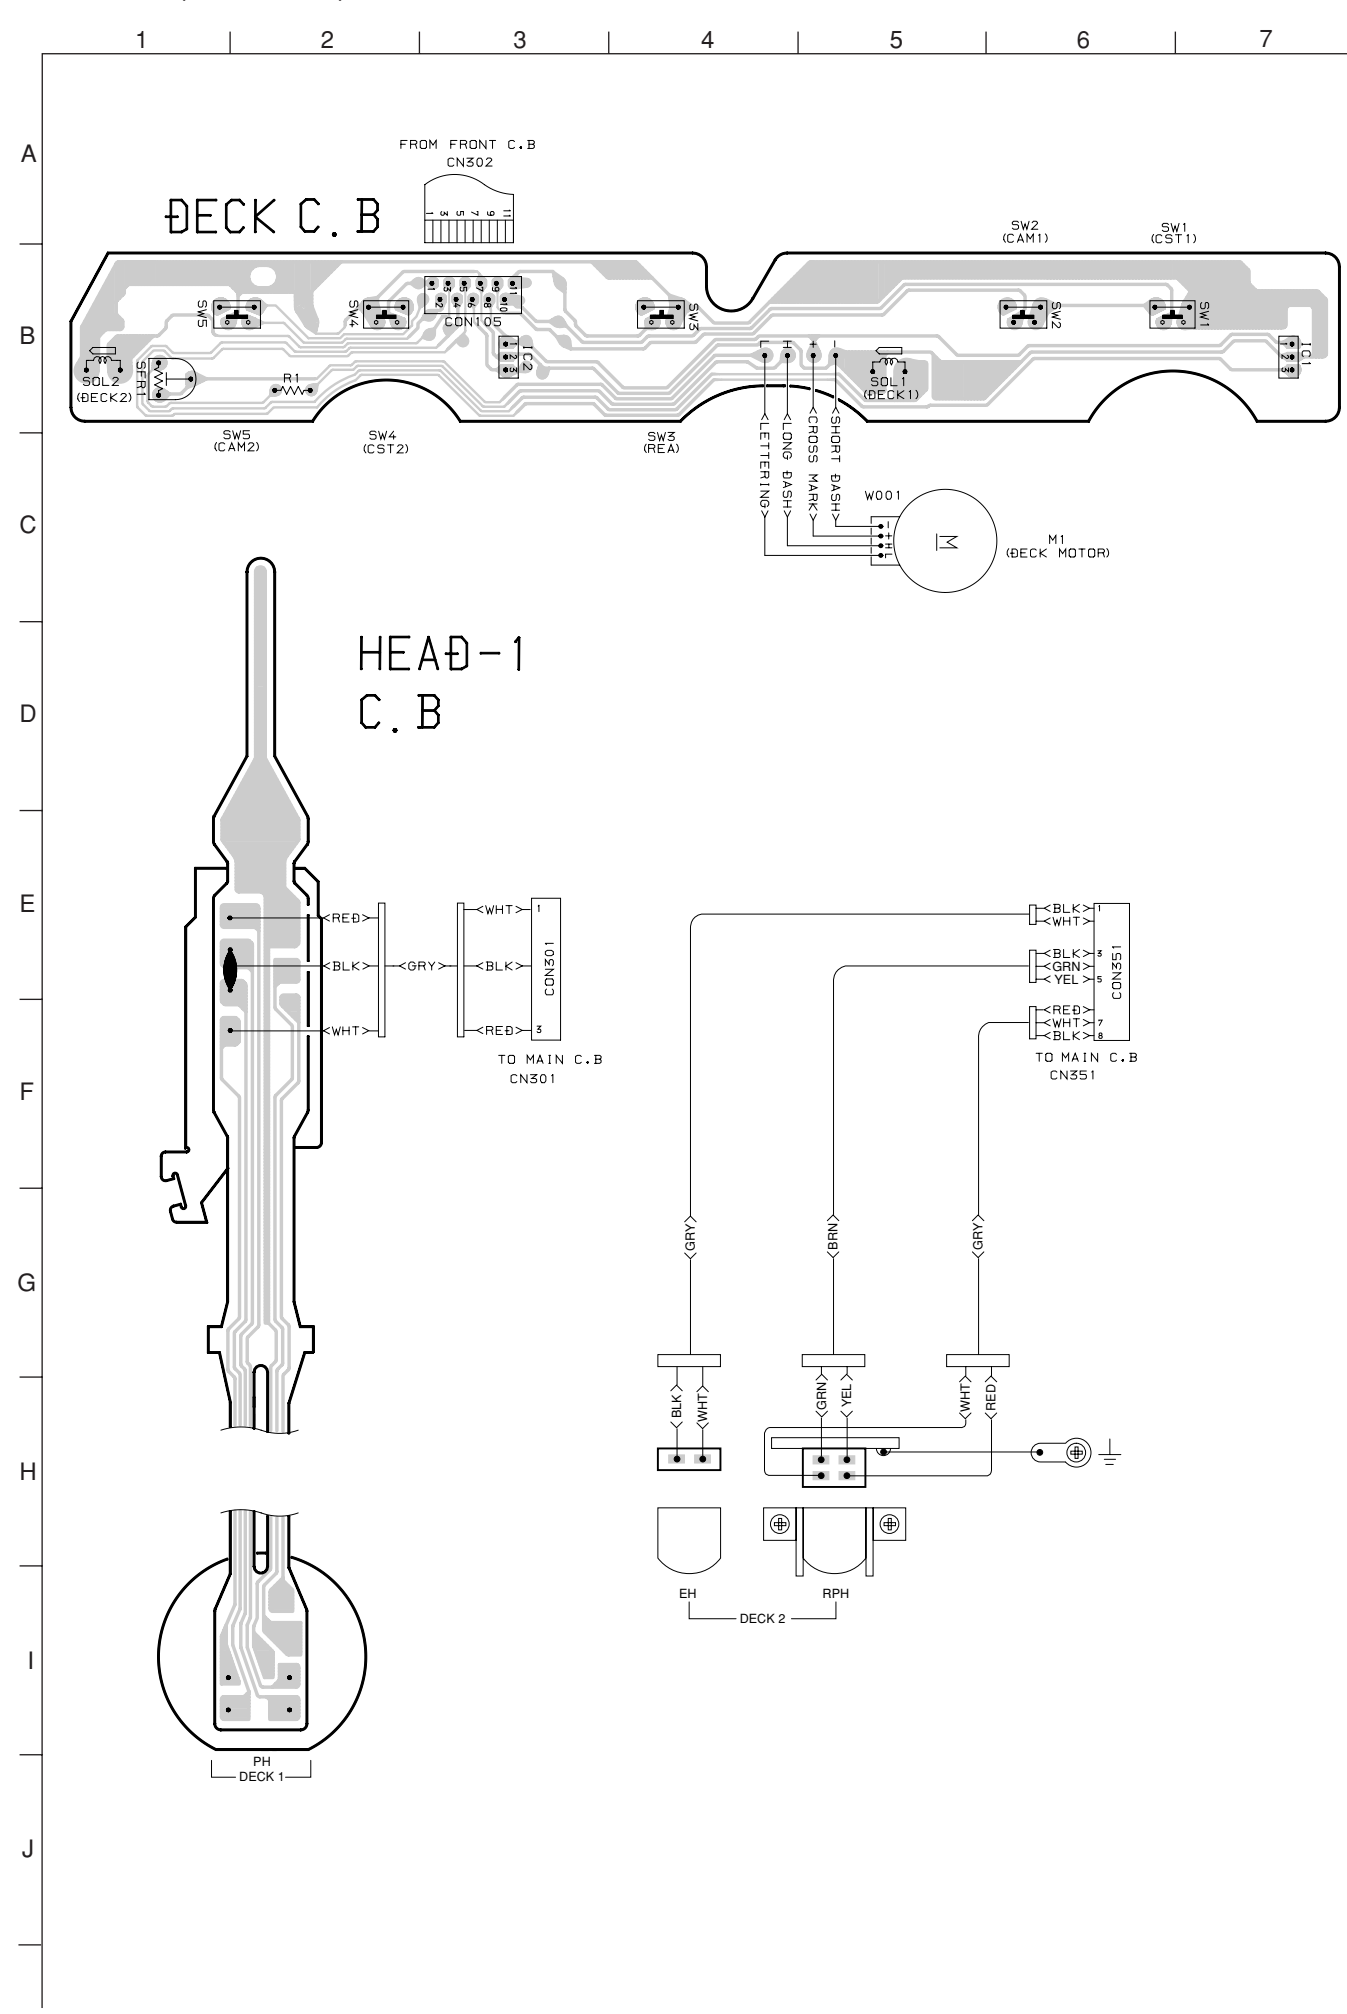


SCHEMATIC DIAGRAM-8 (PT SECTION) <HS, HR>

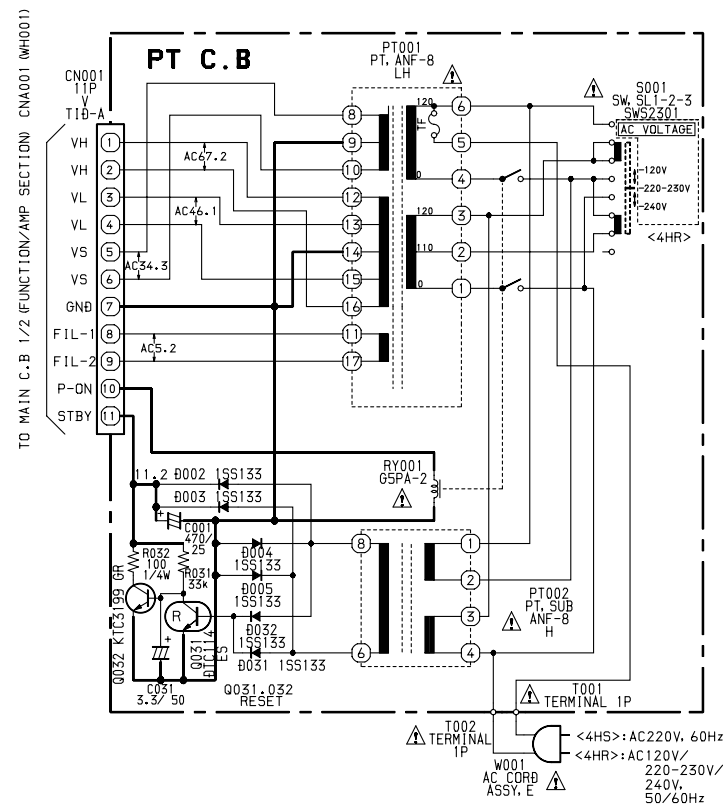


WIRING-7 (PT C.B) <HS>

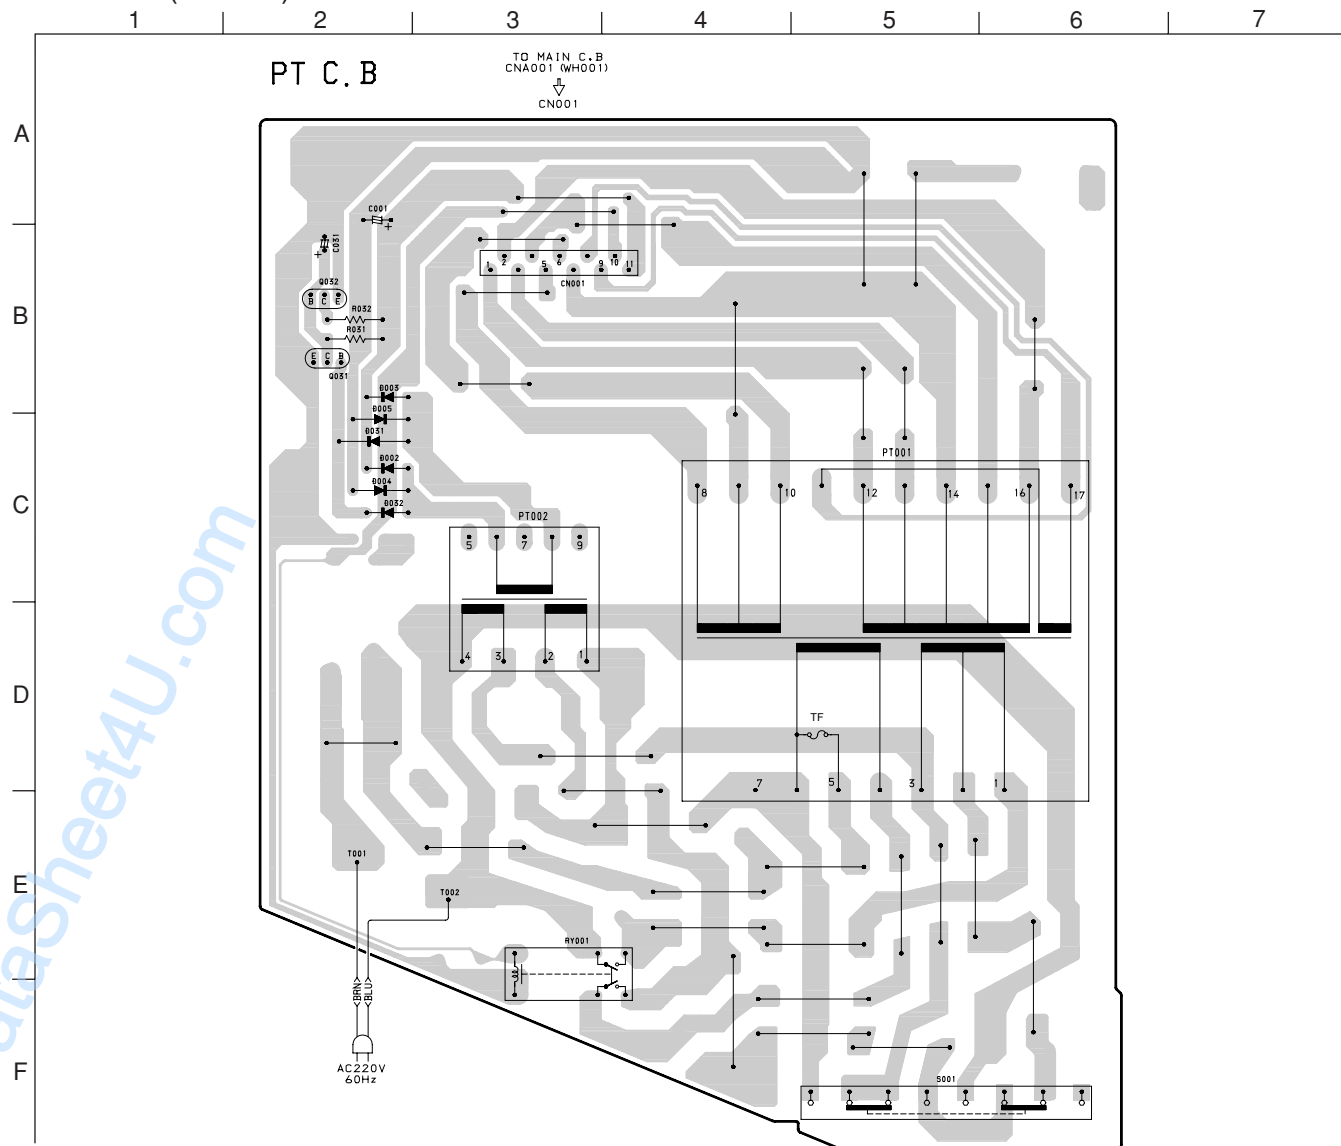

WIRING-8 (PT C.B) <HR>

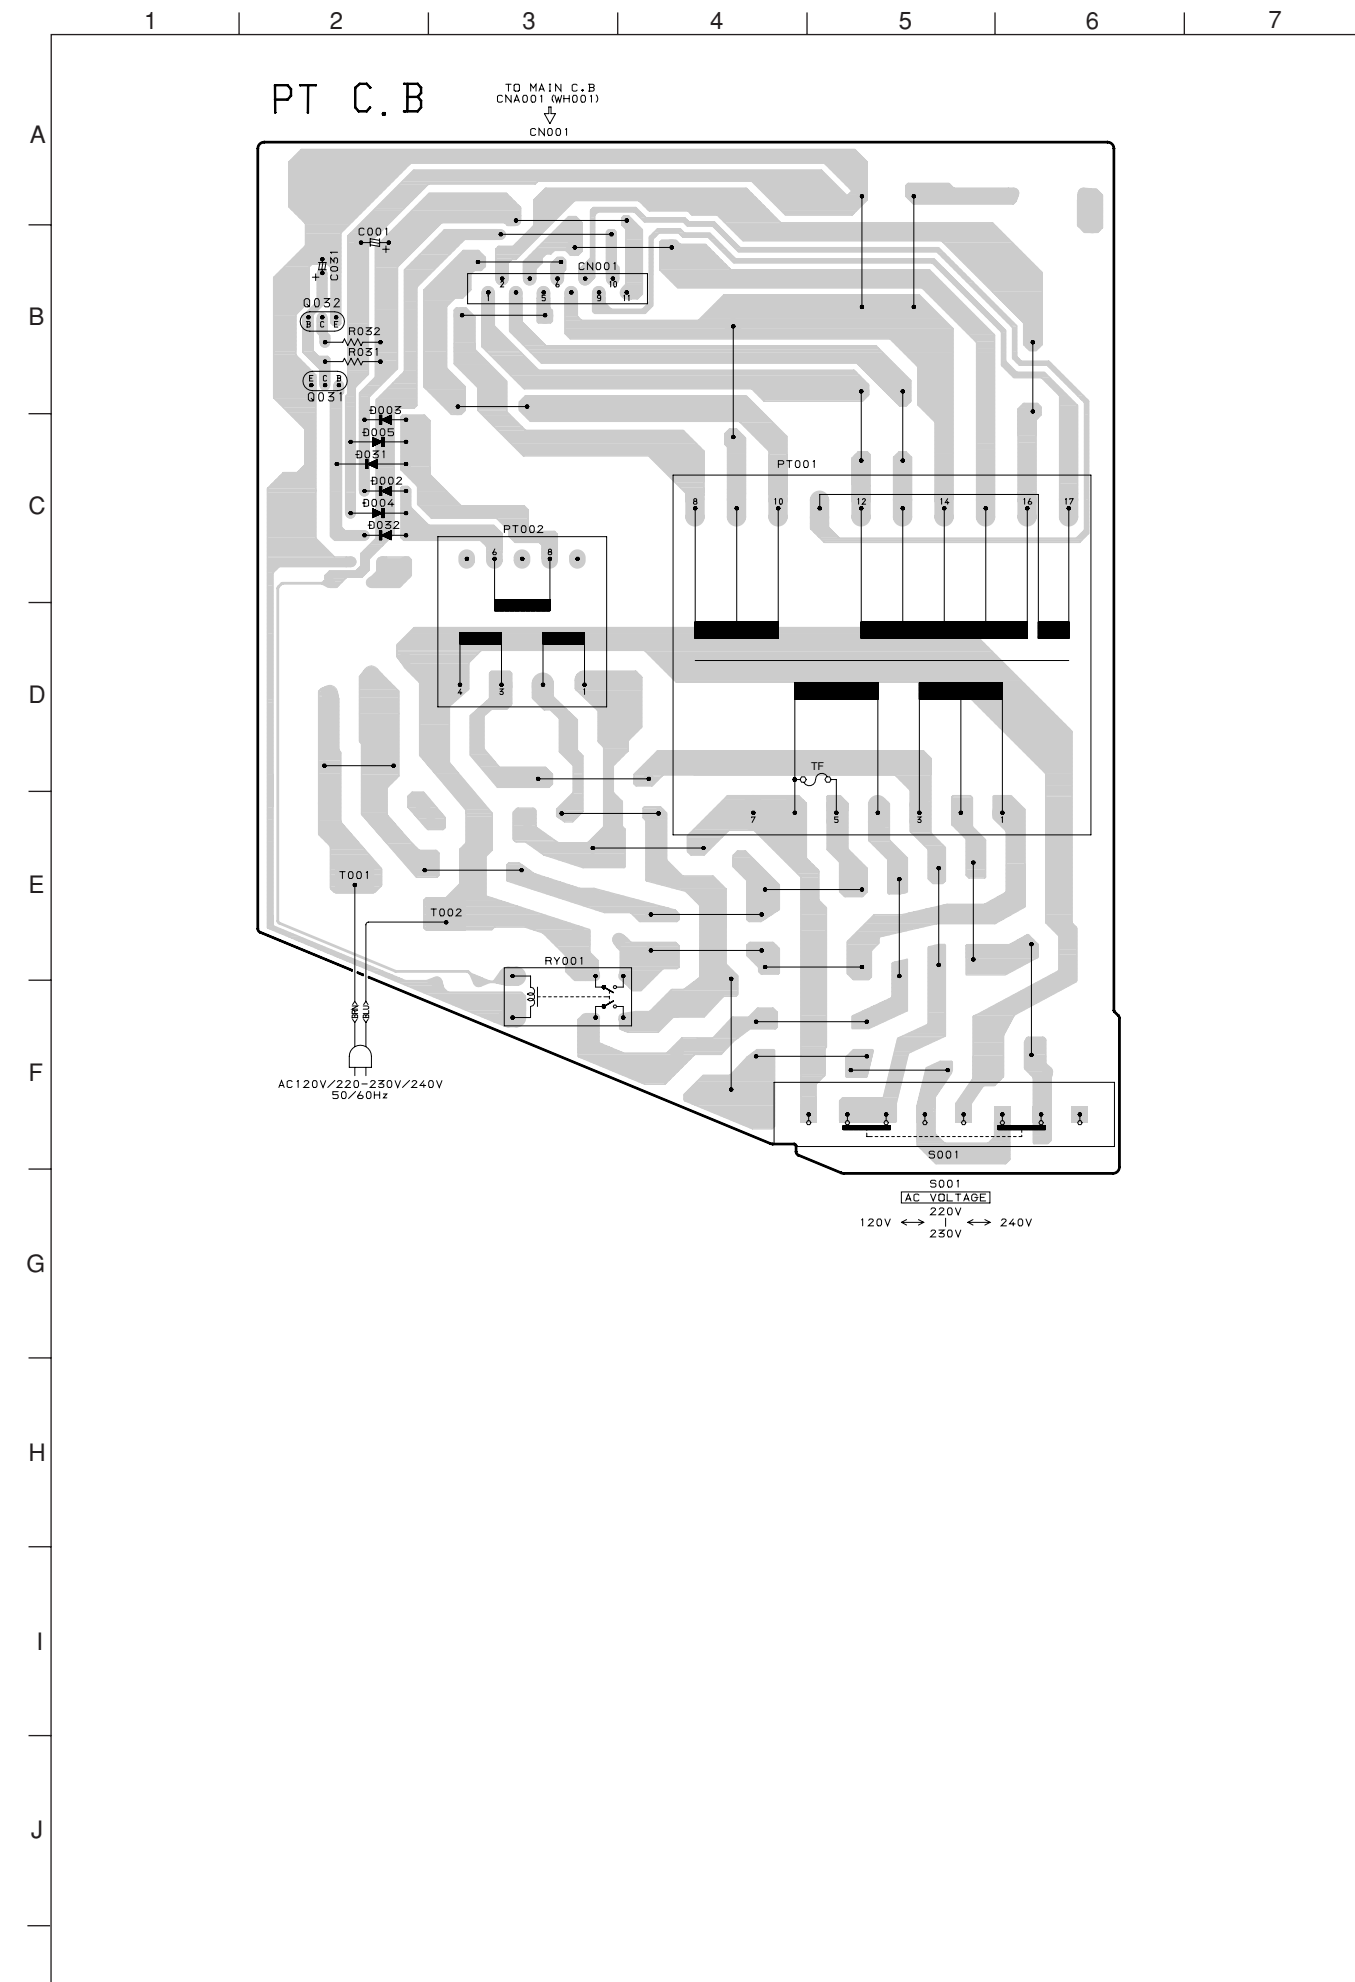


WIRING-9 (DECK C.B) <HS, HR>

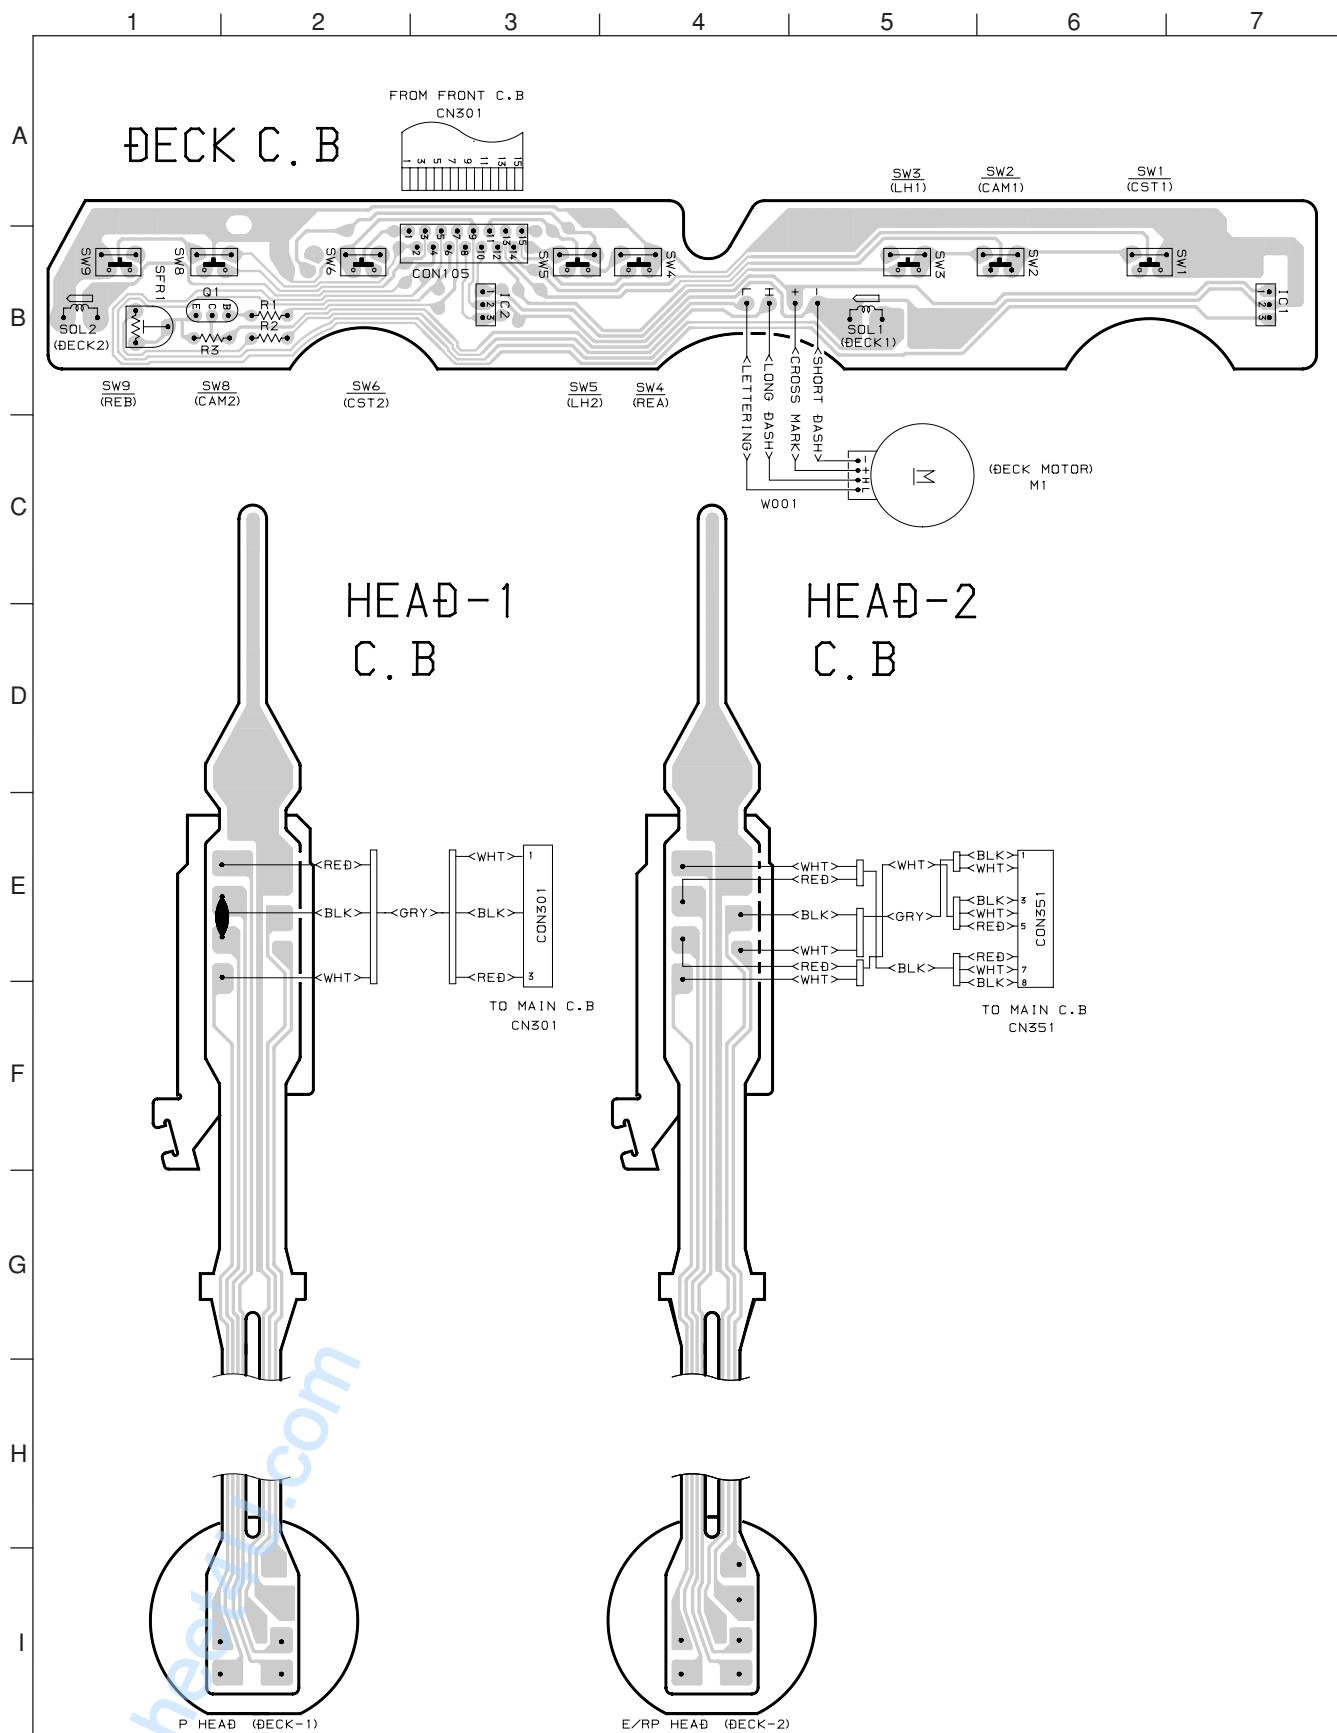


IC BLOCK DIAGRAM


IC, LA1844

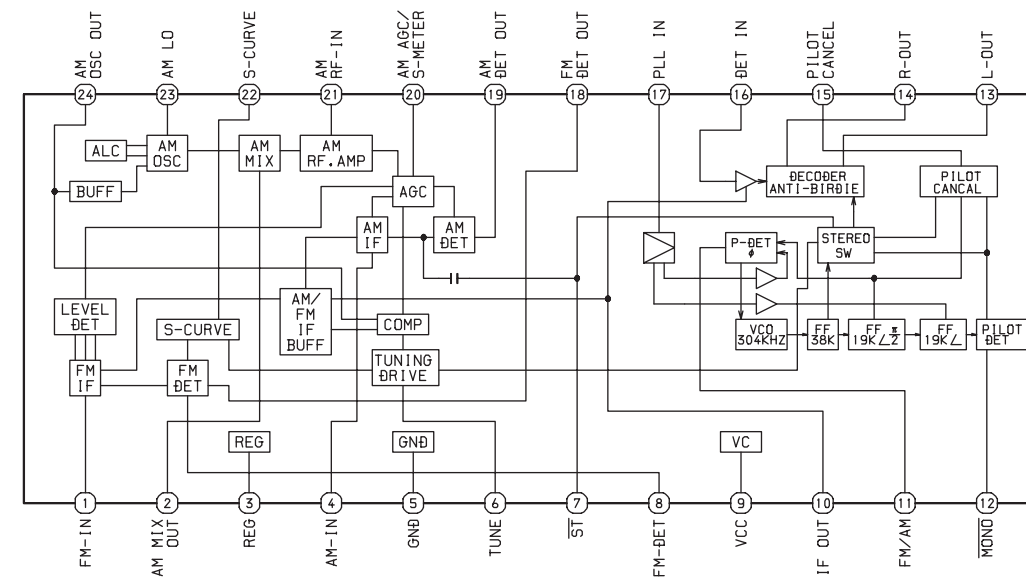


IC, LC72131D

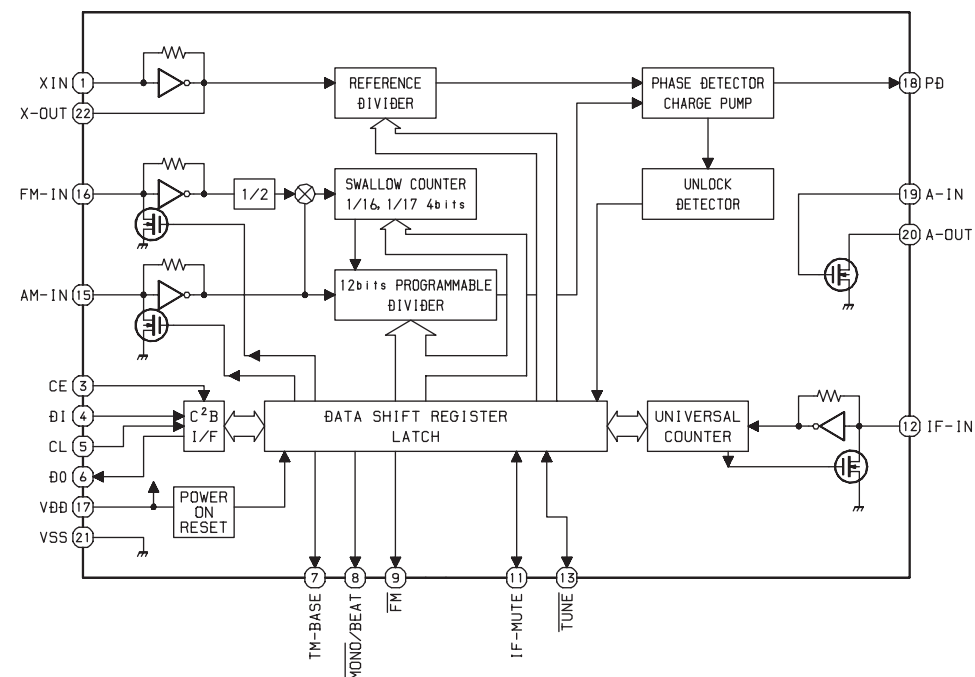


IC, BA3835F

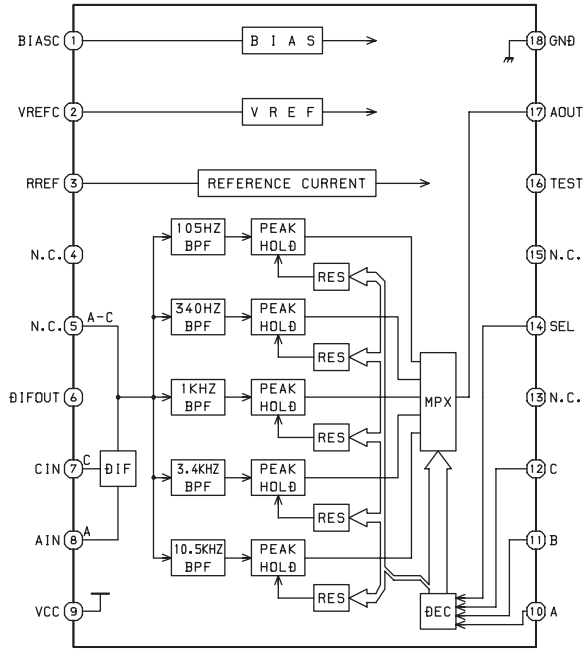


IC, BU2092F

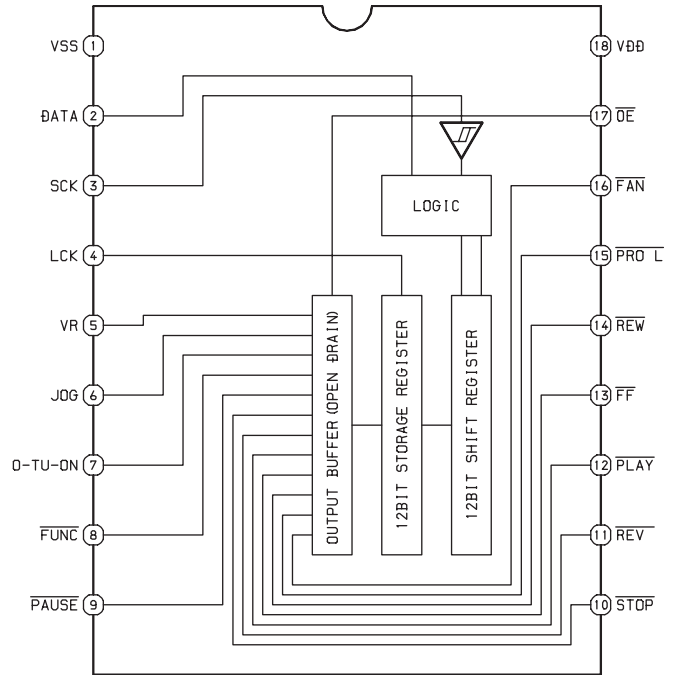

IC, M61503FP

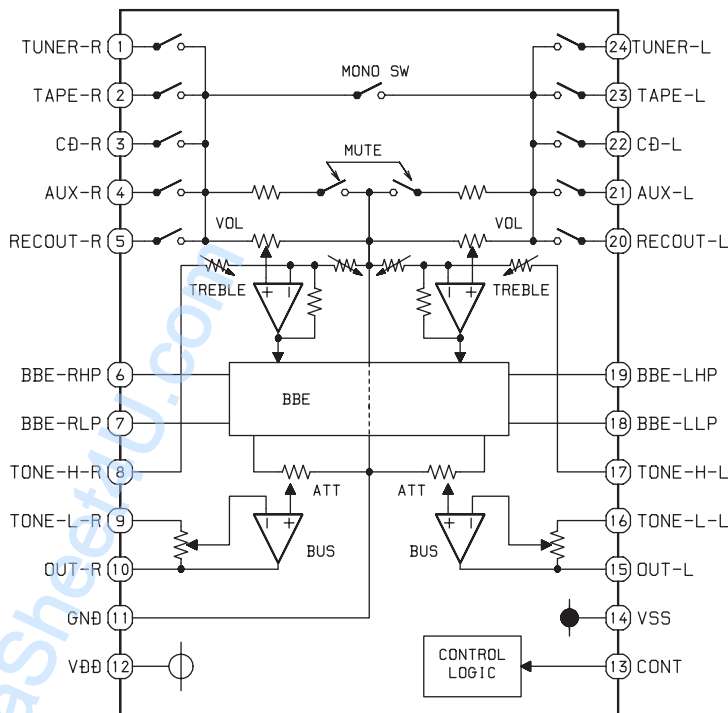

IC, M61506FP

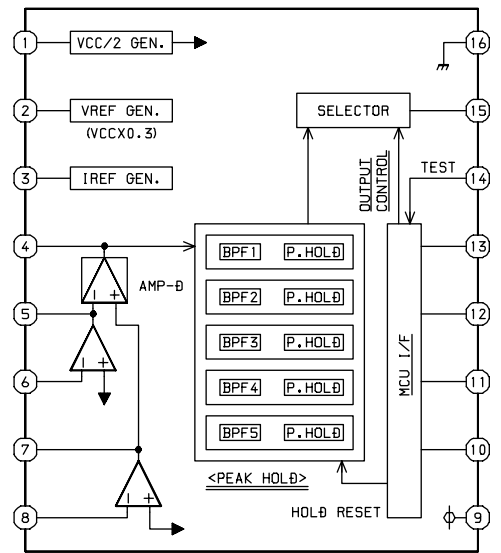


IC DESCRIPTION

IC, LC866560W-5P89 <56EZ>, LC866548V-5P87 <Except 56EZ>


| Pin No. | Pin Name | I/O | Description |
|---------|-----------------|-----|---|
| 1 | I-STEREO/I-DRF | I | Stereo detected input/CD DRF input |
| 2 | I-IFC/I-SUBQ | I | Tune IF count serial data input/CD SUBQ input |
| 3 | O-2PB | O | Deck 2 playback switch output |
| 4 | O-POWER | O | System power supply ON/OFF output |
| 5 | O-CD-ON | O | CD power ON/OFF output |
| 6 | O-PLL_DATA | O | LED driver, Tuner IC, Function IC data output |
| 7 | O-RMT | O | Deck 2 REC MUTE output |
| 8 | O-BIAS | O | Deck 2 bias ON/OFF output |
| 9 | O-MUTE | O | System mute ON/OFF output |
| 10 | O-STB | O | Latch strobe output for LED driver IC |
| 11 | O-CLK_SFT | O | Micon clock shift output |
| 12 | RESET | I | System reset |
| 13 | NC | - | Not connected |
| 14 | I-DISH | I | CD turntable photo sensor A/D converter input |
| 15 | VSS1 | - | GND |
| 16 | CF1 | - | 5.76 MHz oscillator circuit |
| 17 | CF2 | - | 5.76 MHz oscillator circuit |
| 18 | VDD1 | - | Power supply input |
| 19 | I-HOLD | I | Power failure detected input |
| 20 | I-KEY1 | I | KEY input (A/D) |
| 21 | I-KEY2 | I | KEY input (A/D) |
| 22 | I-KEY3 | I | KEY input (A/D) |
| 23 | I-TU_SIG | I | Tuner signal input |
| 24 | I-CDSW | I | CD mechanical switch A/D converter input |
| 25 | I-SPEANA | I | A/D input for spectrum analyzer display |
| 26 | I-RE_VOL | I | Rotary encoder input (VOL) |
| 27 | I-WRQ/I-RDS_CLK | I | CD WRQ input/Tuner RDS clock input |
| 28 | I-TM_BASE | I | Reference clock input for timer watch |
| 29 | I-RMC | I | System remotecontrol signal input |
| 30 ~ 40 | G11 ~ G1 | O | FL GRID output G11 ~ G1 |
| 41 | NC | - | Not connected |
| 42 ~ 45 | P35 ~ P32 | O | FL SEGMENT output P35 ~ P32 |
| 46 | VDD3 | - | Power supply input |
| 47 ~ 48 | P31 ~ P30 | O | FL SEGMENT output P31 ~ P30 |
| 49 | P29/O-SPEANA-C | O | FL SEGMENT output P29/Spectrum analyzer band switching output |
| 50 | P28/O-SPEANA-B | O | FL SEGMENT output P28/Spectrum analyzer band switching output |
| 51 | VFL | - | Power supply input for FL display |
| 52 | P27/O-SPEANA-A | O | FL SEGMENT output P27/Spectrum analyzer band switch output |
| 53 | P26 | O | FL SEGMENT output P26 |
| 54 | P25/I-NO_CASINO | I/O | FL SEGMENT output P25/NO CASINO DEMO input to diode |
| 55 | P24/I-KARAOKE | I/O | FL SEGMENT output P24/KARAOKE input to diode |
| 56 | P23/NO_DEMO | I/O | FL SEGMENT output P23/NO DEMO input to diode |

| Pin No. | Pin Name | I/O | Description |
|---------|---------------|-----|--|
| 57 | P22/PRO LOGIC | I/O | FL SEGMENT output P22/PROLOGIC input to diode (not used) |
| 58 | P21/RDS | I/O | FL SEGMENT output P21/RDS input to diode |
| 59 | P20/FM1 | I/O | FL SEGMENT output P20/FM1 input to diode |
| 60 | P19/SW | I/O | FL SEGMENT output P19/SW input to diode |
| 61 | P18/LW | I/O | FL SEGMENT output P18/LW input to diode |
| 62 | P17/AMST | I/O | FL SEGMENT output P17/AMST input to diode |
| 63 | P16/AM10K | I/O | FL SEGMENT output P16/AM10K input to diode |
| 64 | P15/I-CST2 | I/O | FL SEGMENT output P15/DECK2 cassette detect switch data input |
| 65 | P14/I-REB | I/O | FL SEGMENT output P14/DECK2 side-B record OK switch data input |
| 66 | P13/I-CAM2 | I/O | FL SEGMENT output P13/DECK2 CAM switch signal input |
| 67 | P12/I-AUTO1 | I/O | FL SEGMENT output P12/DECK1 AUTO STOP signal input |
| 68 | P11/I-AUTO2 | I/O | FL SEGMENT output P11/DECK2 AUTO STOP signal input |
| 69 | P10/I-CAM1 | I/O | FL SEGMENT output P10/DECK1 CAM switch data input |
| 70 | P9/I-CST1 | I/O | FL SEGMENT output P9/DECK1 cassette detect switch data input |
| 71 | P8/I-REA | I/O | FL SEGMENT output P8/DECK2 side A record OK switch data input |
| 72 | VDD4 | - | Power supply input |
| 73 | P7/I-REV2 | I/O | FL SEGMENT output P7/DECK2 REVERSE mode input to diode |
| 74 | P6/I-REV1 | I/O | FL SEGMENT output P6/DECK1 REVERSE mode input to diode |
| 75 | P5/NO_ECO | I/O | FL SEGMENT output P5/NO ECO MODE input to diode |
| 76 ~ 79 | P4 ~ P1 | O | FL SEGMENT output P4 ~ P1 |
| 80 | O-CD CLOSE | O | CD TRAY CLOSE data output |
| 81 | O-CD OPEN | O | CD TRAY OPEN data output |
| 82 | NC | - | Not connected |
| 83 | I-JOG_A | I | Rotary encoder A input (JOG) |
| 84 | I-JOG_B | I | Rotary encoder B input (JOG) |
| 85 | O-DISH_FWD | O | CD turntable forward rotation output |
| 86 | O-DISH_REV | O | CD turntable reverse rotation output |
| 87 | O-PLL_CE | O | PLL IC chip enable output |
| 88 | O-KSCAN | O | Switch SCAN timing output |
| 89 | VSS2 | - | GND |
| 90 | VDD2 | - | Power supply input |
| 91 | LED-STBY | O | STAND BY LED (Echo mode) output |
| 92 | O-MOTOR | O | DECK MOTOR ON/OFF output |
| 93 | O-SOL1 | O | DECK1 soleroid output |
| 94 | O-SOL2 | O | DECK2 soleroid output |
| 95 | O-CD-DATA | O | CD DATA output |
| 96 | O-CD-LED | O | CD LED output |
| 97 | O-CD CLK | O | CD clock output |
| 98 | O-CD CE | O | CD chip enable output |
| 99 | I-RDS_DATA | I | RDS data input |
| 100 | O-PLL_CLK | O | PLL IC CLOCK output |


ADJUSTMENT <EZ, K>

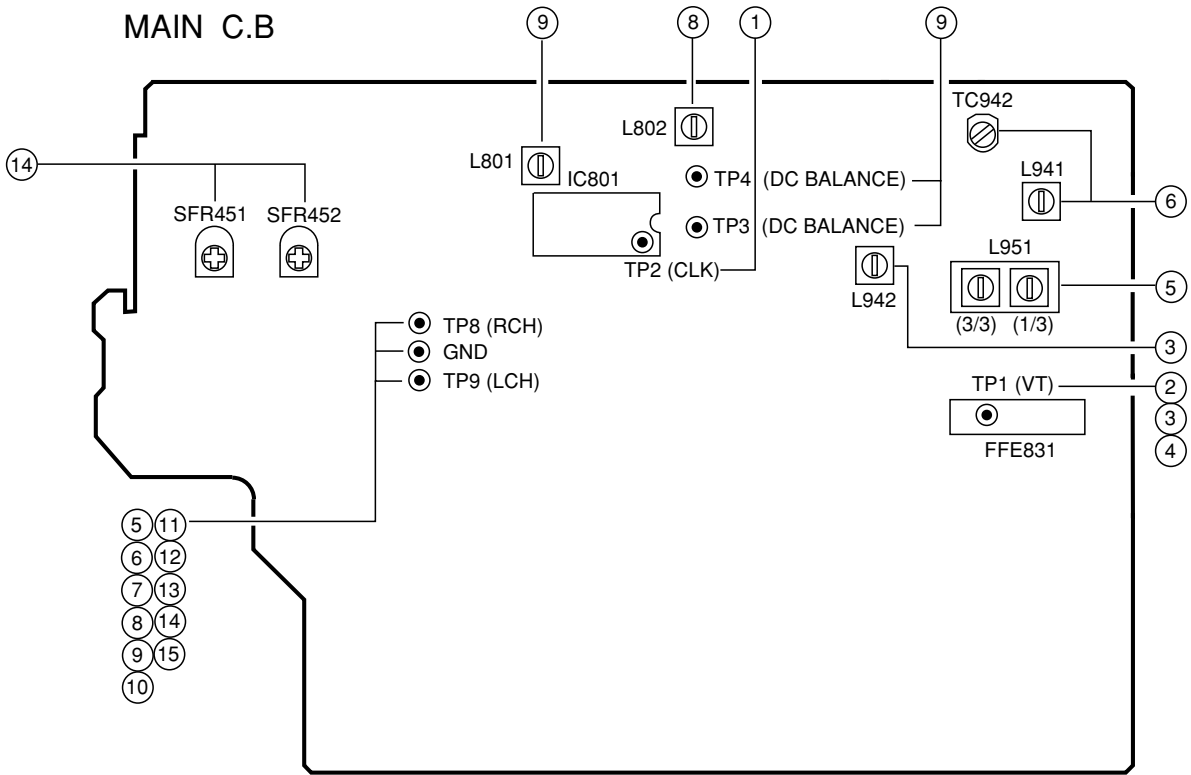


DECK-2 R/P HEAD

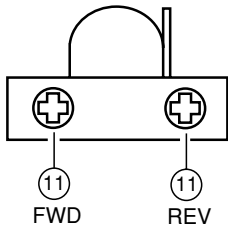


DECK C.B.

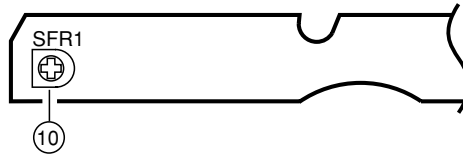

DECK-1 P HEAD

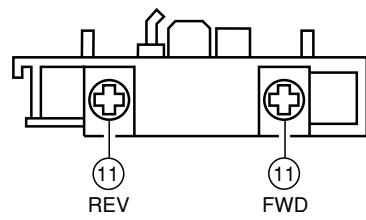

FRONT C.B.

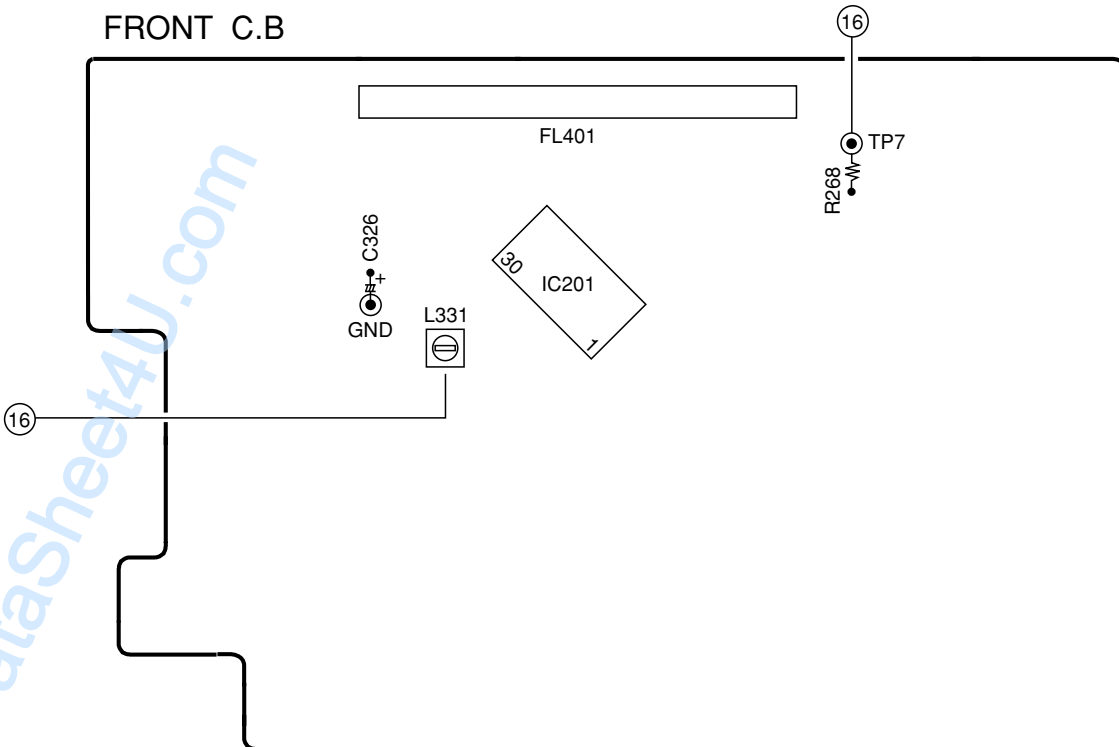




< TUNER SECTION >

1. Clock frequency Check
Settings : • Test point : TP2
Method : Set to AM 1602kHz and check that the test point is 2052kHz \pm 45Hz.
2. MW VT Check
Settings : • Test point : TP1 (VT)
Method : Set to MW 1602kHz, 531kHz and check that the test point is less than 8.0V (1602kHz) and more than 0.6V (531kHz).
3. LW VT Adjustment
Settings : • Test point : TP1 (VT)
• Adjustment location: L942
Method : Set to LW 144kHz and adjust L942 so that the test point is 1.3V \pm 0.05V.
Then set to LW 290kHz and check that the test point is less than 8.0V.
4. FM VT Check
Settings : • Test point : TP1 (VT)
Method : Set to FM 87.5MHz, 108.0MHz and check that the test point is more than 0.5V (87.5MHz) and less than 8.0V (108.0MHz).
5. MW Tracking Adjustment
Settings : • Test point : TP8(Lch), TP9(Rch)
• Adjustment location :
L951(1/3) 999kHz
Method : Set to MW 999kHz and adjust L951(1/3) so that the level at the test point becomes maximum.
6. LW Tracking Adjustment
Settings : • Test point : TP8(Lch), TP9(Rch)
• Adjustment location : L941, TC942
Method : Set up TC942 to center position.
Set to LW 144kHz and adjust L941 so that the level at test point becomes maximum.
Then set to LW 290kHz and adjust TC942 so that the level at test point becomes maximum.
7. FM Tracking Check
Settings : • Test point : TP8(Lch), TP9(Rch)
Method : Set to FM 98.0MHz and check that the test point is less than 13dB μ V.
8. AM IF Adjustment
Settings : • Test point : TP8(Lch), TP9(Rch)
• Adjustment location :
L802 999kHz
9. DC Balance / Mono Distortion Adjustment
Settings : • Test point : TP3, TP4 (DC Balance)
: TP8(Lch), TP9(Rch) (Distortion)
• Adjustment location : L801
• Input level : 60dB μ V
Method : Set to FM 98.0MHz and adjust L801 so that the voltage between TP3 and TP4 becomes 0V \pm 0.3V.
Next, check that the distortion is less than 1.3%.

< DECK SECTION >

10. Tape Speed Adjustment (DECK 2)
Settings : • Test tape : TTA-100
• Test point : TP8(Lch), TP9(Rch)
• Adjustment location : SFR1
Method : Play back the test tape and adjust SFR1 so that the frequency counter reads 3000Hz \pm 5Hz and \pm 45Hz (REV) with respect to forward speed.
 11. Head Azimuth Adjustment (DECK 1, DECK 2)
Settings : • Test tape : TTA-330
• Test point : TP8(Lch), TP9(Rch)
• Adjustment location : Head azimuth adjustment screw
Method : Play back (FWD) the 8kHz signal of the test tape and adjust screw so that the output becomes maximum. Next, perform on REV PLAY mode.
 12. PB Frequency Response Check (DECK 1, DECK 2)
Settings : • Test tape : TTA-300
• Test point : TP8(Lch), TP9(Rch)
Method : Play back the 315Hz and 8kHz signals of the test tape and check that the output ratio of the 8kHz signal with respect to that of the 315Hz signal is within 5dB.
 13. PB Sensitivity Check (DECK 1, DECK 2)
Settings : • Test tape : TTA-200
• Test point : TP8(Lch), TP9(Rch)
Method : Play back the test tape and check that the output level of the test point is 140mV \pm 3dB.
 14. REC/PB Frequency Response Adjustment (DECK 2)
Settings : • Test tape : TTA-602
• Test point : TP8(Lch), TP9(Rch)
• Input signal : 1kHz / 8kHz (LINE IN)
• Adjustment location : SFR451 (Lch)
SFR452 (Rch)
Method : Apply a 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at the TP8, TP9 becomes -20VU. Record and play back the 1kHz and 8kHz signals and adjust SFRs so that the output of the 8kHz signals becomes 0dB \pm 0.5dB with respect to that of the 1kHz signal.
 15. REC/PB Sensitivity Check (DECK 2)
Settings : • Test tape : TTA-602
• Test point : TP8(Lch), TP9(Rch)
• Input signal : 1kHz (LINE IN)
Method : Apply a 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at TP8, TP9 becomes 0VU. Record and play back the 1kHz signals and check that the output is -2dB \pm 3.0dB.
- < FRONT SECTION >
16. μ -CON OSC Adjustment
Settings : • Test point : TP7 and GND
• Adjustment location : L331
Method : Insert AC plug while pressing POWER and TUNER function keys. Adjust L331 so that the frequency at the test point is 153.84Hz \pm 0.15Hz.

ADJUSTMENT <HS>

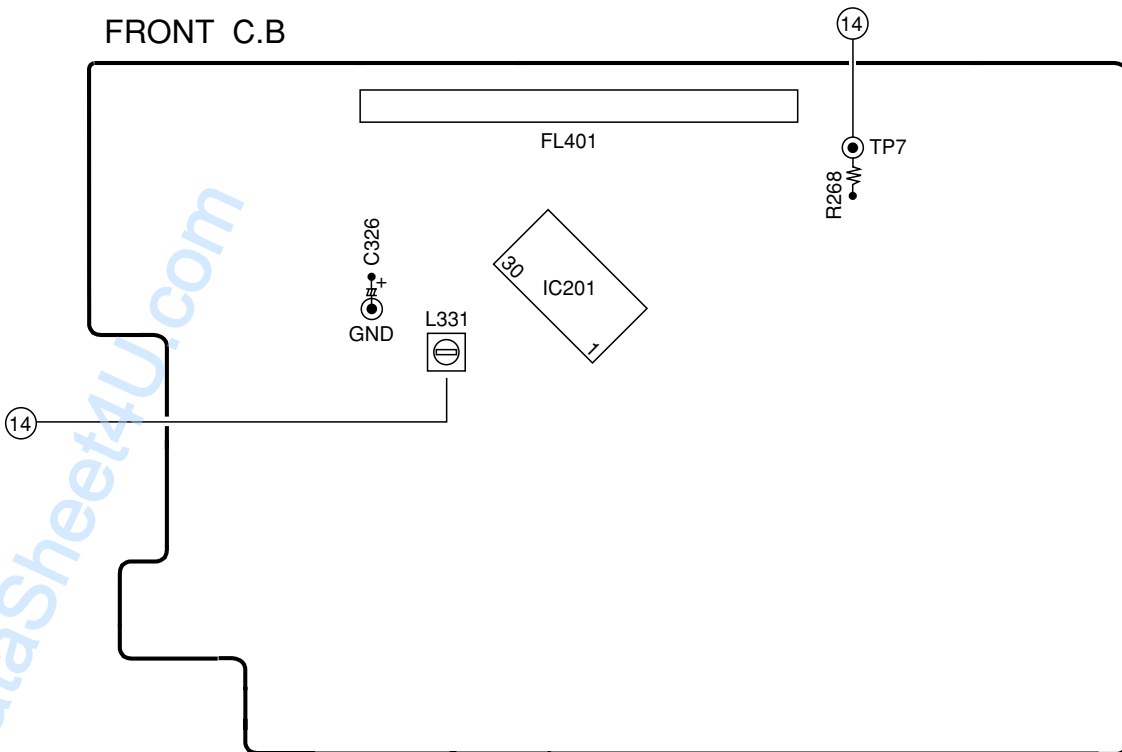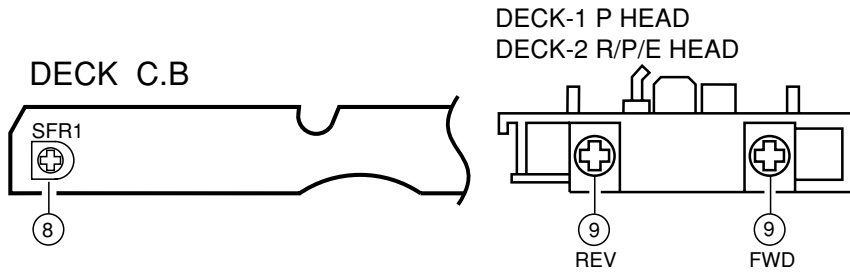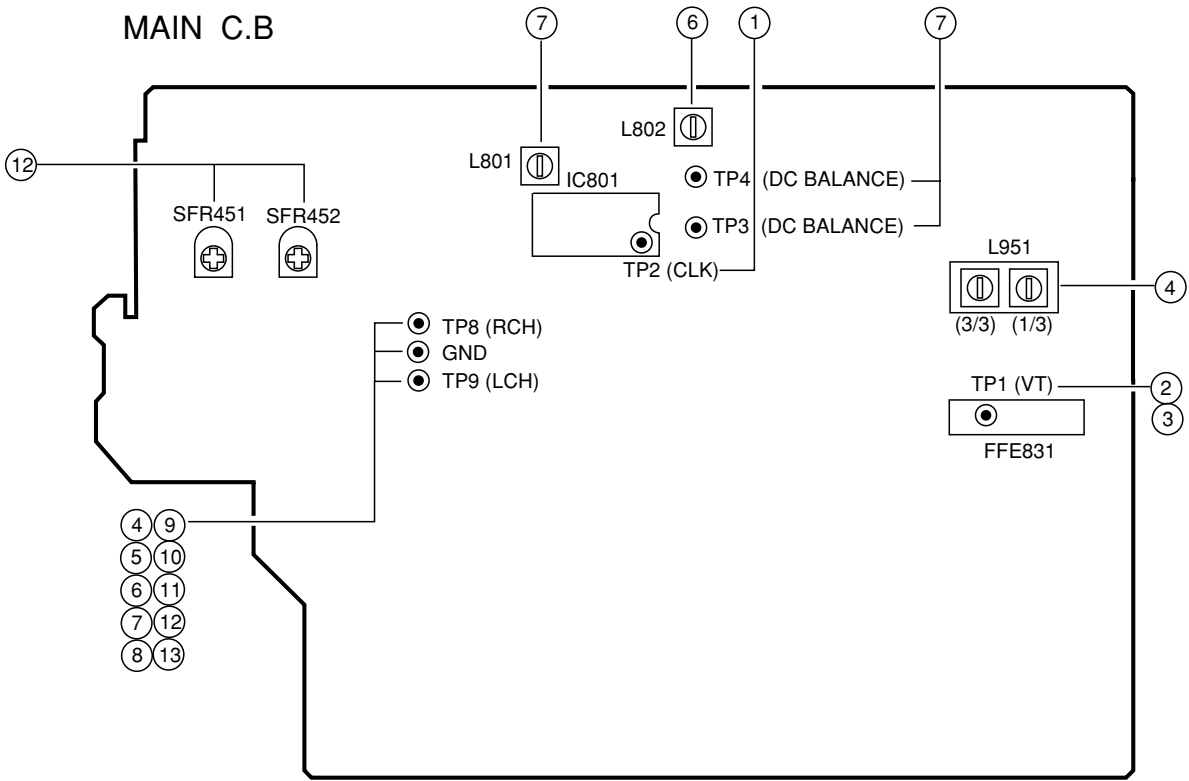

< TUNER SECTION >

1. Clock frequency Check
Settings : • Test point : TP2
Method : Set to AM 1602kHz and check that the test point is 2052kHz \pm 45Hz.
2. AM VT Check
Settings : • Test point : TP1 (VT)
Method : Set to AM 1710kHz, 530kHz and check that the test point is less than 8.5V (1710kHz) and more than 0.6V (530kHz).
3. FM VT Check
Settings : • Test point : TP1 (VT)
Method : Set to FM 87.5MHz, 108.0MHz and check that the test point is more than 0.5V (87.5MHz) and less than 8.0V (108.0MHz).
4. AM Tracking Adjustment
Settings : • Test point : TP8(Lch), TP9(Rch)
• Adjustment location :
L951(1/3) 1000kHz
Method : Set to AM 1000kHz and adjust L951(1/3) so that the level at the test point becomes maximum.
5. FM Tracking Check
Settings : • Test point : TP8(Lch), TP9(Rch)
Method : Set to FM 98.0MHz and check that the test point is less than 9dB μ V.
6. AM IF Adjustment
Settings : • Test point : TP8(Lch), TP9(Rch)
• Adjustment location :
L802 1000kHz
7. DC Balance / Mono Distortion Adjustment
Settings : • Test point : TP3, TP4 (DC Balance)
: TP8(Lch), TP9(Rch) (Distortion)
• Adjustment location : L801
• Input level : 60dB μ V
Method : Set to FM 98.0MHz and adjust L801 so that the voltage between TP3 and TP4 becomes 0V \pm 0.3V.
Next, check that the distortion is less than 1.3%.

< DECK SECTION >




8. Tape Speed Adjustment (DECK 2)
Settings : • Test tape : TTA-100
• Test point : TP8(Lch), TP9(Rch)
• Adjustment location : SFR1
Method : Play back the test tape and adjust SFR1 so that the frequency counter reads 3000Hz \pm 5Hz and \pm 45Hz (REV) with respect to forward speed.
9. Head Azimuth Adjustment (DECK 1, DECK 2)
Settings : • Test tape : TTA-330
• Test point : TP8(Lch), TP9(Rch)
• Adjustment location : Head azimuth adjustment screw
Method : Play back (FWD) the 8kHz signal of the test tape and adjust screw so that the output becomes maximum. Next, perform on REV PLAY mode.

10. PB Frequency Response Check (DECK 1, DECK 2)
Settings : • Test tape : TTA-300
• Test point : TP8(Lch), TP9(Rch)
Method : Play back the 315Hz and 8kHz signals of the test tape and check that the output ratio of the 8kHz signal with respect to that of the 315Hz signal is within 5dB.
11. PB Sensitivity Check (DECK 1, DECK 2)
Settings : • Test tape : TTA-200
• Test point : TP8(Lch), TP9(Rch)
Method : Play back the test tape and check that the output level of the test point is 140mV \pm 3dB.
12. REC/PB Frequency Response Adjustment (DECK 2)
Settings : • Test tape : TTA-602
• Test point : TP8(Lch), TP9(Rch)
• Input signal : 1kHz / 8kHz (LINE IN)
• Adjustment location : SFR451 (Lch)
SFR452 (Rch)
Method : Apply a 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at the TP8, TP9 becomes -20VU. Record and play back the 1kHz and 8kHz signals and adjust SFRs so that the output of the 8kHz signals becomes 0dB \pm 0.5dB with respect to that of the 1kHz signal.
13. REC/PB Sensitivity Check (DECK 2)
Settings : • Test tape : TTA-602
• Test point : TP8(Lch), TP9(Rch)
• Input signal : 1kHz (LINE IN)
Method : Apply a 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at TP8, TP9 becomes 0VU. Record and play back the 1kHz signals and check that the output is -2dB \pm 3.0dB.

< FRONT SECTION >

14. μ -CON OSC Adjustment
Settings : • Test point : TP7 and GND
• Adjustment location : L331
Method : Insert AC plug while pressing POWER and TUNER function keys. Adjust L331 so that the frequency at the test point is 153.84Hz \pm 0.15Hz.

ADJUSTMENT <HR>

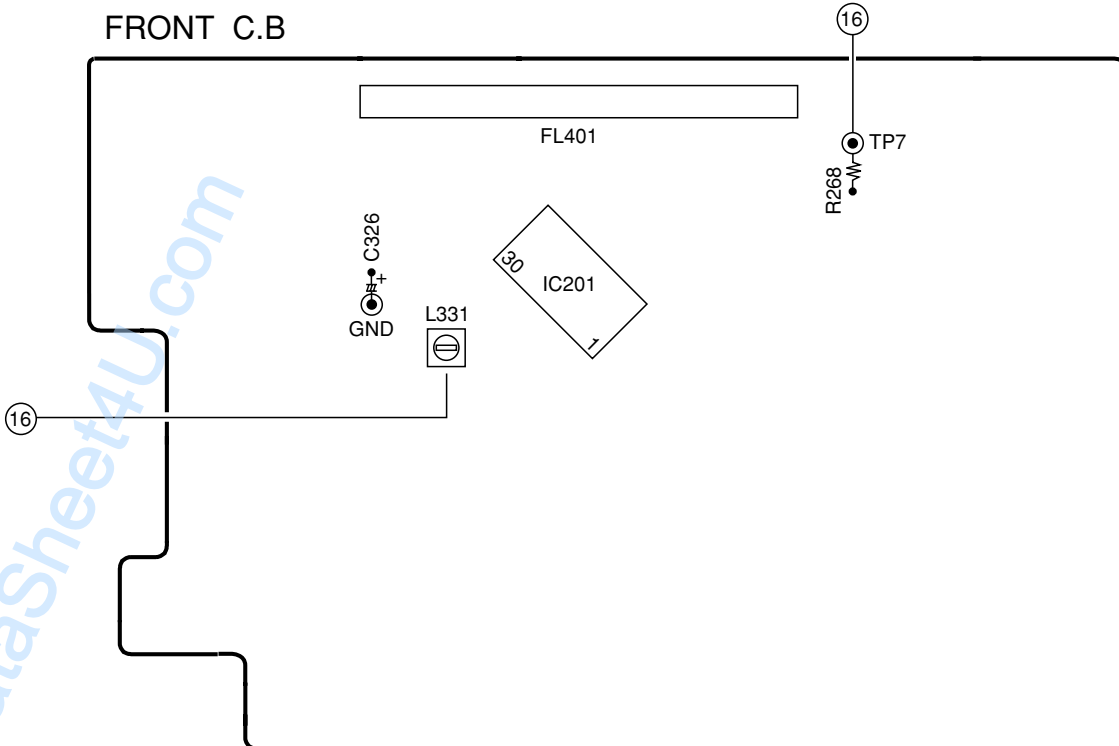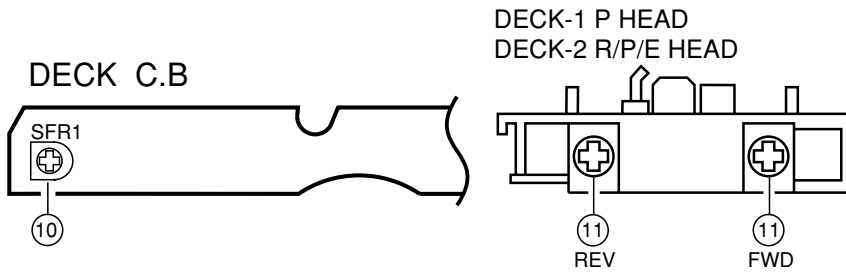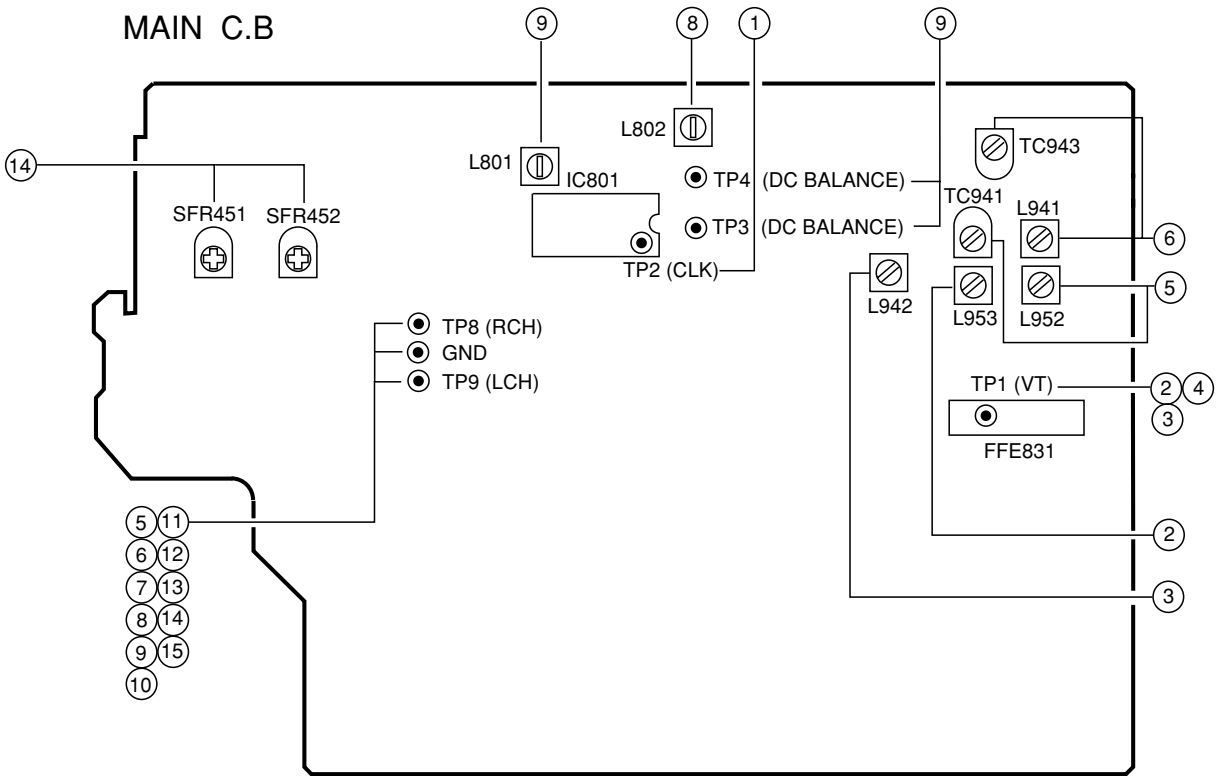

< TUNER SECTION >

1. Clock frequency Check
Settings : • Test point : TP2
Method : Set to WM 1602kHz and check that the test point is 2052kHz \pm 45Hz.
2. MW VT Adjustment
Settings : • Test point : TP1 (VT)
• Adjustment location : L953
Method : Set to MW 1710kHz, 530kHz and adjust L953 so that the test point is 8.0V \pm 0.05V (1710kHz) and more than 0.3V (530kHz).
3. SW VT Adjustment
Settings : • Test point : TP1 (VT)
• Adjustment location : L942
Method : Set to SW 17.9MHz, 5.73MHz and adjust L942 so that the test point is 8.0V \pm 0.05V (17.9MHz) and more than 0.3V (5.9MHz).
4. FM VT Check
Settings : • Test point : TP1 (VT)
Method : Set to FM 87.5MHz, 108.0MHz and check that the test point is more than 0.5V (87.5MHz) and less than 8.0V (108.0MHz).
5. MW Tracking Adjustment
Settings : • Test point : TP8(Lch), TP9(Rch)
• Adjustment location :
L952 603kHz
TC941 1404kHz
Method : Set to MW 603kHz and adjust L952 so that the level at the test point becomes maximum.
Next, set to MW 1404kHz and adjust TC941 so that the level at the test point becomes maximum.
6. SW Tracking Adjustment
Settings : • Test point : TP8(Lch), TP9(Rch)
• Adjustment location :
L941 5.9MHz
TC943 17.9MHz
Method : Set to SW 5.9MHz and adjust L941 so that the level at the test point becomes maximum.
Next, set to SW 17.9MHz and adjust TC943 so that the level at the test point becomes maximum.
7. FM Tracking Check
Settings : • Test point : TP8(Lch), TP9(Rch)
Method : Set to FM 98.0MHz and check that the test point is less than 9dB μ V.
8. AM IF Adjustment
Settings : • Test point : TP8(Lch), TP9(Rch)
• Adjustment location :
L802 999kHz
9. DC Balance / Mono Distortion Adjustment
Settings : • Test point : TP3, TP4 (DC Balance)
: TP8(Lch), TP9(Rch) (Distortion)
• Adjustment location : L801
• Input level : 60dB μ V
Method : Set to FM 98.0MHz and adjust L801 so that the voltage between TP3 and TP4 becomes 0V \pm 0.3V.
Next, check that the distortion is less than 1.3%.

< DECK SECTION >

10. Tape Speed Adjustment (DECK 2)
Settings : • Test tape : TTA-100
• Test point : TP8(Lch), TP9(Rch)
• Adjustment location : SFR1
Method : Play back the test tape and adjust SFR1 so that the frequency counter reads 3000Hz \pm 5Hz and \pm 45Hz (REV) with respect to forward speed.
 11. Head Azimuth Adjustment (DECK 1, DECK 2)
Settings : • Test tape : TTA-330
• Test point : TP8(Lch), TP9(Rch)
• Adjustment location : Head azimuth adjustment screw
Method : Play back (FWD) the 8kHz signal of the test tape and adjust screw so that the output becomes maximum. Next, perform on REV PLAY mode.
 12. PB Frequency Response Check (DECK 1, DECK 2)
Settings : • Test tape : TTA-300
• Test point : TP8(Lch), TP9(Rch)
Method : Play back the 315Hz and 8kHz signals of the test tape and check that the output ratio of the 8kHz signal with respect to that of the 315Hz signal is within 5dB.
 13. PB Sensitivity Check (DECK 1, DECK 2)
Settings : • Test tape : TTA-200
• Test point : TP8(Lch), TP9(Rch)
Method : Play back the test tape and check that the output level of the test point is 140mV \pm 3dB.
 14. REC/PB Frequency Response Adjustment (DECK 2)
Settings : • Test tape : TTA-602
• Test point : TP8(Lch), TP9(Rch)
• Input signal : 1kHz / 8kHz (LINE IN)
• Adjustment location : SFR451 (Lch)
SFR452 (Rch)
Method : Apply a 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at the TP8, TP9 becomes -20VU. Record and play back the 1kHz and 8kHz signals and adjust SFRs so that the output of the 8kHz signals becomes 0dB \pm 0.5dB with respect to that of the 1kHz signal.
 15. REC/PB Sensitivity Check (DECK 2)
Settings : • Test tape : TTA-602
• Test point : TP8(Lch), TP9(Rch)
• Input signal : 1kHz (LINE IN)
Method : Apply a 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at TP8, TP9 becomes 0VU. Record and play back the 1kHz signals and check that the output is -2dB \pm 3.0dB.
- < FRONT SECTION >
16. μ -CON OSC Adjustment
Settings : • Test point : TP7 and GND
• Adjustment location : L331
Method : Insert AC plug while pressing POWER and TUNER function keys. Adjust L331 so that the frequency at the test point is 153.84Hz \pm 0.15Hz.

MECHANICAL MAIN PARTS LIST 1/1


DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

| REF. NO | PART NO. | KANRI NO. | DESCRIPTION | REF. NO | PART NO. | KANRI NO. | DESCRIPTION |
|---------|----------------|-----------|---------------------------------|---------|----------------|-----------|--------------------------------------|
| 1 | 8A-NFJ-012-010 | | WINDOW, CASS 1 | 31 | 8A-NFJ-030-010 | | KEY, CD EDIT H<HS,HR> |
| 2 | 8A-NFJ-013-010 | | WINDOW, CASS 2 | 31 | 8A-NFJ-025-010 | | KEY, CD EDIT U<K,4EZ> |
| 3 | 8A-NFJ-035-010 | | BOX, CASS 1H | 32 | 8A-NFJ-027-010 | | KEY, DISC |
| 4 | 8A-NFJ-003-010 | | BOX, CASS 2 U<K,4EZ,6EZ> | 33 | 86-NF9-224-010 | | SPR-C, LOCK |
| 4 | 8A-NFJ-036-010 | | BOX, CASS 2H<HS,HR> | 34 | 87-NF4-216-010 | | HLLDR, LOCK 1 |
| 5 | 8A-NF8-207-010 | | SPR-T, EJECT 1<K,4EZ,6EZ> | 35 | 82-NF5-229-010 | | PLATE, LOCK(*) |
| 5 | 82-NF5-218-010 | | SPR-T, EJECT 1 (SIN) <HS,HR> | 36 | 87-NF4-217-110 | | HLLDR, LOCK 2 |
| 6 | 8A-NF8-208-010 | | SPR-T, EJECT 2<K,4EZ,6EZ> | 37 | 8A-NF8-206-010 | | HLLDR, PWB M |
| 6 | 82-NF5-219-010 | | SPR-T, EJECT 2 (SIN) <HS,HR> | 38 | 87-064-185-010 | | HLLDR, WIRE PVC 0.5 |
| 7 | 8A-NFJ-005-010 | | WINDOW, FR 2 | 39 | 84-ZG1-245-210 | | CAP, OPTICAL |
| 8 | 8A-NFJ-017-010 | | KNOB, RTRY JOG | 40 | 8A-NFJ-065-010 | | CABI, REAR EZSFD<4EZ> |
| 9 | 8Z-NF6-210-010 | | DMPR, 150 N<HS,HR> | 40 | 8A-NFJ-066-010 | | CABI, REAR EZSFD R<6EZ> |
| 9 | 8A-NF8-209-010 | | OIL-DMPR, 120<K,4EZ,6EZ> | 40 | 8A-NF8-075-110 | | CABI, REAR HS W/O SPEC<HS> |
| 10 | 8A-NFJ-044-010 | | CABI, FR 54E<K,4EZ> | 40 | 8A-NFJ-064-010 | | CABI, REAR KSFD<K> |
| 10 | 8A-NFJ-034-010 | | CABI, FR E<6EZ> | 41 | 8A-DB8-209-010 | | HLLDR, PWB PT |
| 10 | 8A-NFJ-033-010 | | CABI, FR H<HS,HR> | 42 | 87-NF4-221-010 | | HLLDR, CABLE |
| 11 | 8A-NFJ-004-010 | | WINDOW, FR 1<K,4EZ,6EZ> | 43 | 87-085-185-010 | | BUSHING, AC CORD (E) CM-22B |
| 11 | 8A-NFJ-006-010 | | WINDOW, FR 1H<HS,HR> | 44 | 87-A80-143-010 | | AC CORD ASSY, E BLK<K> |
| 12 | 8A-NFJ-026-010 | | KNOB, RTRY MIC<HS,HR> | 44 | 87-A80-157-010 | | AC CORD ASSY, E BLK CC<HR> |
| 13 | 8A-NFJ-040-010 | | WINDOW, DISP E<6EZ> | 44 | 87-A80-092-010 | | AC CORD ASSY, E BLK SUN FAI<4EZ,6EZ> |
| 13 | 8A-NFJ-039-010 | | WINDOW, DISP H<EXCEPT 6EZ> | 44 | 87-A80-155-010 | | AC CORD ASSY, HS TS<HS> |
| 14 | 8A-NFJ-008-010 | | WINDOW, CD | 45 | 8Z-NB8-240-010 | | COVER, PL |
| 15 | 8A-NF8-007-010 | | PANEL, LEFT V-2 | 46 | 8A-NF8-008-010 | | PANEL, RIGHT V-2 |
| 16 | 8A-NF8-005-010 | | PANEL, TOP | 47 | 8A-NF8-205-010 | | HLLDR, IC |
| 17 | 8A-NF8-006-010 | | WINDOW, TOP | 48 | 88-906-251-110 | | FF-CABLE.6P 1.25 |
| 18 | 8A-NFJ-009-010 | | PANEL, TRAY | A | 87-067-703-010 | | BVT2+3-10 W/O SLOT |
| 19 | 8A-NFJ-010-010 | | WINDOW, TRAY | B | 87-NF4-224-010 | | S-SCREW, IT3B+3-8 CU |
| 20 | 88-NF8-205-010 | | GUIDE, FL | C | 87-067-581-010 | | BVT2+3-15 W/O SLOT |
| 21 | 8A-NFJ-018-010 | | KEY, FUN | D | 87-067-688-010 | | BVTT+3-6 |
| 22 | 8A-NFJ-016-010 | | REFLECTOR, FUN | E | 87-723-096-410 | | QT2+3-10 W/O SLOT BLK |
| 23 | 8A-NFJ-014-010 | | KEY, POWER | F | 87-067-641-010 | | UTT2+3-8 W/O SLOT BLK |
| 24 | 8A-NFJ-015-010 | | REFLECTOR, ECO | G | 87-078-191-010 | | S-SCREW, IT+4-10 SWCH12A |
| 25 | 8A-NFJ-019-010 | | KEY, GEQ | H | 87-721-097-410 | | QT2+3-12 W/O SLOT |
| 26 | 8A-NFJ-029-010 | | KEY, ASSY OPE REV | I | 87-721-096-410 | | QT2+3-10 W/O SLOT |
| 27 | 8A-NF8-203-010 | | GUIDE, OPE REV | | | | |
| 28 | 8A-NF8-201-010 | | GUIDE, FUN | | | | |
| 29 | 88-911-101-110 | | FF-CABLE, 11P 1.25<K,4EZ,6EZ> | | | | |
| 29 | 88-915-101-110 | | FF-CABLE, 15P 1.25 100MM<HS,HR> | | | | |
| 30 | 88-913-301-110 | | FF-CABLE, 13P-1.25 | | | | |
| 31 | 8A-NFJ-031-010 | | KEY, CD EDIT E<6EZ> | | | | |



COLOR NAME TABLE

| Basic color symbol | Color | Basic color symbol | Color | Basic color symbol | Color |
|--------------------|-------------------|--------------------|--------------------|--------------------|--------------------|
| B | Black | C | Cream | D | Orange |
| G | Green | H | Gray | L | Blue |
| LT | Transparent Blue | N | Gold | P | Pink |
| R | Red | S | Silver | ST | Titan Silver |
| T | Brown | V | Violet | W | White |
| WT | Transparent White | Y | Yellow | YT | Transparent Yellow |
| LM | Metallic Blue | LL | Light Blue | GT | Transparent Green |
| LD | Dark Blue | DT | Transparent Orange | GM | Metallic Green |
| YM | Metallic Yellow | DM | Metallic Orange | PT | Transparent Pink |

MECHANICAL EXPLODED VIEW 1/1

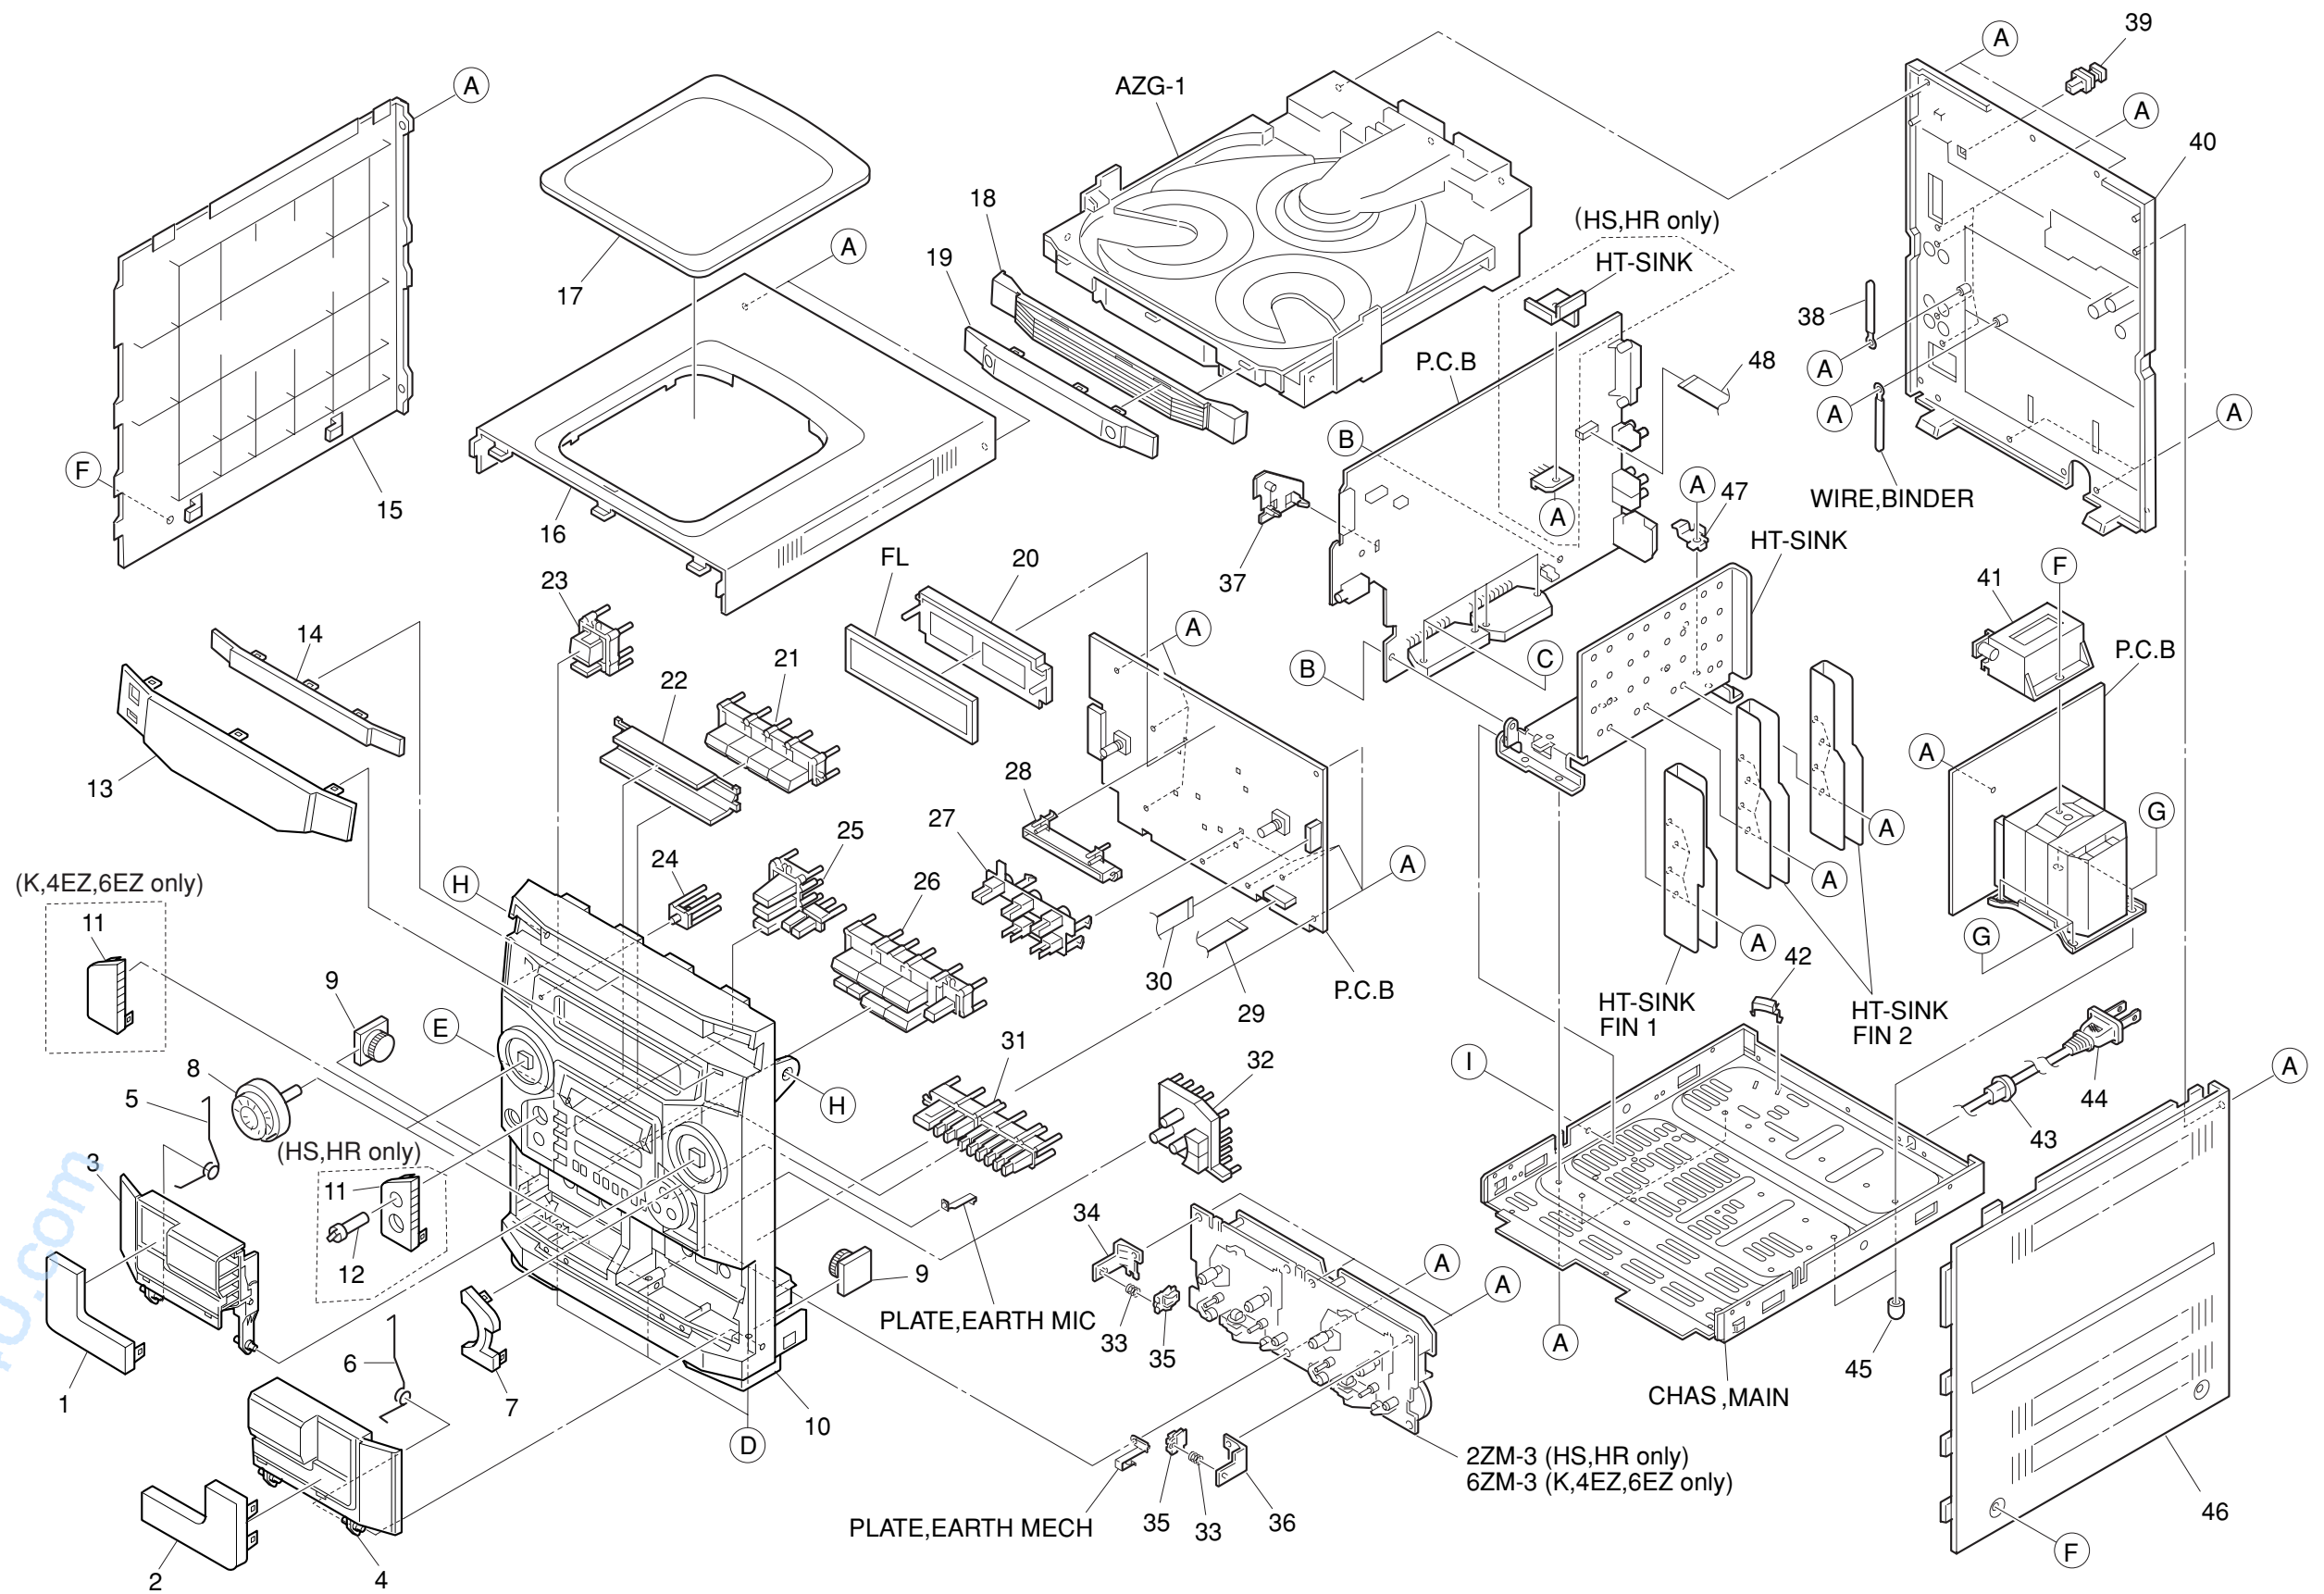

MECHANISM EXPLODED VIEW 1/1 <EZ, K: 6ZM-3 PR2NM>

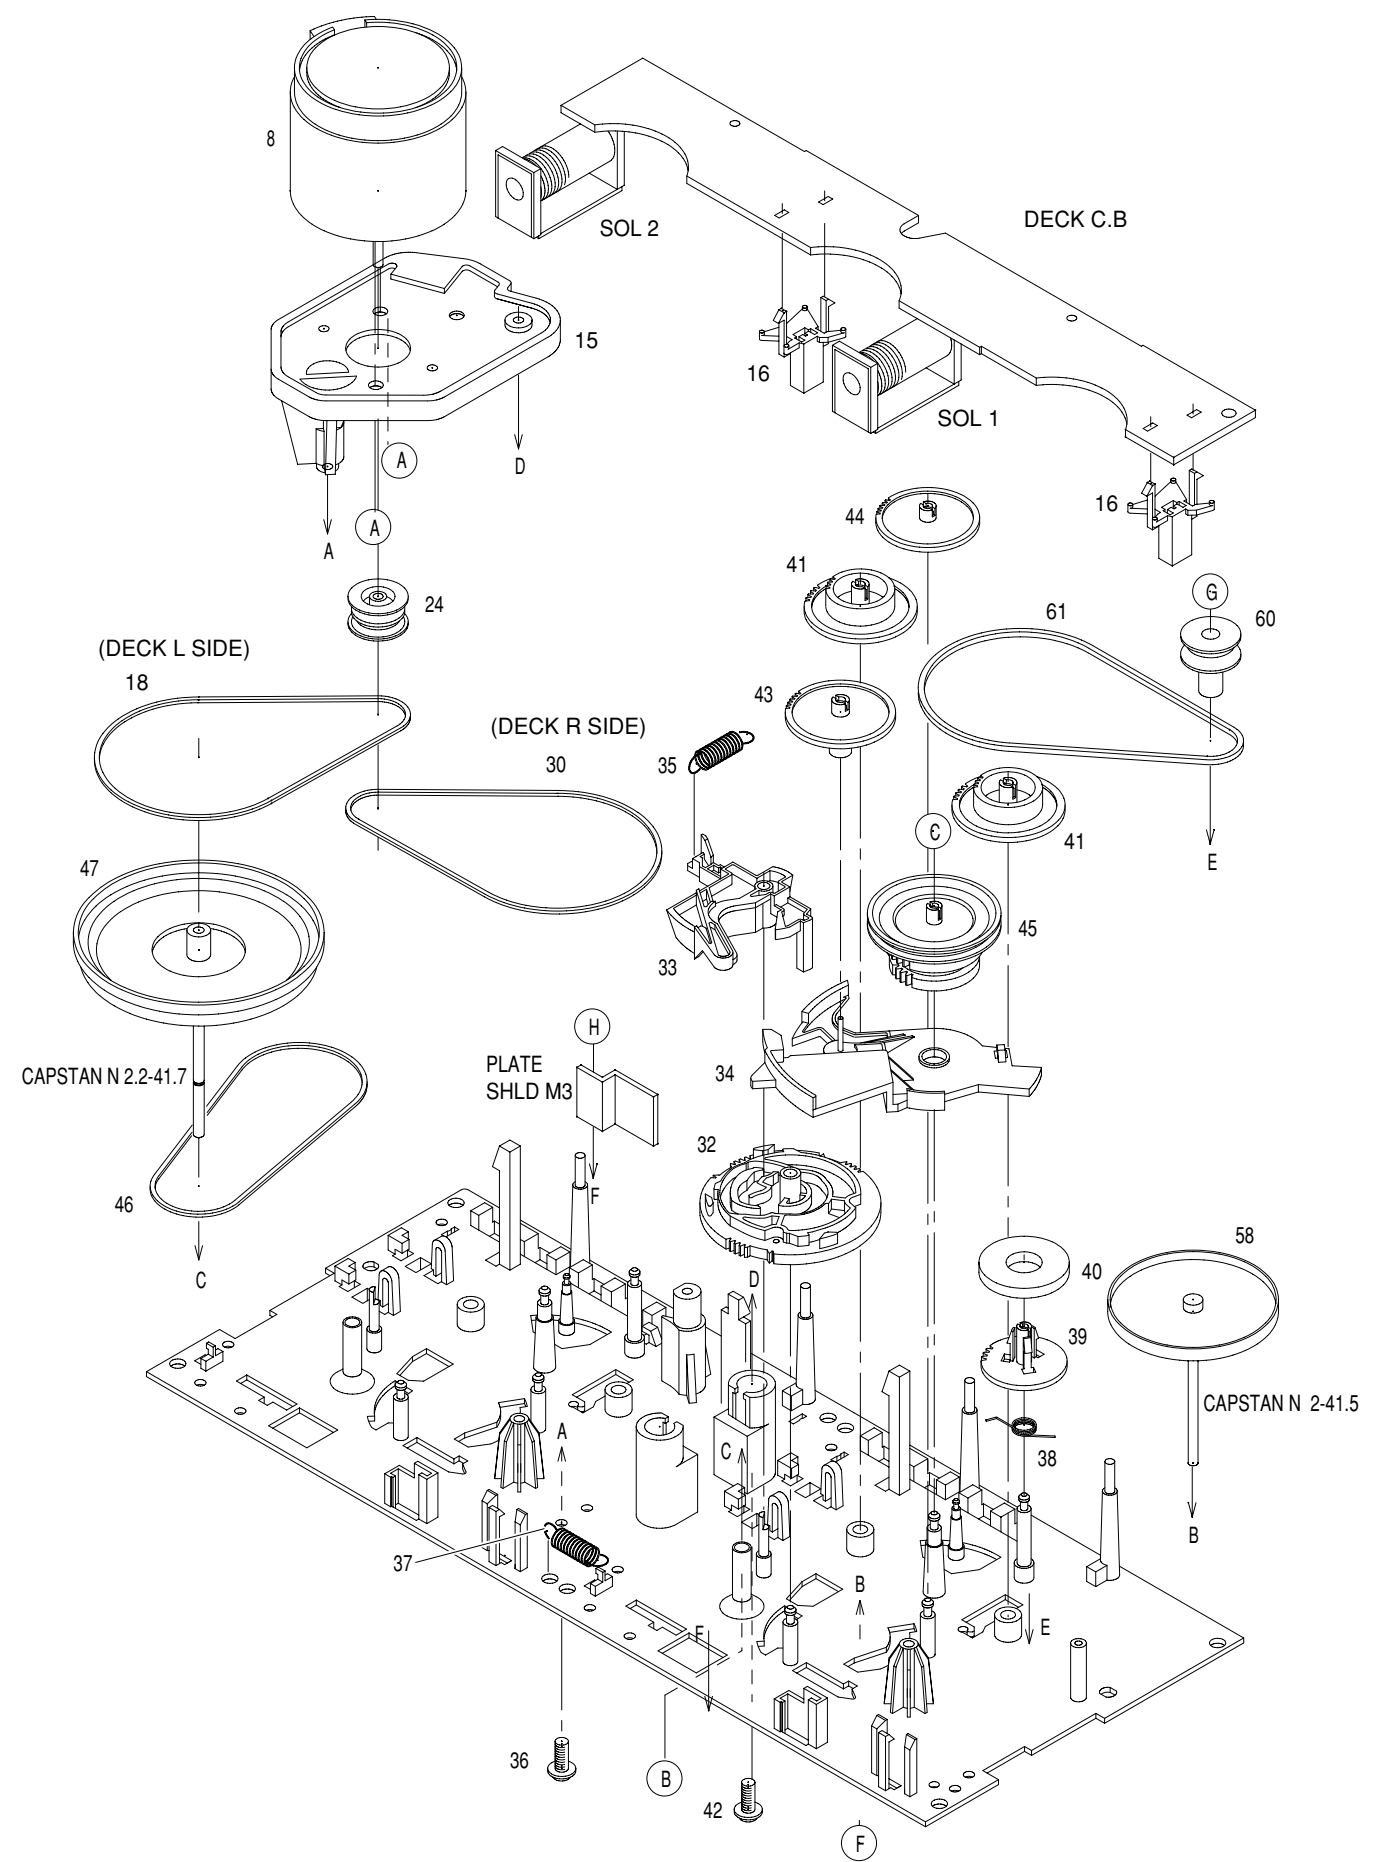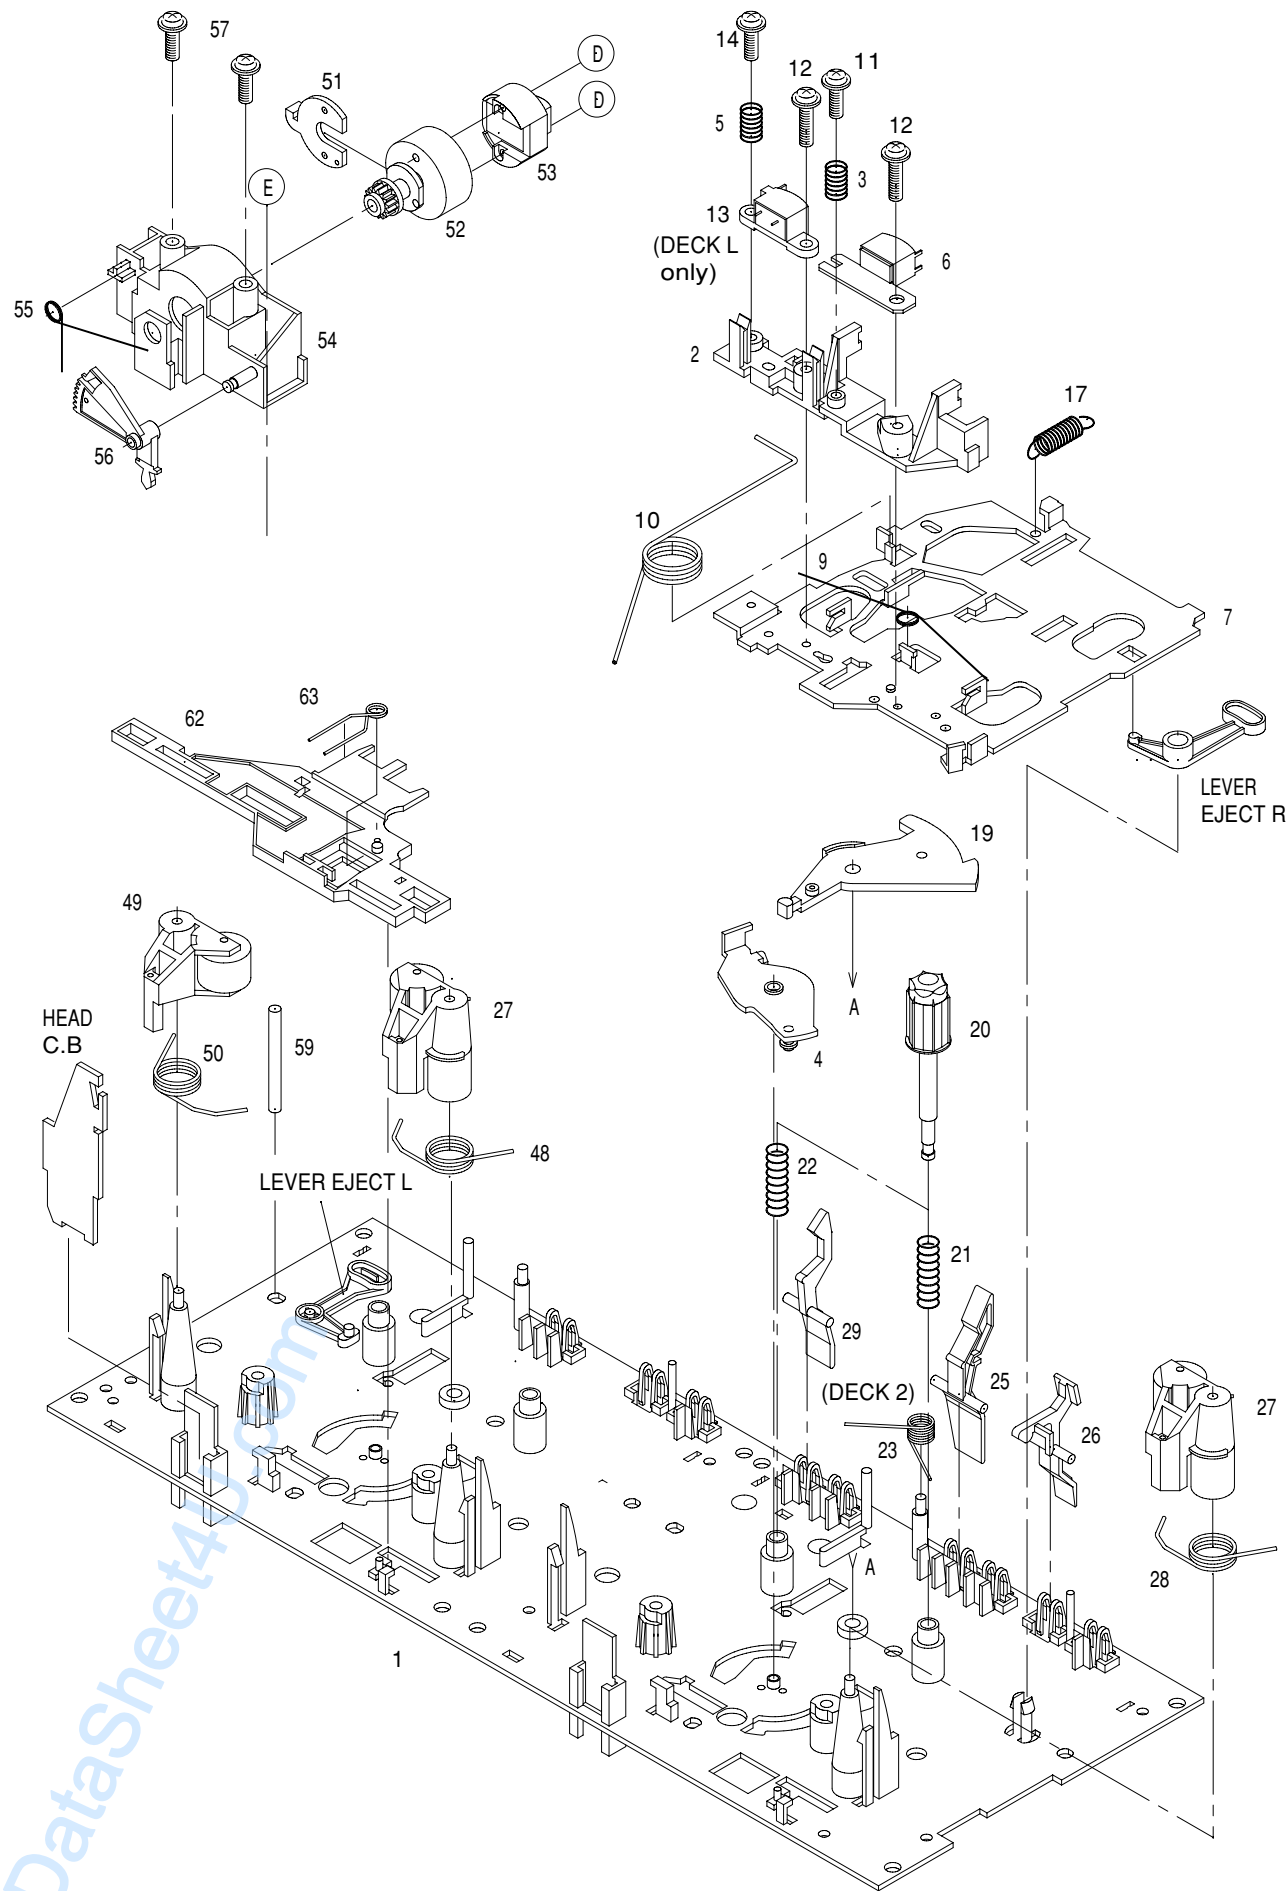

MECHANISM MAIN PARTS LIST 1/1 <EZ, K: 6ZM-3 PR2NM>

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
 If can't understand for Description please kindly refer to "REFERENCE NAME LIST".



| REF. NO | PART NO. | KANRI NO. | DESCRIPTION | REF. NO | PART NO. | KANRI NO. | DESCRIPTION |
|---------|----------------|-----------|---------------------|---------|----------------|-----------|----------------------|
| 1 | 86-ZM3-215-010 | | CHAS ASSY,RS | 41 | 82-ZM1-216-310 | | GEAR,REEL |
| 2 | 86-ZM3-202-010 | | BASE,HEAD S | 42 | 86-ZM3-213-010 | | S-SCREW,HLD R, MOT 3 |
| 3 | 86-ZM3-205-010 | | SPR-C,RPH S | 43 | 82-ZM1-225-210 | | GEAR,FR |
| 4 | 82-ZM1-333-210 | | PLATE, LINK 2 | 44 | 82-ZM1-226-010 | | GEAR,REW |
| 5 | 86-ZM3-206-010 | | SPR-C,EH S | 45 | 82-ZM3-333-310 | | SLIP DISK ASSY 2 |
| 6 | 87-A90-403-010 | | HEAD,RPH MS15R | 46 | 82-ZM1-338-010 | | BELT FR4 |
| 7 | 86-ZM3-201-010 | | CHAS,HEAD S(DECK L) | 47 | 82-ZM1-349-010 | | FLY-WHL RW (DECK L) |
| 7 | 82-ZM3-206-210 | | BELT,R | 47 | 82-ZM3-338-010 | | FLY-WHL R3W (DECK R) |
| 8 | 87-045-347-010 | | MOT, SHU2L 70(M1) | 48 | 82-ZM1-259-210 | | SPR-T,PINCH R |
| 9 | 82-ZM1-269-210 | | SPR-T,BRG | 49 | 82-ZM1-341-110 | | LVR ASSY,PINCH L2 |
| 10 | 82-ZM1-219-110 | | SPR-T, LINK | 50 | 82-ZM1-258-210 | | SPR-T,PINCH L |
| 11 | 86-ZM3-209-010 | | S-SCREW, ASIMUTHS | 51 | 82-ZM1-314-110 | | PLATE,HEAD |
| 12 | 86-ZM3-207-010 | | S-SCREW, RPH | 52 | 82-ZM1-208-310 | | HLD R,HEAD |
| 13 | 87-A90-404-010 | | HEAD,EH LE15B | 53 | 87-A90-366-010 | | HEAD,PH YK50P-BF414 |
| 14 | 86-ZM3-208-010 | | S-SCREW,EH | 54 | 82-ZM1-207-810 | | GUIDE TAPE |
| 15 | 86-ZM3-203-010 | | HLD R,MOTS | 55 | 82-ZM1-213-010 | | SPR-T,HEAD |
| 16 | 82-ZM1-245-210 | | HLD R,IC | 56 | 82-ZM1-210-110 | | GEAR,HT |
| 17 | 82-ZM1-218-010 | | SPR-E,HB | 57 | 86-ZM4-206-010 | | S-SCREW AZIMUTH L |
| 18 | 86-ZM3-214-010 | | BELT,SUB RR | 58 | 82-ZM1-348-010 | | FLY-WHL,LW |
| 19 | 82-ZM1-222-210 | | LVR,PLAY | 59 | 82-ZM3-339-010 | | SHAFT,COUPLER N3 |
| 20 | 82-ZM1-217-410 | | REEL TABLE | 60 | 82-ZM3-335-210 | | PULLEY,COUPLER M3 |
| 21 | 82-ZM1-244-510 | | SPR-C,BT | 61 | 86-ZM1-206-010 | | BELT,MAIN L |
| 22 | 82-ZM1-285-410 | | SPR-C,BT L | 62 | 82-ZM1-266-110 | | LVR,DIR |
| 23 | 82-ZM1-257-010 | | SPR-T,CAS | 63 | 82-ZM1-214-010 | | SPR-T,DIR |
| 24 | 82-ZM3-221-010 | | PULLEY,MOT 2M | A | 87-251-071-410 | | U+2.6-4 |
| 25 | 82-ZM1-242-010 | | LVR,CAS | B | 80-ZM6-243-010 | | SH,1.75-3.6-0.5 SLT |
| 26 | 82-ZM1-243-010 | | LVR,STOP | C | 82-ZM3-334-010 | | PW,2.16-6-0.4 |
| 27 | 82-ZM1-344-110 | | LVR ASSY,PINCH | D | 80-ZM6-207-010 | | V+1.6-7 |
| 28 | 86-ZM3-204-010 | | SPR-T,PINCHDS | E | 85-ZM3-202-010 | | S-SCREW TG |
| 29 | 82-ZM1-240-110 | | LVR,REC (DECK 2) | F | 82-ZM1-288-010 | | SH,1.63-3.2-0.5 SLT |
| 30 | 86-ZM3-210-010 | | BELT,RS | G | 87-B10-043-010 | | W-P,0.99-4-0.25 SLT |
| 32 | 82-ZM3-305-110 | | GEAR,CAM M2 | H | 87-571-032-410 | | VIT+2-3 |
| 33 | 82-ZM1-227-310 | | LVR,TRIG | | | | |
| 34 | 82-ZM3-306-110 | | LVR,FR M2 | | | | |
| 35 | 82-ZM1-265-110 | | SPR-E,TRIG | | | | |
| 36 | 87-761-073-410 | | VFT2+2.6-6 W/O SLOT | | | | |
| 37 | 82-ZM1-255-310 | | SPR-E,LVR DIR | | | | |
| 38 | 82-ZM1-322-010 | | SPR-T,FR60 | | | | |
| 39 | 82-ZM1-220-210 | | GEAR,IDLER | | | | |
| 40 | 82-ZM3-616-010 | | RING MAGNET 4 | | | | |

MECHANISM MAIN PARTS LIST 1/1 <HS, HR: 2ZM-3MK2 PR4NM>

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
 If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

| REF. NO | PART NO. | KANRI NO. | DESCRIPTION | REF. NO | PART NO. | KANRI NO. | DESCRIPTION |
|---------|----------------|-----------|---------------------|---------|----------------|-----------|-----------------------|
| 1 | 82-ZM3-301-610 | | CHAS ASSY,M2 | 31 | 82-ZM1-255-310 | | SPR-E, LVR DIR |
| 2 | 82-ZM1-258-210 | | SPR-T, PINCH L | 32 | 82-ZM3-305-210 | | GEAR,CAM M2 |
| 3 | 82-ZM1-341-210 | | LVR ASSY, PINCH L2 | 33 | 82-ZM1-227-310 | | LVR, TRIG |
| 4 | 82-ZM1-333-210 | | PLATE, LINK2 | 34 | 82-ZM3-306-110 | | LVR, FR M2 |
| 5 | 82-ZM1-266-310 | | LVR, DIR | 35 | 82-ZM1-265-310 | | SPR-E, TRIG |
| 6 | 82-ZM1-214-010 | | SPR-T, DIR | 36 | 82-ZM3-339-110 | | SHAFT, COUPLER N3 |
| 7 | 82-ZM1-206-910 | | CHAS, HEAD | 37 | 86-ZM1-206-010 | | BELT, MAIN L |
| 8 | 82-ZM3-335-310 | | PULLEY, COUPLER M3 | 38 | 82-ZM1-322-010 | | SPR-T, FR 60 |
| 9 | 82-ZM1-269-210 | | SPR-T, BRG | 39 | 82-ZM1-220-210 | | GEAR, IDLER |
| 10 | 82-ZM1-219-110 | | SPR-T, LINK | 40 | 82-ZM3-616-010 | | RING MAGNET 4 |
| 11 | 82-ZM1-210-110 | | GEAR, H T | 41 | 82-ZM1-216-410 | | GEAR, REEL |
| 12 | 82-ZM1-213-010 | | SPR-T, HEAD | 42 | 87-A90-820-010 | | HEAD, PH HADKH25 FPC |
| 13 | 82-ZM1-207-910 | | GUIDE, TAPE | 42 | 87-A90-821-010 | | HEAD, RPH HADKH56 FPC |
| 14 | 86-ZM4-206-010 | | S-SCREW, AZIMUTH L | 43 | 82-ZM1-225-210 | | GEAR, FR |
| 15 | 82-ZM1-314-110 | | PLATE, HEAD | 44 | 82-ZM1-226-010 | | GEAR, REW |
| 16 | 82-ZM1-208-310 | | HLDR, HEAD | 45 | 82-ZM3-333-310 | | SLIP DISK ASSY 2 |
| 17 | 82-ZM1-218-010 | | SPR-E, HB | 46 | 82-ZM1-338-110 | | BELT, FR 4 |
| 18 | 82-ZM3-342-010 | | BELT, SBU MOT 3 | 47 | 82-ZM1-349-110 | | FLY-WHL, R W |
| 19 | 82-ZM1-222-210 | | LVR, PLAY | 47 | 82-ZM1-348-110 | | FLY-WHL, L W |
| 20 | 82-ZM1-217-410 | | REEL TABLE | 48 | 82-ZM3-338-310 | | FLY-WHL, R3W |
| 21 | 82-ZM1-244-510 | | SPR-C, BT | 49 | 82-ZM3-329-410 | | BELT, SBU R2 |
| 22 | 82-ZM1-285-410 | | SPR-C, BT L | 50 | 82-ZM1-618-410 | | SOL ASSY, 27 |
| 23 | 82-ZM1-257-010 | | SPR-T, CAS | 51 | 87-045-347-010 | | MOT, SHU2L 70 |
| 24 | 82-ZM1-241-310 | | LVR, MC | 52 | 82-ZM3-221-210 | | PULLEY, MOT 2M |
| 25 | 82-ZM1-242-010 | | LVR, CAS | A | 85-ZM3-202-010 | | S-SCREW, TG |
| 26 | 82-ZM1-243-010 | | LVR, STOP | B | 80-ZM6-207-010 | | V+1.6-7 |
| 27 | 82-ZM1-344-010 | | LVR ASSY, PINCH R2 | C | 82-ZM3-318-110 | | S-SCREW W, MOTOR M2 |
| 28 | 82-ZM1-259-210 | | SPR-T, PINCH R | D | 87-B10-043-010 | | W-P, 0.99-4-0.25 SLT |
| 29 | 82-ZM1-240-110 | | LVR, REC (*) | E | 82-ZM3-334-010 | | PW 2.16-6-0.4 |
| 30 | 80-ZM6-243-010 | | SH 1.75-3.6-0.5 SLT | | | | |


MECHANISM EXPLODED VIEW 1/1 <HS, HR: 2ZM-3MK2 PR4NM>

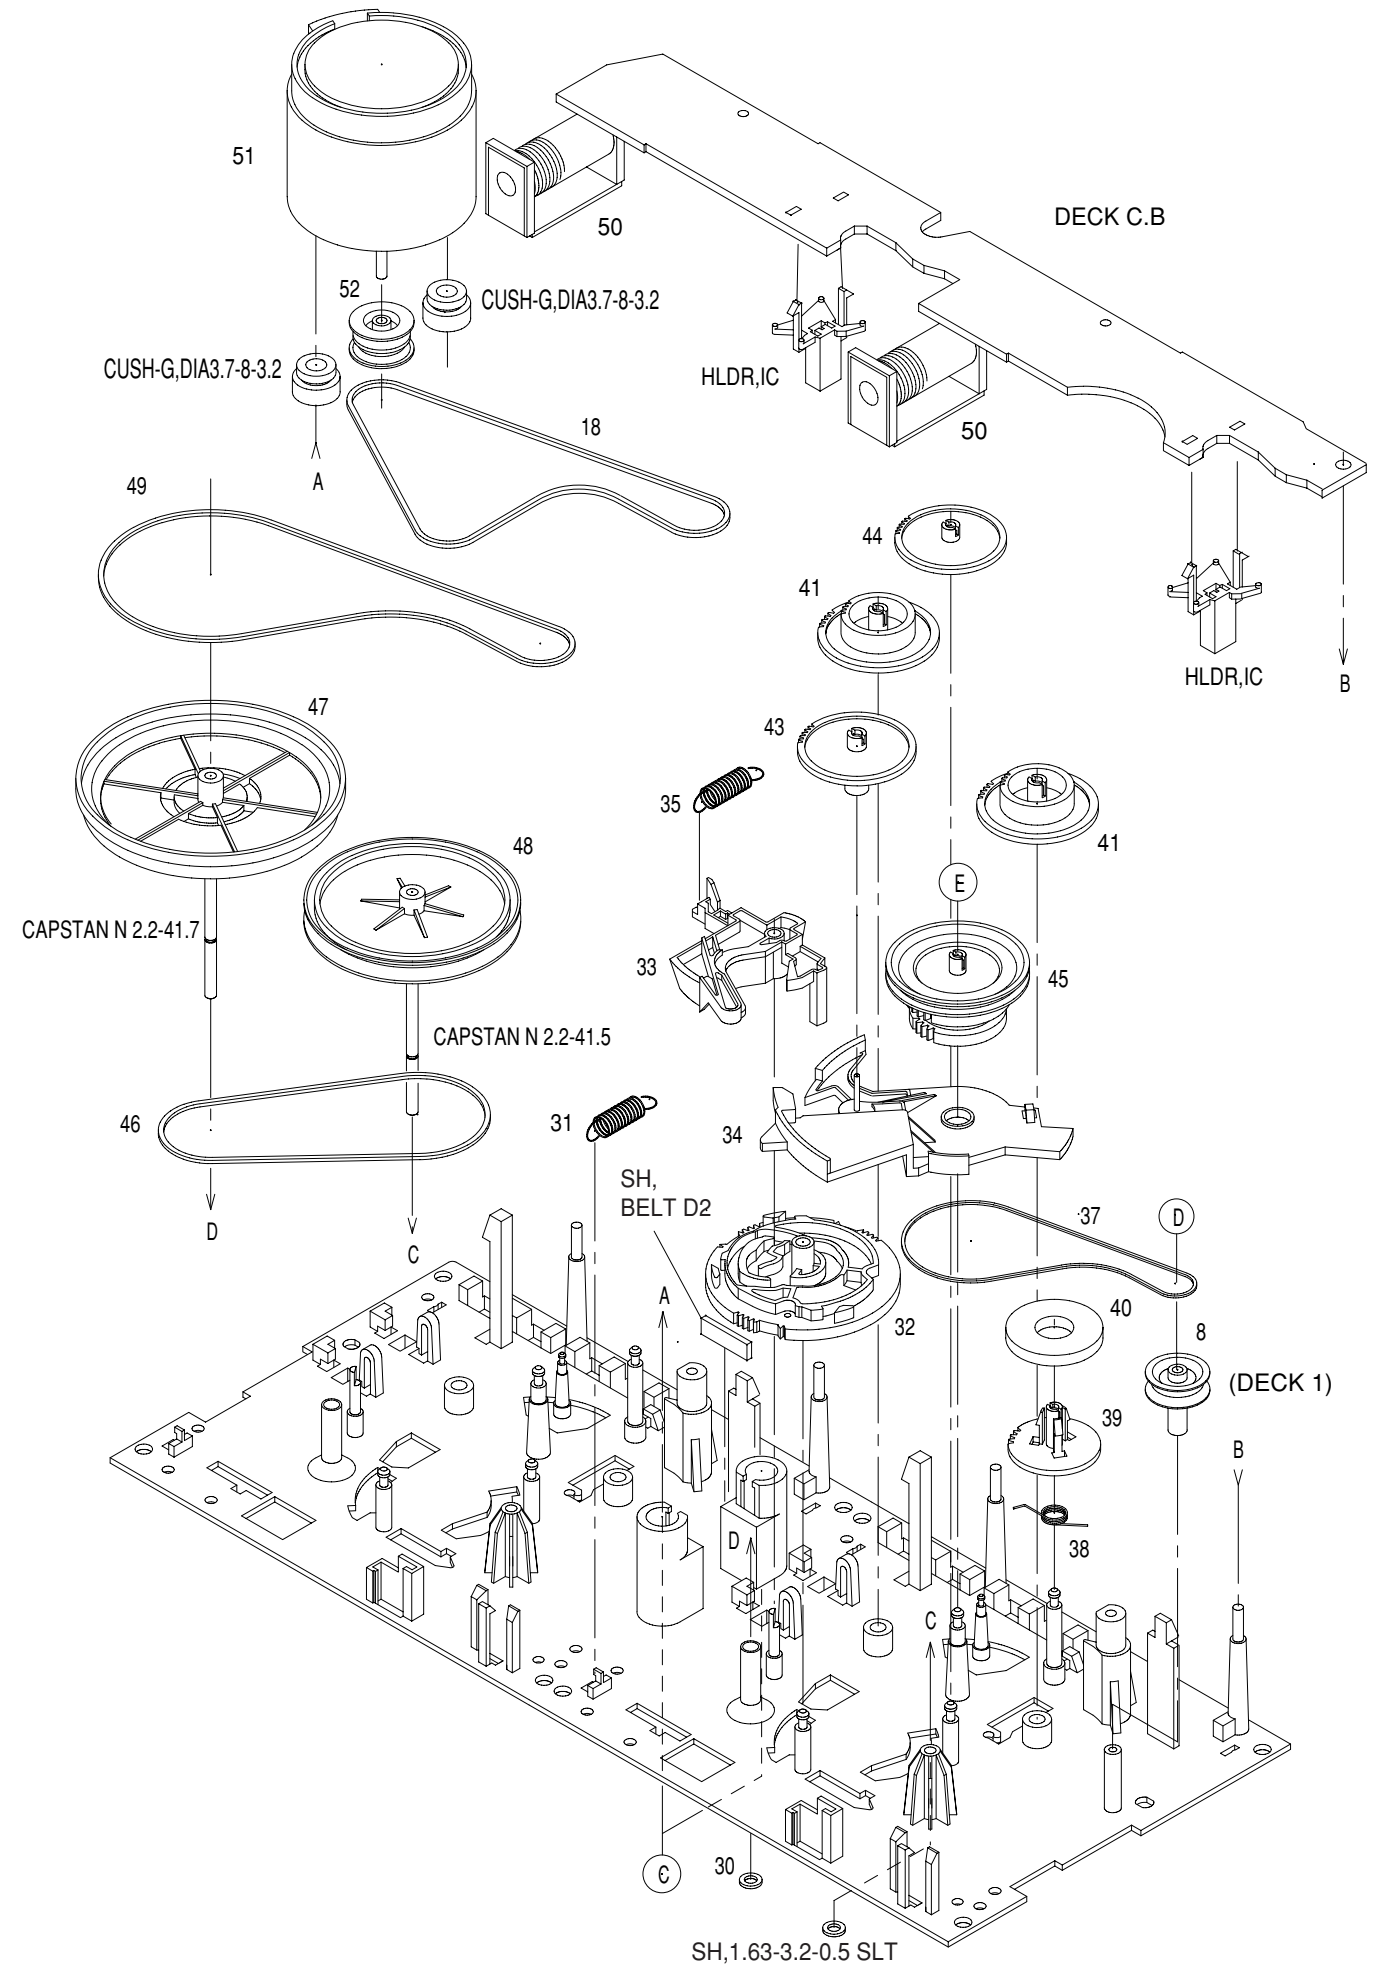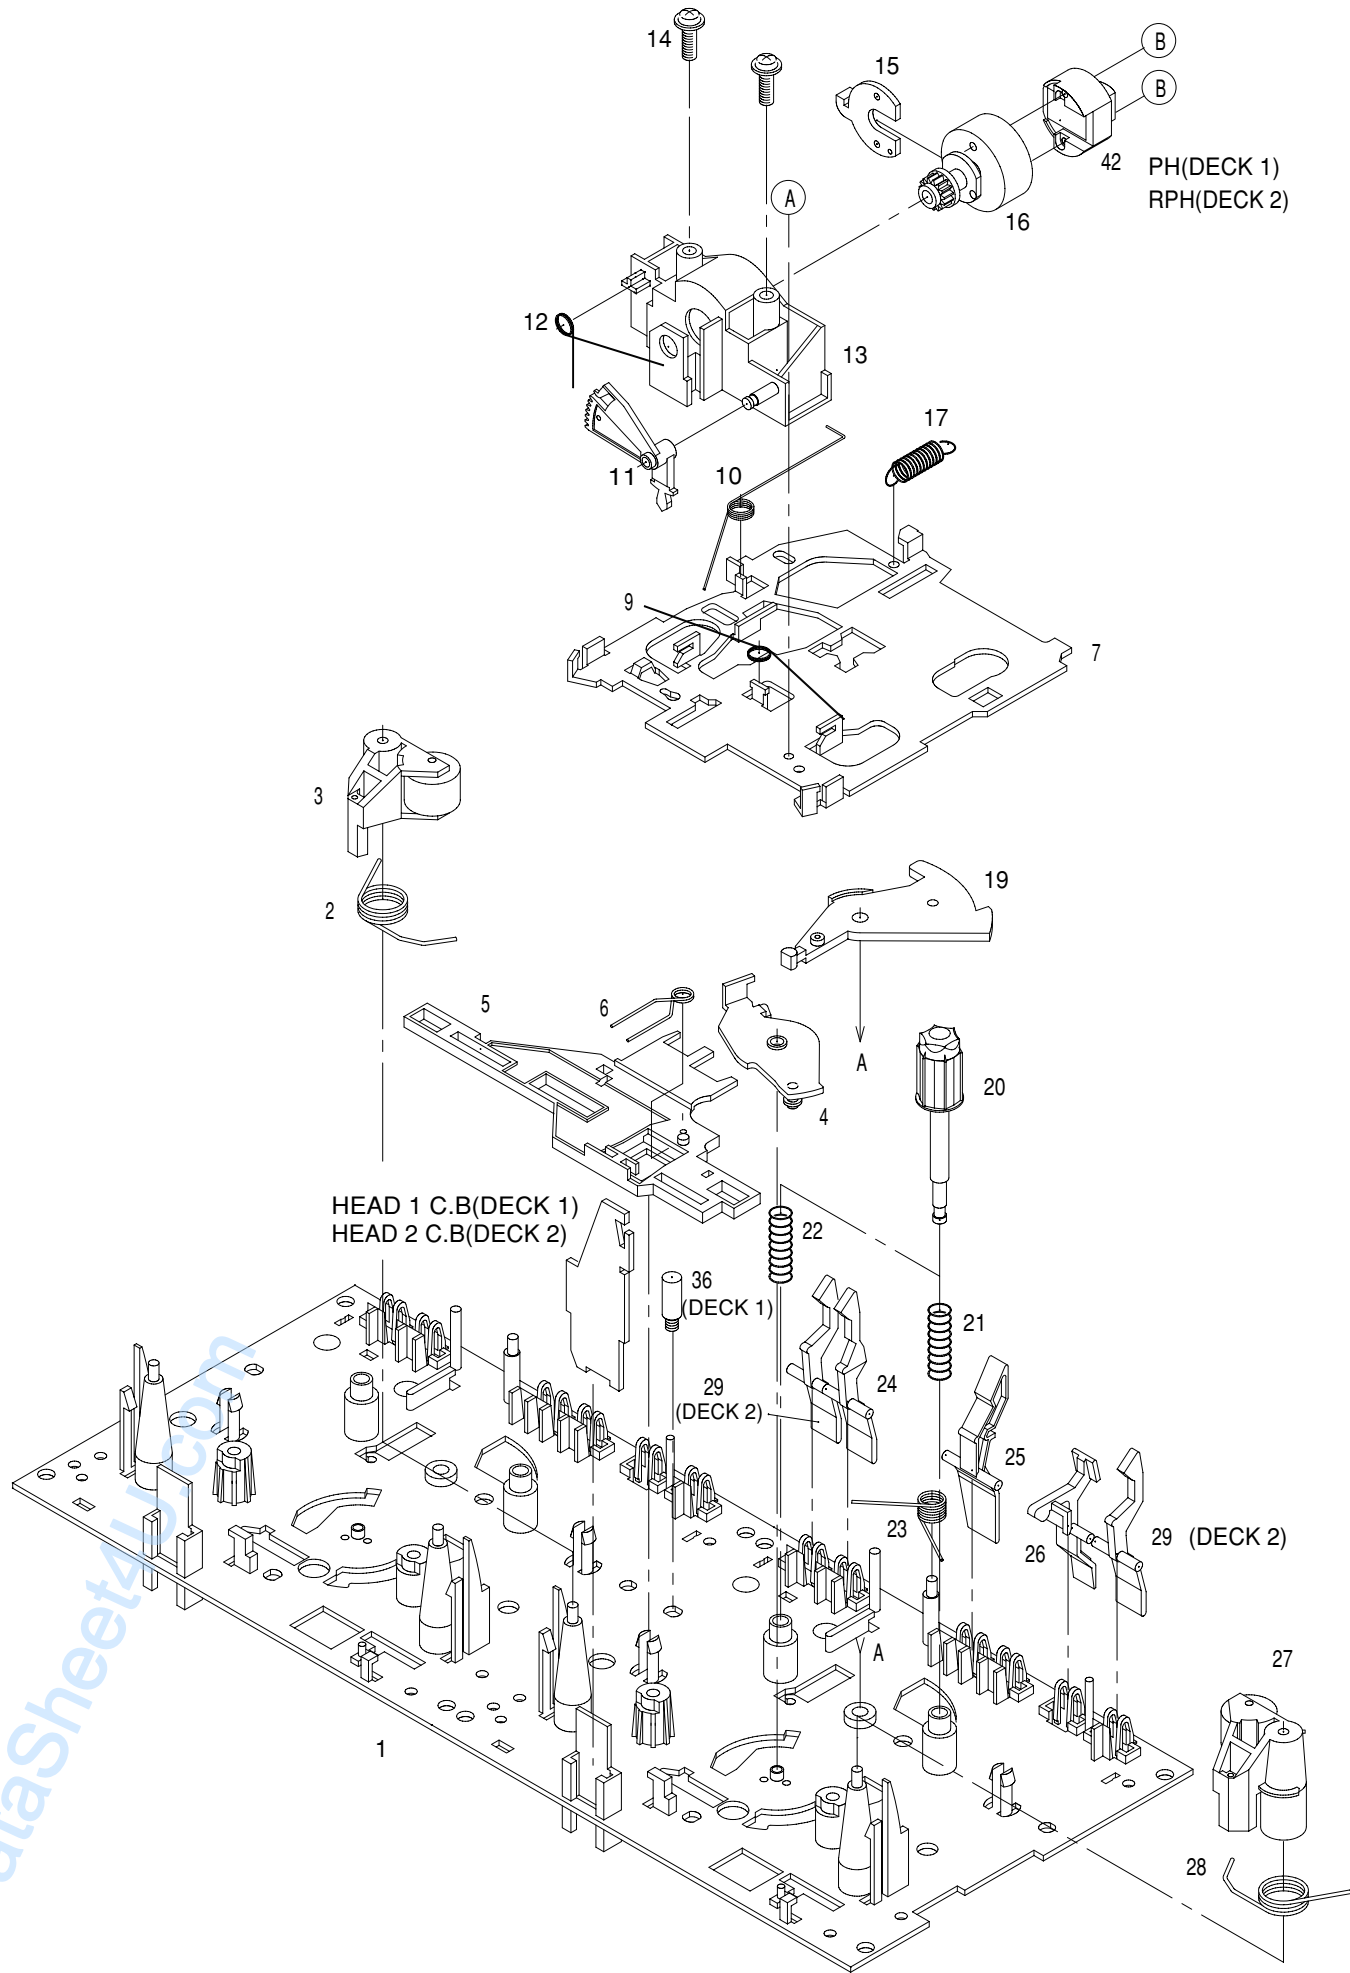

SPEAKER DISASSEMBLY INSTRUCTIONS


Type.1

Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

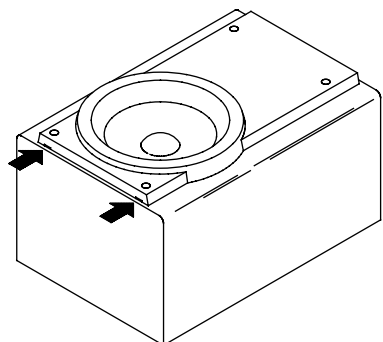


Type.2

Remove the grill frame and four pieces of rubber caps by pulling out with a flat-bladed screwdriver. Remove the screws from hole where installed rubber caps. Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

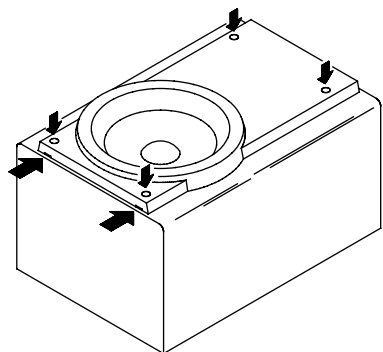


Type.3

Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Turn the speaker unit to counter-clockwise direction while inserting a flat-bladed screwdriver into one of the hollows around speaker unit, and then remove the speaker unit. After replacing the speaker unit, install it turning to clockwise direction until "click" sound comes out.

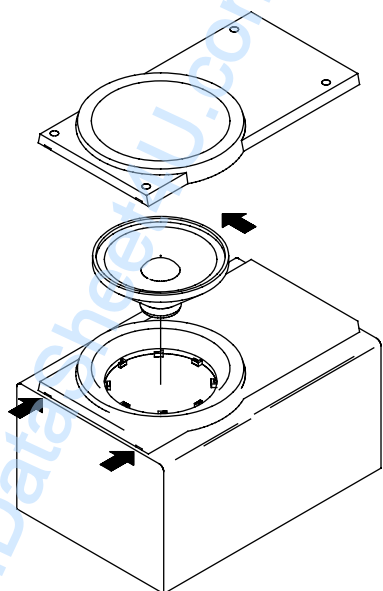

Type.4

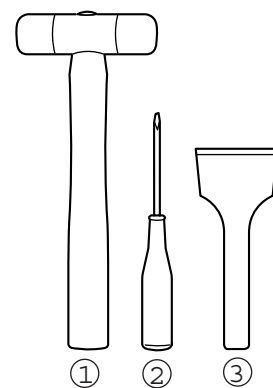

TOOLS

- ① Plastic head hammer
- ② (⊖) flat head screwdriver
- ③ Cut chisel

How to Remove the PANEL, FR

1. Insert the (⊖) flat head screwdriver tip into the gap between the PANEL, FR and the PANEL, SPKR. Tap the head of the (⊖) flat head screwdriver with the plastic hammer head, and create the clearance as shown in Fig-1.
2. Insert the cut chisel in the clearance, and tap the head of the cut chisel with plastic hammer as shown in Fig-2, to remove the PANEL, FR.
3. Place the speaker horizontally. Tap head of the cut chisel with plastic hammer as shown in Fig-3, and remove the PANEL, FR completely.

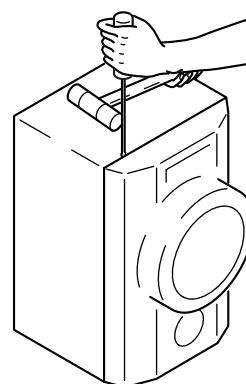


Fig-1

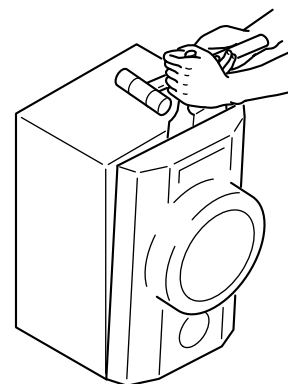


Fig-2

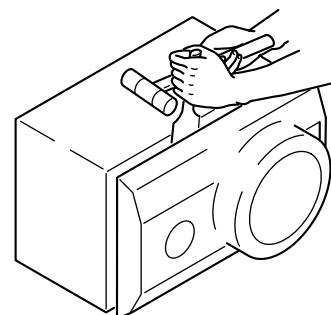


Fig-3

How to Attach the PANEL, FR

Attach the PANEL, FR to the PANEL, SPKR. Tap the four corners of the PANEL, FR with the plastic hammer to fit the PANEL, FR into the PANEL, SPKR completely.

SPEAKER (SX-WNBL56) <56EZ> PARTS LIST

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

| REF. NO | PART NO. | KANRI NO. | DESCRIPTION |
|---------|----------------|-----------|------------------------|
| 1 | 8A-NS5-016-010 | | PANEL, FR U |
| 2 | 8A-NS5-017-010 | | PLATE, NAME B |
| 3 | 8A-NS5-004-010 | | PANEL, DUCT |
| 4 | 8A-NS5-009-010 | | PROTECTOR, |
| 5 | 8A-NS5-018-010 | | GRILLE, FRAME ASSY RDS |
| 6 | 8A-NS5-015-010 | | BADGE, AIWA S35 |
| 7 | 8Z-NSY-003-010 | | CORD, BUSH |
| 8 | 88-NS3-029-010 | | CORD, BUSH L |
| 9 | 88-NS5-610-010 | | CORD, SPKR |
| 10 | 88-NS5-611-010 | | CORD, SPKR B/L |
| 11 | 8Z-NSY-608-010 | | SPKR, CERAMIC ASSY |
| 12 | 8A-NS8-604-010 | | SPKR, M 100 |
| 13 | 8Z-NS7-602-010 | | SPKR, W 160 |

SPEAKER (SX-WNBL53) <Except 56EZ> PARTS LIST

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

| REF. NO | PART NO. | KANRI NO. | DESCRIPTION |
|---------|----------------|-----------|----------------------|
| 1 | 8A-NS5-016-010 | | PANEL, FR U |
| 2 | 8A-NS5-017-010 | | PLATE, NAME B |
| 3 | 8A-NS5-004-010 | | PANEL, DUCT |
| 4 | 8A-NS5-009-010 | | PROTECTOR, |
| 5 | 8A-NS5-012-010 | | GRILLE, FRAME ASSY U |
| 6 | 8A-NS5-015-010 | | BADGE, AIWA S35 |
| 7 | 8Z-NSY-003-010 | | CORD, BUSH |
| 8 | 88-NS3-029-010 | | CORD, BUSH L |
| 9 | 88-NS5-610-010 | | CORD, SPKR |
| 10 | 88-NS5-611-010 | | CORD, SPKR B/L |
| 11 | 8Z-NSY-608-010 | | SPKR, CERAMIC ASSY |
| 12 | 8A-NS8-604-010 | | SPKR, M 100 |
| 13 | 8Z-NS7-602-010 | | SPKR, W 160 |



アイワ株式会社 〒110-8710 東京都台東区池之端1-2-11 ☎03(3827)3111 (代表)
AIWA CO.,LTD. 2-11, IKENOHATA 1-CHOME, TAITO-KU, TOKYO 110, JAPAN TEL:03 (3827) 3111

www.DataSheet4U.com